

充电式风扇 UF 18DSL

警告！

- 请勿将风扇暴露于雨中。请保存在室内。
- 请使用厂家指定的 AC 适配器和电池。
- 请当心触电。
- 不使用时或检查和维护期间请务必关闭风扇上的开关，并从风扇上取出电池或卸下 AC 适配器。
- 请勿在可能会起火或爆炸的地方使用。
- 如果发现异常请立即停止使用。
- 请勿震动或拆卸风扇。

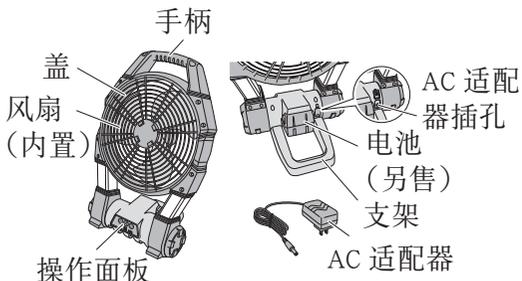


图 1

注意！

- 请在室内稳定的地方使用风扇。
- 请阅读电池和充电器附带的使用说明书。
- 请勿拉扯 AC 适配器电线。将其从电源插座上拔下时请务必抓住 AC 适配器。请勿使用损坏的 AC 适配器。
- 请将风扇保存在远离高温和小孩拿不到的地方。
- 请勿将手指或任何其它物体插入防护装置。
- 并确认尼龙头未碰上您的头发、衣服等。
- 请勿让风扇接触汽油、稀释剂等。
- 本风扇并非供身体、感官、心理能力较差或缺乏经验和知识的人员（包括小孩）使用，除非他们得到了对其安全负责的人员关于本风扇使用的监督或指导。
- 应监督小孩，确保他们不玩弄本风扇。

符号

警告！

如下所示的符号用于本机。使用前请务必理解其含意。

	阅读所有安全警告和所有指示。
--	----------------

规格

风速 [高/低] 模式	160 / 135 m/min
尺寸 (电池除外)	328 mm (宽度) × 250 mm (长度) × 528 mm (高度)
重量 (电池除外)	2.0 kg
AC 适配器	输入: (100 V - 240 V) ~ 1.5 A 最大 输出: 12 V 1.5 A

工作时间 (约): 使用充满电的电池

电池	BSL1840	BSL1830	BSL1820	BSL1815	BSL1440	BSL1430	BSL1420	BSL1415
[高/低]模式 (小时)	4.5 / 7.5	3.5 / 5.5	2.5 / 4.0	2.0 / 3.0	3.5 / 6.0	2.5 / 4.5	2.0 / 3.0	1.5 / 2.5

使用方法

- 使用 AC 适配器**
将 AC 适配器插头插入风扇上的适配器插孔，然后将其插入电源插座。
- 使用电池**
沿着方向 A 插入电池直至发出咔嗒的响声。要拆下时，请边压下止动销边沿着方向 B 取出电池。(图 2)
- 风扇角度调节**
可在 45 度的范围内调节支架的角。
- 运转 (图 3)**
按下开关，开始运转。按下风量按钮，在高和低之间改变风的强度。相应指示灯会点亮。按下定时器设置按钮，点亮相应的指示灯，使得在 1、2 或 4 小时后停止运转。

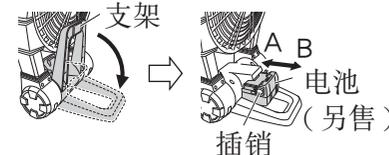


图 2


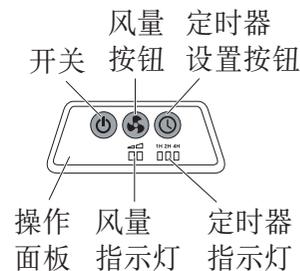


图 3

注意！

有时可能因防止蓄电池过放电功能而不能开灯。在这种情况下，请更换蓄电池或给蓄电池充电。

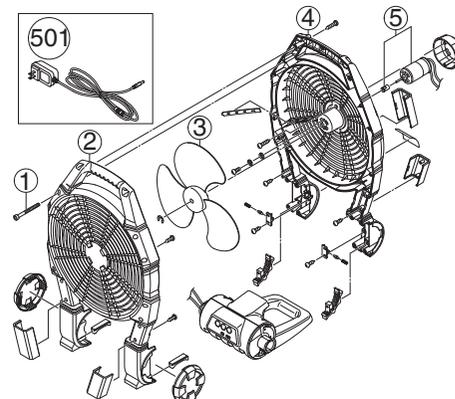

项目号	零件名称	数量
1	自攻螺丝	8
2	风扇前壳	1
3	风扇叶片	1
4	风扇后壳	1
5	直流电机	1
501	AC 适配器	1

Handling instructions

Cordless Fan UF 18DSL

⚠ WARNING

- Do not expose the fan to rain. Store indoors.
- Use AC adapters and batteries specified by the manufacturer.
- Be careful of electrical shock.
- When not in use or during inspection and maintenance, be sure to turn the switch OFF on the unit, and remove the battery or AC adapter from it.
- Do not use in locations where there is a risk of fire or explosions.
- Cease use immediately if an abnormality is detected.
- Do not shock or disassemble the fan.

CAUTION

- Use the fan indoors in a stable location.
- Read the instruction manuals supplied with the battery and recharger.
- Do not pull the AC adapter cord. Make sure you grip the AC adapter when unplugging it from a power socket. Do not use damaged AC adapters.
- Store the fan in locations away from high temperatures and out of the reach of children.
- Do not insert fingers or any other object inside the guard.
- Also make sure it does not come into contact with your hair, clothes, etc.
- Do not allow the fan to contact gasoline, thinner etc.
- This fan is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the fan by a person responsible for their safety.
- Children should be supervised to ensure that do not play with the fan.

SYMBOL

⚠ WARNING

The following show symbols used for the machine. Be sure that you understand their meaning before use.

	Read all safety warnings and all instructions.
--	--

SPECIFICATIONS

Wind speed	[High/Low] modes	160 / 135 m/min
Dimensions (without battery)		328 mm (width) × 250 mm (length) × 528 mm (height)
Weight (without battery)		2.0 kg
AC adapter		INPUT: (100 V - 240 V) ~ 1.5 A max. OUTPUT: 12 V 1.5 A

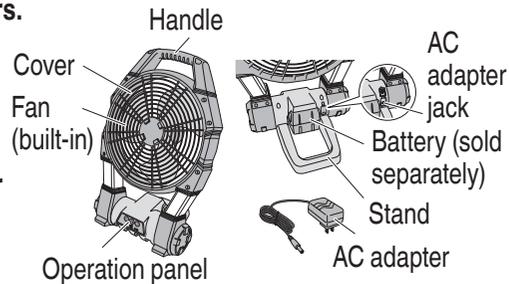




Fig. 1

Operating time (Approx.): Using full charged Battery

Battery	BSL1840	BSL1830	BSL1820	BSL1815	BSL1440	BSL1430	BSL1420	BSL1415
[High/Low] mode (h)	4.5 / 7.5	3.5 / 5.5	2.5 / 4.0	2.0 / 3.0	3.5 / 6.0	2.5 / 4.5	2.0 / 3.0	1.5 / 2.5


HOW TO USE

1. Using the AC adapter
Plug the AC adapter jack into the adapter jack on the fan, and then plug it into a power socket.
2. Using the battery
Insert the battery in direction A until it clicks. To remove, extract it in direction B while holding down the latch. (Fig 2)
3. Fan angle adjustment
The angle of the stand can be adjusted within a range of 45 degrees.
4. Operations (Fig 3)
Press the switch to commence operations. Press the wind volume button to alternate the strength of the wind between high and low. The relevant indicator will be illuminated. Press the timer setting button to illuminate the relevant indicator so that operations are halted within one, two or four hours.

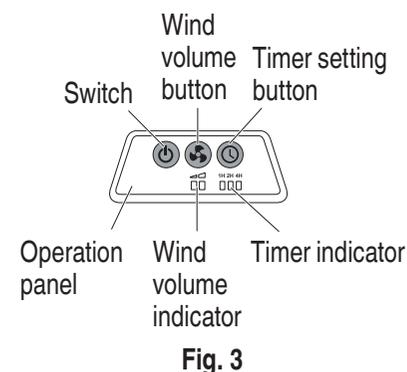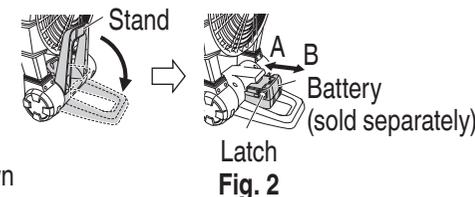

CAUTION

There are cases in which the function to prevent excessive discharge from the storage battery will halt operations. In this event, either replace the storage battery or recharge it.

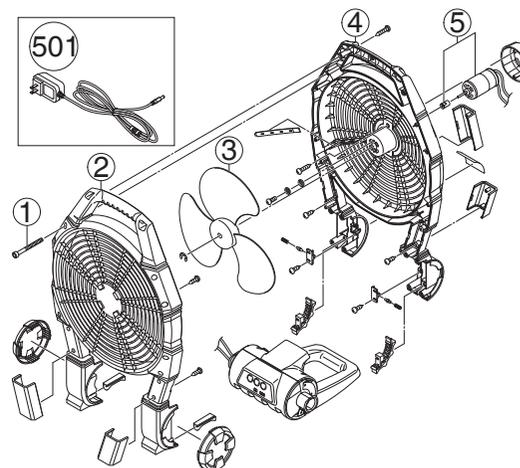

Item No.	Part Name	Q'TY
1	SELF TAPPING SCREW	8
2	FAN FRONT CABINET	1
3	FAN BLADE	1
4	FAN REAR CABINET	1
5	DC MOTOR	1
501	AC ADAPTER	1