
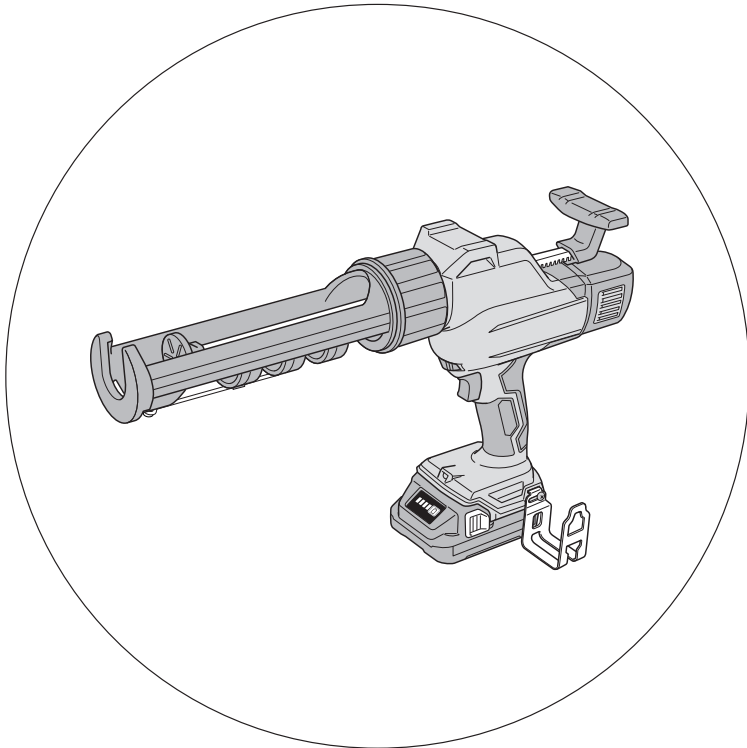
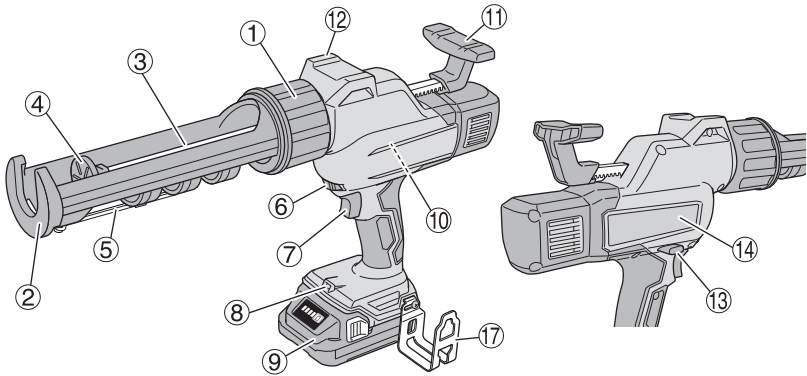
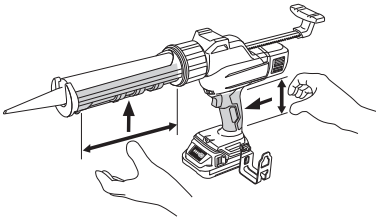
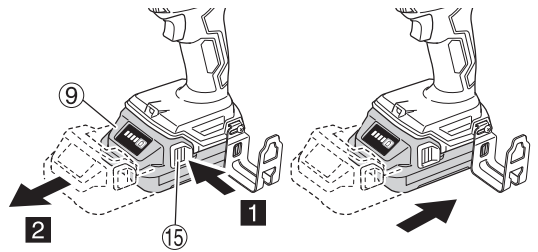
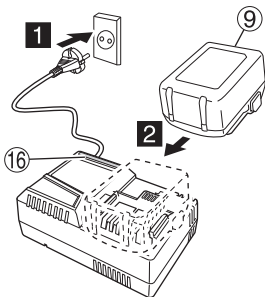






AC18DA

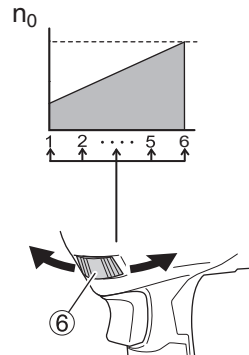


en Handling instructions

th คู่มือการใช้งาน


1**2****3****4****5**

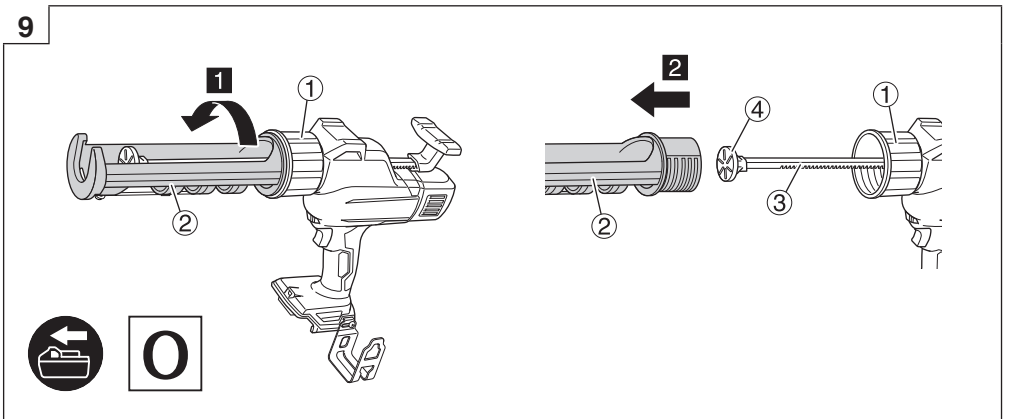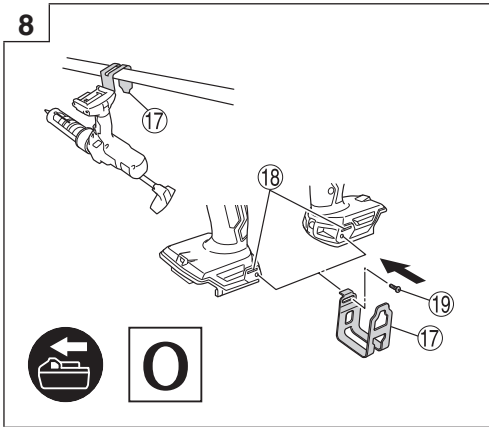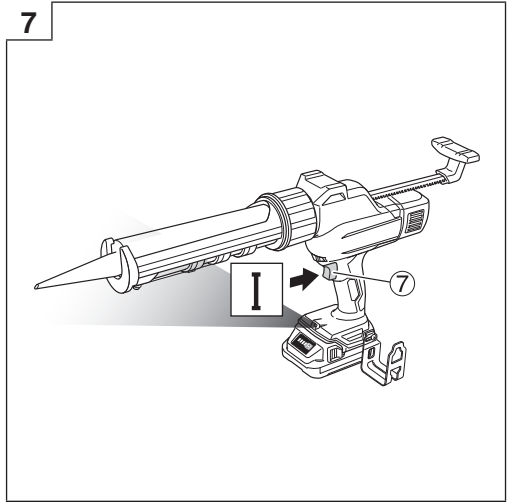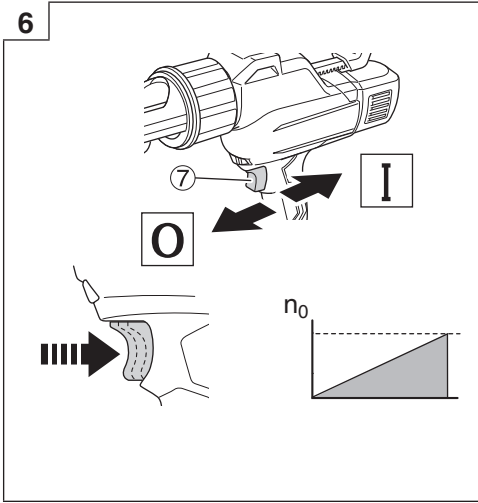


10

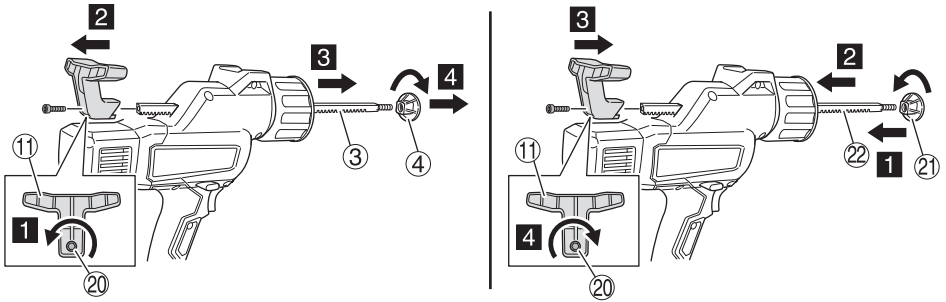


11

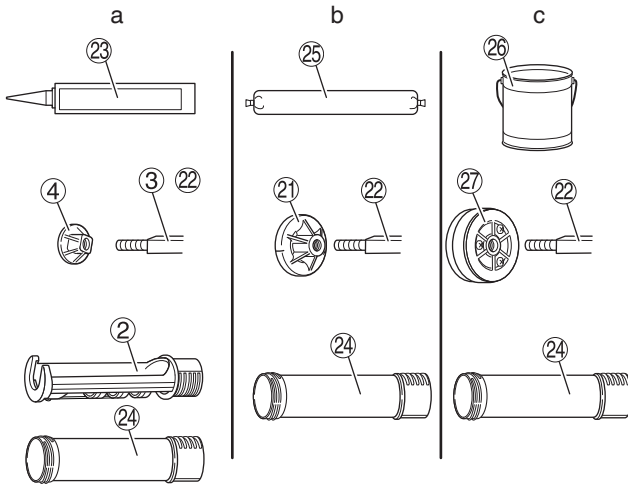




12

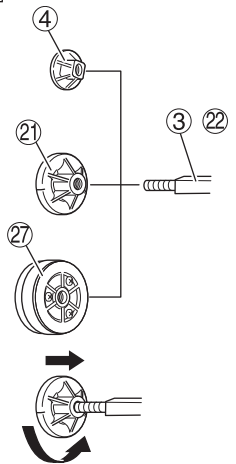





13

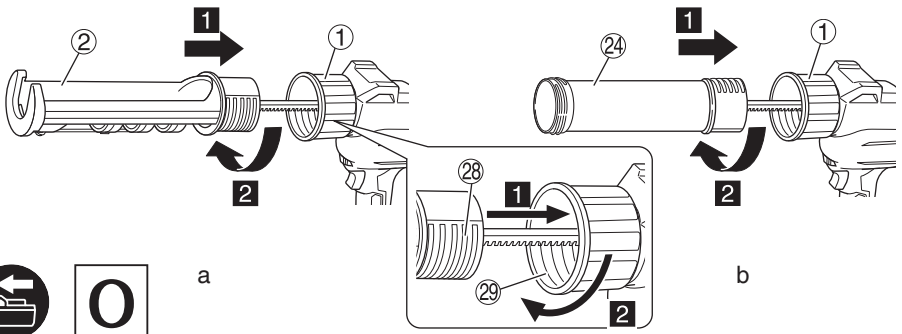



14

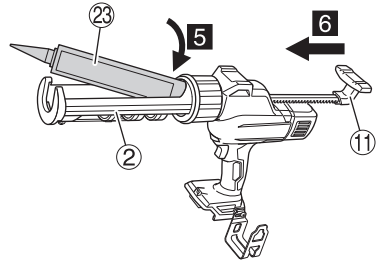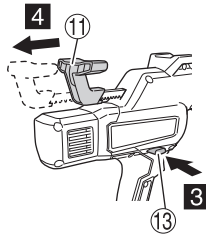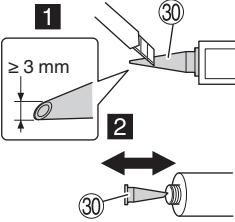


15

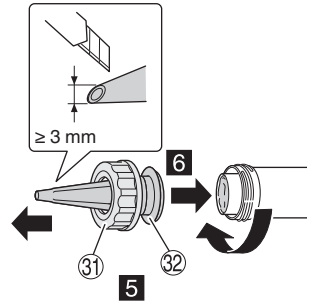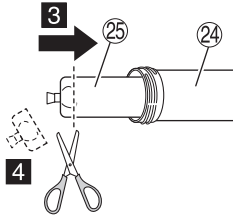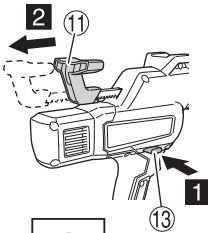


16

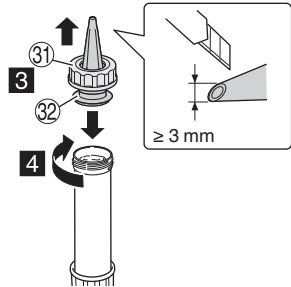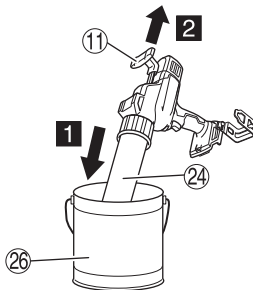


17

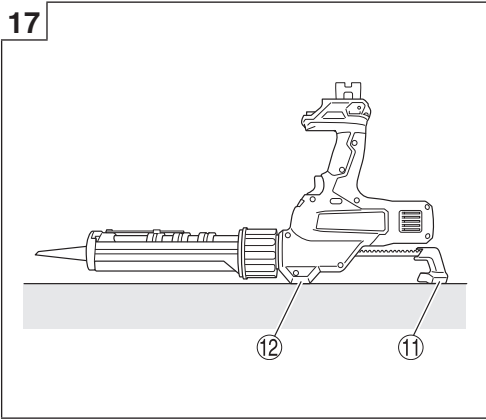


18

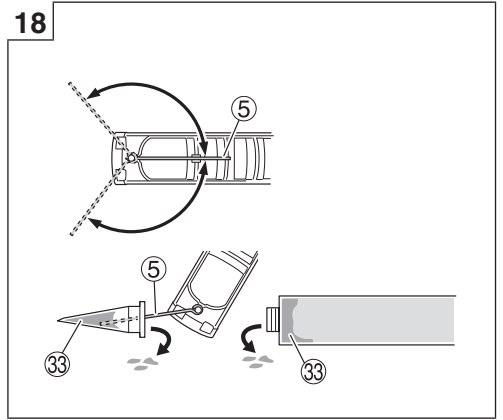


19

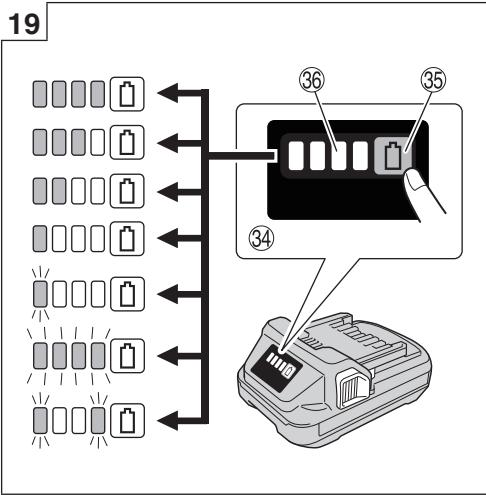


20

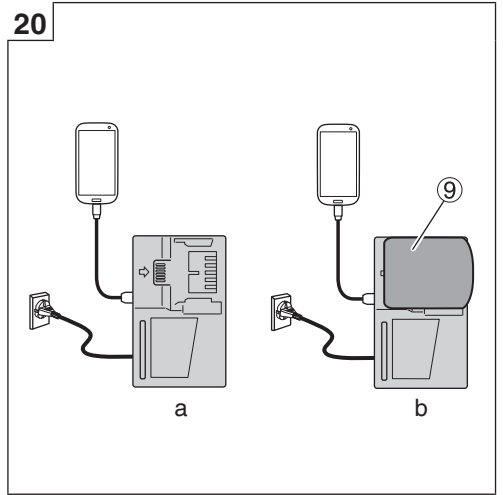

21

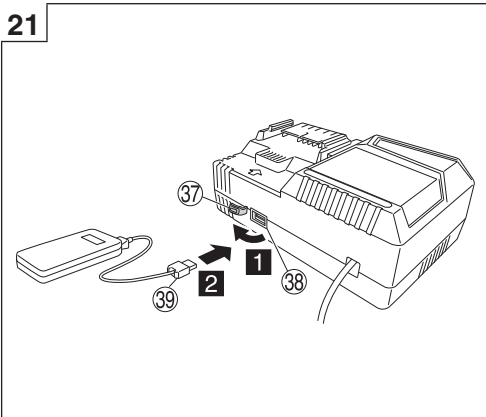

22

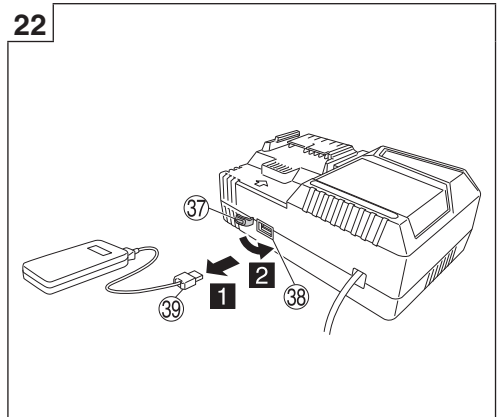

GENERAL POWER TOOL SAFETY WARNINGS

⚠ WARNING

Read all safety warnings, instructions, illustrations and specifications provided with this power tool.

Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

1) Work area safety

- a) **Keep work area clean and well lit.**
Cluttered or dark areas invite accidents.
- b) **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.**
Power tools create sparks which may ignite the dust or fumes.
- c) **Keep children and bystanders away while operating a power tool.**
Distractions can cause you to lose control.

2) Electrical safety

- a) **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.**
Unmodified plugs and matching outlets will reduce risk of electric shock.
- b) **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.**
There is an increased risk of electric shock if your body is earthed or grounded.
- c) **Do not expose power tools to rain or wet conditions.**
Water entering a power tool will increase the risk of electric shock.
- d) **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.**
Damaged or entangled cords increase the risk of electric shock.
- e) **When operating a power tool outdoors, use an extension cord suitable for outdoor use.**
Use of a cord suitable for outdoor use reduces the risk of electric shock.
- f) **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.**
Use of an RCD reduces the risk of electric shock.

3) Personal safety

- a) **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.**
A moment of inattention while operating power tools may result in serious personal injury.
- b) **Use personal protective equipment. Always wear eye protection.**
Protective equipment such as a dust mask, non-skid safety shoes, hard hat or hearing protection used for appropriate conditions will reduce personal injuries.

- c) **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.**

Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.

- d) **Remove any adjusting key or wrench before turning the power tool on.**

A wrench or a key left attached to a rotating part of the power tool may result in personal injury.

- e) **Do not overreach. Keep proper footing and balance at all times.**

This enables better control of the power tool in unexpected situations.

- f) **Dress properly. Do not wear loose clothing or jewellery. Keep your hair and clothing away from moving parts.**

Loose clothes, jewellery or long hair can be caught in moving parts.

- g) **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.**

Use of dust collection can reduce dust-related hazards.

- h) **Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles.**

A careless action can cause severe injury within a fraction of a second.

4) Power tool use and care

- a) **Do not force the power tool. Use the correct power tool for your application.**

The correct power tool will do the job better and safer at the rate for which it was designed.

- b) **Do not use the power tool if the switch does not turn it on and off.**

Any power tool that cannot be controlled with the switch is dangerous and must be repaired.

- c) **Disconnect the plug from the power source and/or remove the battery pack, if detachable, from the power tool before making any adjustments, changing accessories, or storing power tools.**

Such preventive safety measures reduce the risk of starting the power tool accidentally.

- d) **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.**

Power tools are dangerous in the hands of untrained users.

- e) **Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.**

Many accidents are caused by poorly maintained power tools.

- f) **Keep cutting tools sharp and clean.**

Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.

- g) **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.**

Use of the power tool for operations different from those intended could result in a hazardous situation.

- h) **Keep handles and grasping surfaces dry, clean and free from oil and grease.**

Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.

English

5) Battery tool use and care

- a) **Recharge only with the charger specified by the manufacturer.**

A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.

- b) **Use power tools only with specifically designated battery packs.**

Use of any other battery packs may create a risk of injury and fire.

- c) **When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.**

Shorting the battery terminals together may cause burns or a fire.

- d) **Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.**

Liquid ejected from the battery may cause irritation or burns.

- e) **Do not use a battery pack or tool that is damaged or modified.**

Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury.

- f) **Do not expose a battery pack or tool to fire or excessive temperature.**

Exposure to fire or temperature above 130°C may cause explosion.

- g) **Follow all charging instructions and do not charge the battery pack or tool outside the temperature range specified in the instructions.**

Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.

6) Service

- a) **Have your power tool serviced by a qualified repair person using only identical replacement parts.**

This will ensure that the safety of the power tool is maintained.

- b) **Never service damaged battery packs.**

Service of battery packs should only be performed by the manufacturer or authorized service providers.

PRECAUTION

Keep children and infirm persons away.

When not in use, tools should be stored out of reach of children and infirm persons.

CORDLESS CAULKING GUN SAFETY WARNINGS

1. During use, hold the tool body securely with both hands. (Fig. 2)
2. Do not put an unreasonable burden on the tool that causes the motor to lock, such as attempting to use hardened sealing material.
Remove hardened sealing material, as it may cause malfunction.
3. Before use, refer also to the directions on the packaging of the sealing material to ensure that you use it correctly.
4. Wear safety glasses while working.
5. Do not use in locations where inflammable materials such as lacquer, paint, benzene, thinner or gasoline are present.

6. If you notice that the unit is generating unusually high temperatures, operating poorly, or making abnormal noises, immediately stop using and shut off the power switch. Request an inspection and repair from the dealer where you purchased the unit or a HIKOKI Authorized Service Center.

Continuing to use while operating abnormally might cause injuries.

7. If the unit is mistakenly dropped or strikes another object, make a thorough check of the unit for cracks, breakage or deformation, etc.
Injuries might occur if the unit has cracks, breakage or deformation.

8. Never touch moving parts.

Never place your hands, fingers or other body parts near the tool's moving parts.

9. NEVER leave tool running unattended. Turn power off. Don't leave tool until it comes to a complete stop.
10. When operating the tool in high locations, make sure there is nobody below.
11. Never operate from an unstable footing, such as when on a ladder or step ladder.
Doing so may cause an injury.

12. Do not strike the tool with other objects; avoid strong impacts such as dropping the tool; and do not allow the tool to get wet.

Any one of these can damage the built-in precision parts and result in malfunction.

13. Do not expose directly your eye to the light by looking into the light.

If your eye is continuously exposed to the light, your eye will be hurt.

Wipe off any dirt or grime attached to the lens of the LED light with a soft cloth, being careful not to scratch the lens.

Scratches on the lens of the LED light can result in decreased brightness.

14. Precautions during transport

- Release the switch on the body of the machine and remove the battery.
- Carry the machine by the handle on its body.
- When transporting it via vehicle, take appropriate steps to prevent it from falling over or being damaged.

ADDITIONAL SAFETY WARNINGS

1. Always charge the battery at a temperature of 0°C–40°C. A temperature of less than 0°C will result in over charging which is dangerous. The battery cannot be charged at a temperature higher than 40°C.
The most suitable temperature for charging is that of 20°C–25°C.
2. Do not use the charger continuously.
When one charging is completed, leave the charger for about 15 minutes before the next charging of battery.
3. Do not allow foreign matter to enter the hole for connecting the rechargeable battery.
4. Never disassemble the rechargeable battery and charger.
5. Never short-circuit the rechargeable battery.
Shortcircuiting the battery will cause a great electric current and overheat. It results in burn or damage to the battery.
6. Do not dispose of the battery in fire. If the battery is burnt, it may explode.
7. Bring the battery to the shop from which it was purchased as soon as the post-charging battery life becomes too short for practical use. Do not dispose of the exhausted battery.

8. Do not insert object into the air ventilation slots of the charger. Inserting metal objects or inflammables into the charger air ventilation slots will result in electrical shock hazard or damaged charger.
 9. When using this unit continuously, the unit may overheat, leading to damage in the motor and switch. Therefore, whenever the housing becomes hot, give the tool a break for a while.
 10. Make sure that the battery is installed firmly. If it is at all loose it could come off and cause an accident.
 11. Do not use the product if the tool or the battery terminals (battery mount) are deformed.
Installing the battery could cause a short circuit that could result in smoke emission or ignition.
 12. Keep the tool's terminals (battery mount) free of swarf and dust.
 - Prior to use, make sure that swarf and dust have not collected in the area of the terminals.
 - During use, try to avoid swarf or dust on the tool from falling on the battery.
 - When suspending operation or after use, do not leave the tool in an area where it may be exposed to falling swarf or dust.
Doing so could cause a short circuit that could result in smoke emission or ignition.
 13. Always use the tool and battery at temperatures between -5°C and 40°C.
6. Do not put or subject the battery to high temperatures or high pressure such as into a microwave oven, dryer, or high pressure container.
 7. Keep away from fire immediately when leakage or foul odor are detected.
 8. Do not use in a location where strong static electricity generates.
 9. If there is battery leakage, foul odor, heat generated, discolored or deformed, or in any way appears abnormal during use, recharging or storage, immediately remove it from the equipment or battery charger, and stop use.
 10. Do not immerse the battery or allow any fluids to flow inside. Conductive liquid ingress, such as water, can cause damage resulting in fire or explosion. Store your battery in a cool, dry place, away from combustible and flammable items. Corrosive gas atmospheres must be avoided.

CAUTION

1. If liquid leaking from the battery gets into your eyes, do not rub your eyes and wash them well with fresh clean water such as tap water and contact a doctor immediately.
If left untreated, the liquid may cause eye-problems.
2. If liquid leaks onto your skin or clothes, wash well with clean water such as tap water immediately.
There is a possibility that this can cause skin irritation.
3. If you find rust, foul odor, overheating, discolor, deformation, and/or other irregularities when using the battery for the first time, do not use and return it to your supplier or vendor.

CAUTION ON LITHIUM-ION BATTERY

To extend the lifetime, the lithium-ion battery equips with the protection function to stop the output.

In the cases of 1 to 3 described below, when using this product, even if you are pulling the switch, the motor may stop. This is not the trouble but the result of protection function.

1. When the battery power remaining runs out, the motor stops.
In such a case, charge it up immediately.
2. If the tool is overloaded, the motor may stop. In this case, release the switch of tool and eliminate causes of overloading. After that, you can use it again.
3. If the battery is overheated under overload work, the battery power may stop.
In this case, stop using the battery and let the battery cool. After that, you can use it again.

Furthermore, please heed the following warning and caution.

WARNING

In order to prevent any battery leakage, heat generation, smoke emission, explosion and ignition beforehand, please be sure to heed the following precautions.

1. Make sure that swarf and dust do not collect on the battery.
 - During work make sure that swarf and dust do not fall on the battery.
 - Make sure that any swarf and dust falling on the power tool during work do not collect on the battery.
 - Do not store an unused battery in a location exposed to swarf and dust.
 - Before storing a battery, remove any swarf and dust that may adhere to it and do not store it together with metal parts (screws, nails, etc.).
2. Do not pierce battery with a sharp object such as a nail, strike with a hammer, step on, throw or subject the battery to severe physical shock.
3. Do not use an apparently damaged or deformed battery.
4. Do not use the battery for a purpose other than those specified.
5. If the battery charging fails to complete even when a specified recharging time has elapsed, immediately stop further recharging.

WARNING

If a conductive foreign matter enters in the terminal of lithium ion battery, the battery may be shorted, causing fire. When storing the lithium ion battery, obey surely the rules of following contents.

- Do not place conductive debris, nail and wires such as iron wire and copper wire in the storage case.
- To prevent shorting from occurring, load the battery in the tool or insert securely the battery cover for storing until the ventilator is not seen.


REGARDING LITHIUM-ION BATTERY TRANSPORTATION

When transporting a lithium-ion battery, please observe the following precautions.

WARNING

Notify the transporting company that a package contains a lithium-ion battery, inform the company of its power output and follow the instructions of the transportation company when arranging transport.

- Lithium-ion batteries that exceed a power output of 100 Wh are considered to be in the freight classification of Dangerous Goods and will require special application procedures.
- For transportation abroad, you must comply with international law and the rules and regulations of the destination country.

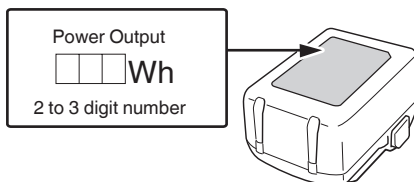

English

USB DEVICE CONNECTION PRECAUTIONS (UC18YSL3)

When an unexpected problem occurs, the data in a USB device connected to this product may be corrupted or lost. Always make sure to back up any data contained in the USB device prior to use with this product.

Please be aware that our company accepts absolutely no responsibility for any data stored in a USB device that is corrupted or lost, nor for any damage that may occur to a connected device.

WARNING

- Prior to use, check the connecting USB cable for any defect or damage.
Using a defective or damaged USB cable can cause smoke emission or ignition.
- When the product is not being used, cover the USB port with the rubber cover.
Buildup of dust etc. in the USB port can cause smoke emission or ignition.

NOTE

- There may be an occasional pause during USB recharging.
- When a USB device is not being charged, remove the USB device from the charger.
Failure to do so may not only reduce the battery life of a USB device, but may also result in unexpected accidents.
- It may not be possible to charge some USB devices, depending on the type of device.

NAMES OF PARTS (Fig. 1–Fig. 22)








①	Holder nut	⑩	Charge indicator lamp
②	300 ml holder	⑪	Hook
③	Rack (push-out rod) (300 ml holder)	⑫	Groove
④	Piston (for cartridges)	⑬	Screw
⑤	Pin	⑭	Screw (back part of rack handle)
⑥	Dial	⑮	Piston (for sausages) (sold separately)
⑦	Trigger switch	⑯	Rack (push-out rod) (600 ml holder) (sold separately)
⑧	LED light	⑰	Cartridges
⑨	Battery	⑱	600 ml holder (sold separately)
⑩	Motor	⑲	Sausages
⑪	Rack handle	⑳	Buckets
⑫	Protrusion (top of body)	㉑	Piston (for buckets) (sold separately)
⑬	Release button	㉒	Protrusion of holder
⑭	Name plate	㉓	Groove
⑮	Latch	㉔	Nozzle

⑳	Holder cap	㉖	Remaining battery indicator lamp
㉑	Nozzle (sold separately)	㉗	Rubber cover
㉒	Hardened sealing material	㉘	USB port
㉓	Display panel	㉙	USB cable
㉔	Remaining battery indicator switch		




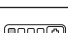


SYMBOLS

WARNING

The following show symbols used for the machine. Be sure that you understand their meaning before use.

	AC18DA: Cordless Caulking Gun
	To reduce the risk of injury, user must read instruction manual.
	Direct current
V	Rated voltage
n_0	No-load speed
mm/s	millimeters per second
	Disconnect the battery
	Switching ON
	Switching OFF
	Warning

Battery

	Lights ; The battery remaining power is over 75%
	Lights ; The battery remaining power is 50%–75%.
	Lights ; The battery remaining power is 25%–50%.
	Lights ; The battery remaining power is less than 25%
	Blinks ; The battery remaining power is nearly empty. Recharge the battery soonest possible.
	Blinks ; Output suspended due to high temperature. Remove the battery from the tool and allow it to fully cool down.



Blinks ;
Output suspended due to failure or malfunction.
The problem may be the battery so please
contact your dealer.

CHARGING

Before using the power tool, charge the battery as follows.

1. **Connect the charger's power cord to the receptacle.**
When connecting the plug of the charger to a receptacle, the charge indicator lamp will blink in red (At 1- second intervals).
 2. **Insert the battery into the charger.**
Firmly insert the battery into the charger as shown in **Fig. 4** (on page 2).
 3. **Charging**
When inserting a battery in the charger, the charge indicator lamp will blink in blue.
When the battery becomes fully recharged, the charge indicator lamp will light up in green. (See **Table 1**)
- (1) Charge indicator lamp indication
The indications of the charge indicator lamp will be as shown in **Table 1**, according to the condition of the charger or the rechargeable battery.

STANDARD ACCESSORIES

In addition to the main unit (1 unit), the package contains the accessories listed on page 27.

Standard accessories are subject to change without notice.

APPLICATIONS

- Applying in ducts, kitchens and bathrooms, exterior walls, etc.
- Filling joints of exterior walls or tile
- Reinforcing airtightness and waterproofing
- Joining and attaching plate glass, and repairing aquariums

SPECIFICATIONS

1. Power tool

Model	AC18DA
Voltage	18 V
Dispensing speed	0–14 mm/s
Maximum dispensing force	3000 N
Battery available for this tool*	Multi volt battery, BSL18 Series
Weight	2.3 kg (BSL1820M)

* Existing batteries (BSL3660/3620/3626, etc.) cannot be used with this tool.

NOTE

Due to HiKOKI's continuing program of research and development, the specifications herein are subject to change without prior notice.

2. Battery (sold separately)

Model	BSL1820M
Voltage	18 V
Battery capacity	2.0 Ah
Available cordless products*	Multi volt series, 18 V product
Available charger	Sliding charger for lithium ion batteries

* Please see our general catalogue for details.

3. Charger (sold separately)

Model	UC18YSL3
Charging voltage	14.4 V–18 V
Weight	0.6 kg

Table 1

Indications of the charge indicator lamp				
Charge indicator lamp (RED / BLUE / GREEN / PURPLE)	Before charging	Blinks (RED)	Lights for 0.5 seconds. Does not light for 0.5 seconds. (off for 0.5 seconds)	Plugged into power source
	While charging	Blinks (BLUE)	Lights for 0.5 seconds. Does not light for 1 second. (off for 1 second)	Battery capacity at less than 50%
		Blinks (BLUE)	Lights for 1 second. Does not light for 0.5 seconds. (off for 0.5 seconds)	Battery capacity at less than 80%
		Lights (BLUE)	Lights continuously	Battery capacity at more than 80%
	Charging complete	Lights (GREEN)	Lights continuously (Continuous buzzer sound: about 6 seconds)	
	Overheat standby	Blinks (RED)	Lights for 0.3 seconds. Does not light for 0.3 seconds. (off for 0.3 seconds)	Battery overheated. Unable to charge. (Charging will commence when battery cools)
	Charging impossible	Flickers (PURPLE)	Lights for 0.1 seconds. Does not light for 0.1 seconds. (Intermittent buzzer sound: about 2 seconds)	Malfunction in the battery or the charger

(2) Regarding the temperatures and charging time of the rechargeable battery
The temperatures and charging time will become as shown in **Table 2**.

Table 2

Charger		UC18YSL3					
Battery	Type of battery	Li-ion					
	Temperatures at which the battery can be recharged	0°C–50°C					
	Charging voltage	V	14.4		18		
	Charging time, approx. (At 20°C)	min	BSL14xx series		BSL18xx series		Multi volt series
			(4 cells)	(8 cells)	(5 cells)	(10 cells)	(10 cells)
		BSL1415S : 15 BSL1415 : 15 BSL1415X : 15 BSL1420 : 20 BSL1425 : 25 BSL1430C : 30	BSL1430 : 20 BSL1440 : 26 BSL1450 : 32 BSL1460 : 38	BSL1815S : 15 BSL1815 : 15 BSL1815X : 15 BSL1820 : 20 BSL1820M : 20 BSL1825 : 25 BSL1830C : 30 BSL1850C : 32	BSL1830 : 20 BSL1840 : 26 BSL1850 : 32 BSL1860 : 38	BSL36A18 : 32 BSL36B18 : 52	
USB	Charging voltage	V	5				
	Charging current	A	2				

NOTE

The recharging time may vary according to the ambient temperature and power source voltage.

4. Disconnect the charger's power cord from the receptacle.

5. Hold the charger firmly and pull out the battery.

NOTE

Be sure to pull out the battery from the charger after use, and then keep it.

Regarding electric discharge in case of new batteries, etc.

As the internal chemical substance of new batteries and batteries that have not been used for an extended period is not activated, the electric discharge might be low when using them the first and second time. This is a temporary phenomenon, and normal time required for recharging will be restored by recharging the batteries 2–3 times.

How to make the batteries perform longer.

- (1) Recharge the batteries before they become completely exhausted.

When you feel that the power of the tool becomes weaker, stop using the tool and recharge its battery. If you continue to use the tool and exhaust the electric current, the battery may be damaged and its life will become shorter.

- (2) Avoid recharging at high temperatures.

A rechargeable battery will be hot immediately after use. If such a battery is recharged immediately after use, its internal chemical substance will deteriorate, and the battery life will be shortened. Leave the battery and recharge it after it has cooled for a while.

CAUTION

- If the battery is charged while it is heated because it has been left for a long time in a location subject to direct sunlight or because the battery has just been used, the charge indicator lamp of the charger lights for 0.3 seconds, does not light for 0.3 seconds (off for 0.3 seconds). In such a case, first let the battery cool, then start charging.
- When the charge indicator lamp flickers (at 0.2-second intervals), check for and take out any foreign objects in the charger's battery connector. If there are no foreign objects, it is probable that the battery or charger is malfunctioning. Take it to your authorized Service Center.

How to recharge USB device	21	6
When charging of USB device is completed	22	6
Selecting accessories	—	28

- *1 Adjusting operating speed

This can be performed even while working. Adjust the speed together with the amount that the switch is pulled.

CAUTION

If the diameter of the cross section of the nozzle is 3 mm or smaller, or if there is an attempt to abruptly dispense at high speed while under low-temperature conditions, the sealing material may leak out on the piston side. Begin at low speed, and gradually increase speed to suit the hardness of the sealing material.

- *2 Switch operation

Immediately after the switch is released, the piston retracts slightly to prevent sealing material remaining at the end of the nozzle from dripping.

- *3 How to use the Hook

The hook can be used to hang up the unit temporarily during operations.

CAUTION

The hook should never be used to hang the unit on your person.

When using the hook, check to make sure that the main unit will not slip and fall, or become unstable by the wind, etc.

Never hang the unit from your belt or trousers as this could cause accidents.

- *4 Exchanging the rack (push-out rod)

NOTE

Install the rack (push-out rod) with its teeth facing downward.

- *5 Types of pistons

There are 3 types of pistons for different sealing materials.

a: Cartridges

b: Sausages

c: Buckets

Choose a holder and piston according to the sealing material.

- *6 Exchanging the piston

The piston can be detached from the rack (push-out rod) by twisting the piston counter-clockwise. To attach it, twist it in the opposite direction to screw it in. Exchanging it does not require any tools.

- *7 Using cartridges, sausages, and buckets

CAUTION

Do not make the diameter of the cut cross-section of the nozzle 3 mm or smaller. Doing so may cause leakage of sealing material on the piston side or damage to the holder or holder cap.

- *8 Temporarily setting down the tool while working

NOTE

The tool can be temporarily set down upside-down while working. When doing so, set it down on a stable surface.

- *9 Removing hardened sealing material

Use the pin included with the 300 ml holder to scrape out and remove the hardened portion of the sealing material inside the nozzle and cartridge, then return the pin to the holder.

NOTE

Be careful not to scratch the inside of the container with the pin.

MOUNTING AND OPERATION

Action	Figure	Page
Removing and inserting the battery	3	2
Charging	4	2
Adjusting operating speed*1	5	2
Switch operation*2	6	3
How to use the LED light	7	3
How to use the hook*3	8	3
Removing the holder	9	3
Exchanging the rack (push-out rod)*4	10	4
Types of pistons*5	11	4
Exchanging the piston*6	12	4
Attaching the 300 ml holder	13-a	4
Attaching the 600 ml holder	13-b	4
Using cartridges*7	14	5
Using sausages*7	15	5
Using buckets*7	16	5
Temporarily setting down the tool while working*8	17	6
Removing hardened sealing material*9	18	6
Remaining battery indicator	19	6
Charging a USB device from a electrical outlet	20-a	6
Charging a USB device and battery from a electrical outlet	20-b	6

English

LED LIGHT WARNING SIGNALS

If any of the safeguard functions is activated during operation of this product, the LED light will blink as notification while the switch is pulled, as described below. If any of the safeguard functions are triggered during operation, the LED light will blink as described in **Table 3**. When any of the safeguard functions are triggered, immediately remove your finger from the switch and follow the instructions described under corrective action.

Table 3

Safeguard Function	LED Light Display	Corrective Action
Overload Protection	On 0.1 second/ off 0.5 second ■ ■ ■	Remove the cause of the overload.

MAINTENANCE AND INSPECTION

WARNING

Be sure to turn off the switch and remove the battery before maintenance and inspection.

1. Inspecting the mounting screws

Regularly inspect all mounting screws and ensure that they are properly tightened. Should any of the screws be loose, retighten them immediately. Failure to do so could result in serious hazard.

2. Maintenance of the motor

The motor unit winding is the very "heart" of the power tool.

Exercise due care to ensure the winding does not become damaged and/or wet with oil or water.

3. Inspection of terminals (tool and battery)

Check to make sure that swarf and dust have not collected on the terminals.

On occasion check prior, during and after operation.

CAUTION

Remove any swarf or dust which may have collected on the terminals.

Failure to do so may result in malfunction.

4. Cleaning on the outside

When the power tool is stained, wipe with a soft dry cloth or a cloth moistened with soapy water. Do not use chloric solvents, gasoline or paint thinner, for they melt plastics.

If the nose grill is blocked with debris, the power tool will work less efficiently.

Clean it gently when necessary with a soft brush.

5. Storage

Store the power tool and the battery in a place in which the temperature is less than 40°C and out of reach of children.

NOTE

Storing lithium-ion batteries.

Make sure the lithium-ion batteries have been fully charged before storing them.

Prolonged storage (3 months or more) of batteries with a low charge may result in performance deterioration, significantly reducing battery usage time or rendering the batteries incapable of holding a charge.

However, significantly reduced battery usage time may be recovered by repeatedly charging and using the batteries two to five times.

If the battery usage time is extremely short despite repeated charging and use, consider the batteries dead and purchase new batteries.

CAUTION

In the operation and maintenance of power tools, the safety regulations and standards prescribed in each country must be observed.

SELECTING ACCESSORIES

The accessories of this machine are listed on page 28.

For details regarding each bit type, please contact the HiKOKI Authorized Service Center.

Important notice on the batteries for the HiKOKI cordless power tools

Please always use one of our designated genuine batteries. We cannot guarantee the safety and performance of our cordless power tool when used with batteries other than these designated by us, or when the battery is disassembled and modified (such as disassembly and replacement of cells or other internal parts).

NOTE

Due to HiKOKI's continuing program of research and development, the specifications herein are subject to change without prior notice.

TROUBLESHOOTING

Use the inspections in the table below if the tool does not operate normally. If this does not remedy the problem, consult your dealer or the HiKOKI Authorized Service Center.

1. Power tool

Symptom	Possible cause	Remedy
Tool doesn't run	No remaining battery power	Charge the battery.
Tool suddenly stopped	The battery is overheated.	Let the battery cool down.
Battery cannot be installed	Attempting to install a battery other than that specified for the tool.	Please install batteries that are multi volt or BSL18xx series.

2. Charger

Symptom	Possible cause	Remedy
The charge indicator lamp rapidly flickers purple, and battery charging doesn't begin.	The battery is not inserted all the way.	Insert the battery firmly.
	There is foreign matter in the battery terminal or where the battery is attached.	Remove the foreign matter.
The charge indicator lamp blinks red, and battery charging doesn't begin.	The battery is not inserted all the way.	Insert the battery firmly.
	The battery is overheated.	If left alone, the battery will automatically begin charging if its temperature decreases, but this may reduce battery life. It is recommended that the battery be cooled in a well-ventilated location away from direct sunlight before charging it.
Battery usage time is short even though the battery is fully charged.	The battery's life is depleted.	Replace the battery with a new one.
The battery takes a long time to charge.	The temperature of the battery, the charger, or the surrounding environment is extremely low.	Charge the battery indoors or in another warmer environment.
	The charger's vents are blocked, causing its internal components to overheat.	Avoid blocking the vents.
	The cooling fan is not running.	Contact a HiKOKI Authorized Service Center for repairs.
The USB power lamp has switched off and the USB device has stopped charging.	The battery's capacity has become low.	Replace the battery with one that has capacity remaining.
		Plug the charger's power plug into an electric socket.
USB power lamp does not switch off even though the USB device has finished charging.	The USB power lamp lights up green to indicate that USB charging is possible.	This is not a malfunction.
It is unclear what the charging status of a USB device is, or whether its charging is complete.	The USB power lamp does not switch off even when charging is complete.	Examine the USB device that is charging to confirm its charging status.
Charging of a USB device pauses midway.	The charger was plugged into an electrical socket while the USB device was being charged using the battery as the power source.	This is not a malfunction. The charger pauses USB charging for about 5 seconds when it is differentiating between power sources.
	A battery was inserted into the charger while the USB device was being charged using a power socket as the power source.	
Charging of the USB device pauses midway when the battery and the USB device are being charged at the same time.	The battery has become fully charged.	This is not a malfunction. The charger pauses USB charging for about 5 seconds while it checks whether the battery has successfully completed charging.
Charging of the USB device doesn't start when the battery and the USB device are being charged at the same time.	The remaining battery capacity is extremely low.	This is not a malfunction. When the battery capacity reaches a certain level, USB charging automatically begins.

กฎความปลอดภัยโดยทั่วไป

คำเตือน

โปรดอ่านคำเตือนเพื่อความปลอดภัย คำแนะนำ ภาพประกอบและรายละเอียดเฉพาะที่จัดเตรียมไว้สำหรับเครื่องมือไฟฟ้า

การไม่ปฏิบัติตามคำแนะนำทั้งหมดในรายการที่แสดงด้านล่างอาจส่งผลให้เกิดไฟฟ้าช็อต เผลิงไหม้ และ/หรือการบาดเจ็บร้ายแรงได้

บันทึกคำเตือนและคำแนะนำไว้สำหรับใช้อ้างอิงในอนาคต

คำว่า “เครื่องมือกล” ในคำเตือนนี้ หมายถึงเครื่องมือกลที่ใช้ร่วมกับปลั๊กไฟฟ้า (มีสายไฟ) หรือใช้งานกับแบตเตอรี่ (ไร้สาย)

1) พื้นที่ทำงานอย่างปลอดภัย

a) รักษาพื้นที่ทำงานให้สะอาดและมีแสงสว่างเพียงพอ

สิ่งของที่เกาะหรือพื้นที่มีคราบไขมันหรือขี้ผึ้ง

b) อย่าใช้เครื่องมือไฟฟ้าในบรรยากาศที่อาจระเบิด เช่น มีของเหลวไวไฟ แก๊สหรือฝุ่น

เครื่องมือไฟฟ้าอาจเกิดประกายไฟที่อาจทำให้ฝุ่นและไอติดไฟได้

c) ใช้งานเครื่องมือไฟฟ้าให้ไกลจากเด็กและคนเฝ้าชม

คนที่วอกแวกทำให้คุณขาดสมาธิในการทำงานได้

2) ความปลอดภัยทางไฟฟ้า

a) ปลั๊กของเครื่องมือไฟฟ้าต้องเหมาะกับเต้าเสียบ อย่าดัดแปลงปลั๊ก อย่าใช้ปลั๊กของตัวปรับแรงดันไฟฟ้ากับเครื่องมือไฟฟ้าชนิดที่ต่อลงดิน

ปลั๊กกับเต้าเสียบที่ไม่พอดีกันอาจทำให้คุณถูกไฟฟ้าดูด

b) อย่าให้ตัวคุณสัมผัสกับพื้นผิวที่ต่อลงดิน เช่น ท่อโลหะ เครื่องทำความร้อน เตอบ ตู้เย็น เป็นต้น

อาจถูกไฟฟ้าดูดถ้าร่างกายของคุณต้องจลจรลงดิน

c) อย่าให้เครื่องมือไฟฟ้าถูกน้ำ ฝุ่นหรือความเปียกชื้น

น้ำที่เข้าไปในเครื่องมือไฟฟ้าจะเพิ่มความเสี่ยงที่จะถูกไฟฟ้าดูด

d) อย่าใช้สายไฟฟ้าในทางอื่น อย่าใช้สายเพื่อหิ้ว ดึงหรือเสียบเครื่องมือไฟฟ้า ให้สายไฟอยู่ห่างจากความร้อน น้ำมัน ขอบแหลมคมหรือชิ้นส่วนที่เคลื่อนไหว

สายที่ชำรุดหรือตึงอาจทำให้คุณถูกไฟฟ้าดูดได้ง่าย

e) เมื่อใช้งานเครื่องมือไฟฟ้านอกอาคาร

ใช้สายพ่วงชนิดที่ใช้กับนอกอาคารเมื่อใช้สายที่เหมาะสมลดความเสี่ยงที่จะถูกไฟฟ้าดูด

f) ถ้าไม่สามารถหลีกเลี่ยงการใช้งานเครื่องมือกลในสถานที่ที่มีความชื้นได้ ให้ใช้อุปกรณ์ป้องกันไฟดูด (RCD) ในการป้องกัน ใช้อุปกรณ์ป้องกันไฟดูดเพื่อลดความเสี่ยงการเกิดไฟฟ้าช็อต

3) ความปลอดภัยส่วนบุคคล

a) ระวังตัว ดูลิ่งที่คุณกำลังทำ ใช้สามัญสำนึกเมื่อใช้เครื่องมือไฟฟ้า อย่าใช้เครื่องมือไฟฟ้าเมื่อคุณอ่อนเพลียหรือกินยา สุรา หรือยาเสพติด

การขาดสติชั่วขณะเมื่อใช้เครื่องมือไฟฟ้าอาจทำให้คุณบาดเจ็บสาหัส

b) ใช้อุปกรณ์ป้องกันส่วนบุคคล สวมแว่นตาป้องกันเสมอ

อุปกรณ์ป้องกันที่ใช้สำหรับสภาพที่เหมาะสมจะช่วยลดอุบัติเหตุต่อบุคคล เช่น หน้ากากกันฝุ่น รองเท้ากันลื่น หมวกแข็ง หรือเครื่องกันเสียง

c) ป้อนกันเครื่องจักรทำงานโดยไม่ตั้งใจ อย่าลืมหือสวิตช์อยู่ในตำแหน่งปิด ก่อนเสียบไฟและ/หรือต่อกับแบตเตอรี่ ก่อนการเก็บ หรือการเคลื่อนย้ายเครื่องมือ

เมื่อจับเครื่องมือไฟฟ้าเมื่อนิ้วอยู่ที่ตัวสวิตช์ หรือเมื่อเสียบปลั๊ก ขณะเปิดสวิตช์ไว้อาจทำให้เกิดอุบัติเหตุ

d) เอาสลับปรับแต่งหรือประแจออกก่อนเปิดสวิตช์ไฟฟ้า

สลักหรือประแจที่ติดกับส่วนหมุนของเครื่องมือไฟฟ้าอาจทำให้คุณบาดเจ็บได้

e) อย่าเอื้อมตัว ยืนให้มันและสมดุลตลอดเวลา

ทำให้ควบคุมเครื่องมือไฟฟ้าได้ดีขึ้นเมื่อมีเหตุที่ไม่คาดฝัน

f) แต่งตัวให้รัดกุม อย่าสวมเสื้อผ้าหลวมหรือใช้เครื่องประดับ ให้เส้นผมและเสื้อผ้าของคุณอยู่ห่างจากชิ้นส่วนที่เคลื่อนที่ได้

เสื้อผ้าหลวม เครื่องประดับหรือผมอาจถูกชิ้นส่วนหมุนรั้งเข้าไป

g) ถ้าออกแบบเครื่องมือไฟฟ้าไว้ให้ต่อกับชุดชุดฝุ่นหรือเศษวัสดุ ให้เชื่อมต่อและใช้งานอย่างถูกต้อง

ใช้เครื่องเก็บฝุ่นที่ถอดฝุ่นผงที่อันตราย

h) อย่าให้ความคุ่นชินจากการใช้งานอุปกรณ์บ่อยครั้งทำให้คุณชะล่าใจและละเลยกฎความปลอดภัยของเครื่องมือ

การใช้งานที่ขาดความระมัดระวังสามารถทำให้เกิดการบาดเจ็บสาหัสได้ภายในเสี้ยววินาที

4) การให้และบำรุงรักษาเครื่องมือไฟฟ้า

a) อย่าใช้เครื่องมือไฟฟ้าโดยฝืนกำลัง ใช้เครื่องมือที่ถูกดัดแปลง งานของคุณ

เครื่องมือไฟฟ้าที่ถูกดัดแปลงจะทำงานได้ดีกว่าและปลอดภัยกว่า ในอัตราตามที่ออกแบบไว้แล้ว

b) อย่าใช้เครื่องมือไฟฟ้าถ้าสวิตช์ปิดเปิดไม่ได้

เครื่องมือไฟฟ้าที่ควบคุมด้วยสวิตช์ไม่ได้จะมีอันตรายและต้องซ่อมเสีย

c) ถอดปลั๊กจากแหล่งจ่ายไฟฟ้าและ/หรือถอดแบตเตอรี่ออกจากเครื่องมือไฟฟ้า-หากถอดได้ ก่อนทำการปรับแต่งอุปกรณ์ใดๆ เปลี่ยนอุปกรณ์เสริม หรือจัดเก็บเครื่องมือไฟฟ้า

มาตรการป้องกันเช่นนี้จะลดความเสี่ยงของอุบัติเหตุที่ เครื่องมือไฟฟ้าจะเริ่มทำงานโดยไม่ได้ตั้งใจ

d) เก็บเครื่องมือไฟฟ้าให้ห่างจากเด็ก และอย่าอมให้ผู้ที่ไม่เคยชินกับเครื่องมือไฟฟ้าหรือคำแนะนำเหล่านี้ให้ใช้เครื่องมือไฟฟ้า

เครื่องมือไฟฟ้าเป็นสิ่งที่อันตรายมากเมื่ออยู่ในมือของคนที่ไม่ชำนาญ

e) บำรุงรักษาเครื่องมือไฟฟ้าและอุปกรณ์เสริม ตรวจสอบศูนย์เคลื่อนส่วนบังคับ ชาร์จหรือสภาพอื่น ๆ ที่มีผลต่อการทำงานของเครื่องมือไฟฟ้า

หากชำรุด ให้ซ่อมแซมเสียก่อนใช้งาน

อุบัติเหตุจำนวนมากเกิดจากเครื่องมือไฟฟ้าที่บำรุงรักษาไม่ดีพอ

f) ให้เครื่องมือตัดมีความคมและสะอาด

เครื่องมือตัดที่บำรุงรักษาอย่างถูกต้องและมีขอบคมจะไม่ค่อยบิดงอ และควบคุมได้ง่ายกว่า

g) ใช้เครื่องมือกล อุปกรณ์เสริม และเครื่องมือชิ้นเล็กชิ้นน้อย ฯลฯ ตามคำแนะนำเหล่านี้ โดยคำนึงถึงสภาพการทำงาน และงานที่จะทำ

การใช้เครื่องมือเพื่อทำงานที่แตกต่างไปจากสิ่งที่กำหนดไว้เหล่านั้น อาจก่อให้เกิดอันตรายได้

- h) ทำให้มือจับและพื้นผิวที่ใช้จับแห้ง สะอาด และปราศจากน้ำมันและจาระบี

ไม่ให้มือจับและพื้นผิวที่ใช้จับลื่นเพื่อการจัดการและการควบคุมเครื่องมือได้อย่างปลอดภัยในสถานการณ์ที่ไม่คาดคิด

5) การดูแลรักษาและการใช้แบตเตอรี่

- a) ชาร์จแบตเตอรี่ซ้ำโดยใช้เครื่องชาร์จตามที่ผู้ผลิตกำหนดไว้เท่านั้น

หากนำเครื่องชาร์จที่เหมาะสมสำหรับใช้งานกับแบตเตอรี่ประเภทอื่นมาใช้กับแบตเตอรี่อีกประเภท อาจทำให้เกิดไฟไหม้ได้

- b) ใช้เครื่องมือที่ต้องการกำลังไฟกับแบตเตอรี่ตามประเภทที่ได้ระบุไว้เท่านั้น

การใช้แบตเตอรี่แบบอื่นอาจทำให้เกิดไฟไหม้และการบาดเจ็บได้

- c) เมื่อไม่ใช้งานแบตเตอรี่ ควรเก็บให้ห่างจากวัตถุที่เป็นโลหะ เช่น คลิปหนีบกระดาษ เหรียญ กุญแจ ตะปู สกรู หรือวัตถุที่เป็นโลหะขนาดเล็กๆ ที่สามารถเชื่อมต่อเข้าด้วยกันได้

การลัดวงจรขั้วต่อแบตเตอรี่เข้าด้วยกันอาจทำให้เกิดแผลไหม้พุพองหรือไฟไหม้ได้

- d) ภายใต้อากาศที่เป็นอันตราย อาจมีของเหลวรั่วซึมออกจากแบตเตอรี่ ห้ามสัมผัสกับของเหลวดังกล่าว หากสัมผัสกับของเหลวโดยบังเอิญ ให้ล้างออกด้วยน้ำสะอาด หากของเหลวเข้าตา ควรรีบไปพบแพทย์

ของเหลวที่ไหลออกจากแบตเตอรี่อาจทำให้เกิดอาการระคายเคืองหรือแผลไหม้พุพองได้

- e) ห้ามใช้ชุดแบตเตอรี่หรือเครื่องมือที่เสียหายหรือได้รับการดัดแปลงมา

แบตเตอรี่ที่เสียหายหรือได้รับการดัดแปลงจะแสดงการทำงานที่ไม่อาจคาดเดาได้ ส่งผลให้เกิดไฟไหม้ ระเบิด หรือเสี่ยงต่อการบาดเจ็บ

- f) อย่าให้ชุดแบตเตอรี่หรือเครื่องมือสัมผัสกับไฟหรืออุณหภูมิที่รุนแรง

การให้สัมผัสกับไฟหรืออุณหภูมิที่สูงกว่า 130°C อาจทำให้เกิดการระเบิดได้

- g) ปฏิบัติตามคำแนะนำในการชาร์จให้ครบถ้วนและไม่มีชาร์จชุดแบตเตอรี่หรือเครื่องมือนอกช่วงอุณหภูมิที่ระบุไว้ในคำแนะนำการชาร์จที่ไม่เหมาะสมหรือนอกช่วงอุณหภูมิที่ระบุไว้ อาจทำให้แบตเตอรี่เสียหายและเพิ่มความเสี่ยงในการเกิดไฟไหม้ด้วย

6) การซ่อมบำรุง

- a) ให้ช่างซ่อมที่ชำนาญเป็นผู้ซ่อม และเปลี่ยนอะไหล่ที่เป็นของแท้ ทำให้เครื่องมือไฟฟ้ามีความปลอดภัย

- b) ห้ามซ่อมชุดแบตเตอรี่ที่เสียหาย

ผู้ผลิตหรือผู้ให้บริการที่ได้รับอนุญาตควรเป็นผู้ซ่อมชุดแบตเตอรี่เท่านั้น

คำเตือนด้านความปลอดภัยสำหรับปืนยิงซิลิโคนไร้สาย

1. ระหว่างใช้งาน ถือตัวเครื่องให้แน่นด้วยสองมือ (รูปที่ 2)

2. อย่าใช้งานเครื่องหนักมากเกินไปจนทำให้มอเตอร์ล๊อค เช่น การพยายามใช้วัสดุซิลที่แข็งตัว

นำวัสดุซิลที่แข็งตัวออก เนื่องจากอาจทำให้เครื่องมือทำงานผิดปกติได้

3. ก่อนใช้งานให้อ่านคำแนะนำบนหีบห่อของวัสดุซิล เพื่อให้เกิดความมั่นใจว่าท่านจะใช้งานวัสดุซิลได้อย่างถูกต้อง

4. สวมแว่นตานิรภัยขณะทำงาน

5. ห้ามใช้ในพื้นที่ที่มีวัสดุไวไฟ เช่น น้ำมันขีดเงา สี น้ำมันเบนซิน ทินเนอร์

6. ถ้าเครื่องร้อนมากผิดปกติ ประสิทธิภาพการทำงานของเครื่องมือแยลงหรือมีเสียงดังขึ้นผิดปกติ ให้หยุดใช้งานและปิดสวิทช์ไฟทันที ให้ผู้จำหน่ายเครื่องมือที่คุ้นชื่อหรือศูนย์บริการที่ได้รับอนุญาตจาก HIKOKI ตรวจสอบและซ่อมแซมเครื่องมือ

การใช้งานเครื่องมือที่ทำงานผิดปกติอย่างต่อเนื่องอาจทำให้เกิดการบาดเจ็บขึ้นได้

7. ถ้าเครื่องมือหลุดมือหรือกระแทกกับวัตถุอื่น ๆ ให้ตรวจสอบรอยแตก การแตกหัก หรือการผิดรูป และอื่น ๆ ของเครื่องมือ อาจทำให้เกิดการบาดเจ็บขึ้นได้ หากใช้เครื่องมือที่มีรอยแตก เสียหายหรือเสียรูปทรง

8. ห้ามสัมผัสส่วนที่เคลื่อนที่ได้

ห้ามวางมือ นิ้ว หรือส่วนอื่นใดของร่างกายใกล้กับส่วนที่เคลื่อนที่ได้ของเครื่องมือ

9. ห้ามวางเครื่องมือที่กำลังทำงานอยู่ที่ไว้โดยไม่มีกุดแล ปิดเครื่อง ห้ามวางเครื่องมือทิ้งไว้หากเครื่องยังไม่หยุดสนิท

10. เมื่อใช้งานเครื่องมือในที่สูง ตรวจสอบให้แน่ใจว่าไม่มีใครอยู่ด้านล่าง

11. ห้ามทำงานบนพื้นที่ไม่มั่นคง เช่น เมื่ออยู่บนบันได หรือขั้นบันได การกระทำดังกล่าวอาจทำให้บาดเจ็บได้

12. อย่ากระแทกเครื่องมือกับวัตถุอื่น หลีกเลี่ยงการกระทบที่รุนแรง เช่น การทำเครื่องมือตก และอย่าให้เครื่องมือเปียกน้ำ สิ่งเหล่านี้อาจทำให้ชิ้นส่วนที่มีความแม่นยำในตัวเสียหายและส่งผลกระทบต่อการทำงานผิดปกติได้

13. ห้ามให้ดวงตาของคุณสัมผัสกับแสงโดยตรงโดยการจ้องมองไปที่แสง หากดวงตาของคุณสัมผัสกับแสงอย่างต่อเนื่อง ดวงตาของคุณอาจเกิดการบาดเจ็บได้

ใช้ผ้านุ่มเช็ดฝุ่นหรือรอยเปื้อนที่เลนส์ของไฟ LED ออก ระวังระวังไม่ให้ผ้าเนื้อนุ่มหรือรอยเปื้อนที่เลนส์ของไฟ LED

ออก ระวังระวังไม่ให้เลนส์เกิดรอยขีดข่วน รอยขีดข่วนบนเลนส์ของไฟ LED ทำให้ความสว่างลดลงได้

14. คำเตือนระหว่างขนส่ง

- ปลดสวิทช์บนตัวเครื่องจักรและถอดแบตเตอรี่ออก

- ถือเครื่องจักรด้วยมือจับบนตัวเครื่อง

- เมื่อขนส่งด้วยยานพาหนะ ให้ปฏิบัติตามขั้นตอนที่เหมาะสมเพื่อป้องกันการตกหรือเกิดความเสียหาย

คำเตือน

เก็บให้พ้นมือเด็กและผู้ไม่ชำนาญ

หากไม่ได้ใช้ ควรเก็บให้พ้นมือเด็กและผู้ไม่ชำนาญ

คำเตือนด้านความปลอดภัยเพิ่มเติม

1. ชาร์จแบตเตอรี่ที่อุณหภูมิ 0°C—40°C ทุกครั้ง อุณหภูมิที่ต่ำกว่า 0°C จะส่งผลให้เกิดการชาร์จเกิน ซึ่งเป็นอันตราย ไม่สามารถชาร์จแบตเตอรี่ที่อุณหภูมิสูงกว่า 40°C ได้
อุณหภูมิสำหรับการชาร์จที่เหมาะสมที่สุดคือ 20°C—25°C
2. ห้ามใช้เครื่องชาร์จอย่างต่อเนื่อง
เมื่อเสร็จสิ้นการชาร์จหนึ่งครั้ง ให้พักเครื่องชาร์จประมาณ 15 นาที ก่อนการชาร์จแบตเตอรี่ครั้งต่อไป
3. อย่าให้วัตถุแปลกปลอมเข้าไปในช่องสำหรับใส่แบตเตอรี่
4. ห้ามถอดแยกแบตเตอรี่แบบรีชาร์จ และเครื่องชาร์จ
5. ห้ามเสียดวงจรแบตเตอรี่แบบรีชาร์จ การลัดวงจรแบตเตอรี่จะทำให้เกิดการแฉะไฟ และความร้อนสูง ซึ่งทำให้แบตเตอรี่ไหม้ หรือเสียหายได้
6. ห้ามเผาแบตเตอรี่ หากแบตเตอรี่ไหม้ อาจทำให้เกิดการระเบิดได้
7. นำแบตเตอรี่ที่เสื่อมกลับไปยังร้านทันที หากชาร์จแบตเตอรี่ และสามารถใช้งานแบตเตอรี่ได้เพียงช่วงสั้นๆ เท่านั้น ห้ามทิ้งแบตเตอรี่ที่คายประจุจนหมดแล้ว
8. ห้ามใส่วัตถุเข้าไปในช่องระบายอากาศของเครื่องชาร์จ
การใส่วัตถุที่เป็นโลหะ หรือวัตถุติดไฟได้เข้าไปในช่องระบายอากาศ จะทำให้เกิดอันตรายจากไฟฟ้าช็อต หรือทำให้เครื่องชาร์จเสียหาย
9. เมื่อใช้อุปกรณ์ต่อเนื่องเป็นเวลานาน อาจทำให้เกิดความร้อนสูง อาจสร้างความเสียหายแก่มอเตอร์และสวิตช์ ดังนั้น เมื่อใดก็ตามที่ปลอกหุ้มร้อน ให้เครื่องมือพักการทำงานไว้สักครู่
10. ให้แน่ใจว่าได้ใส่แบตเตอรี่ไว้แน่นหนาดีแล้ว ถ้าหากแบตเตอรี่เกิดหลวม จะทำให้หลุดออกมาและเกิดอุบัติเหตุได้
11. ห้ามใช้งานผลิตภัณฑ์หากเครื่องมือหรือขั้วแบตเตอรี่ (แบตเตอรี่เม้าท์) มีการเปลี่ยนรูปร่าง
การใส่แบตเตอรี่สามารถทำให้เกิดการลัดวงจรซึ่งส่งผลให้เกิดการปล่อยควันหรือเกิดประกายไฟได้
12. รักษาขั้วต่อของเครื่องมือ (แบตเตอรี่เม้าท์) ไม่ให้มีเศษไม้หรือเศษโลหะและฝุ่น
 - ก่อนใช้งาน ให้แน่ใจว่าเศษไม้หรือเศษโลหะและฝุ่นไม่สะสมอยู่บริเวณขั้วต่อ
 - ระหว่างใช้งาน หลีกเลี่ยงไม่ให้เศษไม้หรือเศษโลหะและฝุ่นจากเครื่องตกลงไปในแบตเตอรี่
 - เมื่อหยุดการทำงานไว้ชั่วคราวหรือหลังใช้งาน ห้ามวางเครื่องมือไว้ในที่ที่เศษไม้หรือเศษโลหะและฝุ่นตกลงไปในแบตเตอรี่ได้ หากเกิดการอุดตันดังกล่าวจะทำให้เกิดการลัดวงจรซึ่งส่งผลให้เกิดการปล่อยควันหรือเกิดประกายไฟได้
13. ใช้อุปกรณ์และแบตเตอรี่ที่อุณหภูมิระหว่าง -5°C และ 40°C อยู่เสมอ

ข้อควรระวังเกี่ยวกับแบตเตอรี่ลิเทียม-ไอออน

เพื่อขีตอาการใช้งาน แบตเตอรี่ลิเทียม-ไอออนมีฟังก์ชันการป้องกันเพื่อหยุดการปล่อยพลังงาน
ในกรณีที่เกิดเหตุกรณีในข้อ 1 ถึง 3 ที่มีการอธิบายด้านล่างในขณะที่ใช้ผลิตภัณฑ์นี้ แม้ว่าคุณจะไม่กังวลถึงสวิตช์ มอเตอร์อาจหยุดหมุน เป็นปัญหาปัญหา แต่เป็นผลของฟังก์ชันการป้องกัน

1. เมื่อหลังจากที่เหลืออยู่ของแบตเตอรี่หมดไป มอเตอร์จะหยุดหมุนในกรณีดังกล่าว ให้ชาร์จแบตเตอรี่ทันที
2. ถ้าเครื่องมือมีการใช้งานเกินพิกัด มอเตอร์อาจหยุดหมุน ในกรณีนี้ให้ปล่อยสวิตช์ของเครื่องมือ และกำจัดสาเหตุของการทำงานเกินพิกัด หลังจากนั้น คุณสามารถใช้เครื่องมือต่อไปได้อีกครั้ง
3. ถ้าแบตเตอรี่ร้อนเกินไปภายใต้การใช้งานเกินพิกัด แบตเตอรี่อาจหยุดจ่ายพลังงาน
ในกรณีนี้ ให้หยุดการใช้แบตเตอรี่ และปล่อยให้แบตเตอรี่เย็นลง หลังจากนั้น คุณสามารถใช้เครื่องมือต่อไปได้อีกครั้ง

ยังไปกว่านั้น โปรดใส่ใจถึงคำเตือนและข้อควรระวังต่อไปนี้

คำเตือน

เพื่อป้องกันการใช้ของแบตเตอรี่ การสร้างความร้อน การปล่อยควัน การระเบิด หรือการเกิดประกายไฟ โปรดมั่นใจว่าคุณใส่ใจถึงข้อควรระวังต่อไปนี้

1. ตรวจสอบให้แน่ใจว่า ไม่มีมีการสะสมของเศษไม้หรือเศษโลหะและฝุ่นในแบตเตอรี่
 - ระหว่างการทำงาน ให้แน่ใจว่าเศษไม้หรือเศษโลหะและฝุ่นไม่ตกลงไปบนแบตเตอรี่
 - ตรวจสอบให้แน่ใจว่าเศษไม้หรือเศษโลหะและฝุ่นที่ตกลงไปบนเครื่องมือไฟฟ้า ไม่สะสมบนแบตเตอรี่
 - อย่าเก็บแบตเตอรี่ที่ไม่ได้ใช้ในสถานที่ซึ่งมีสิ่งสกปรกเศษไม้หรือเศษโลหะและฝุ่น
 - ก่อนที่จะเก็บแบตเตอรี่ ให้ปิดเศษไม้หรือเศษโลหะและฝุ่นที่ติดอยู่ ออก และอย่าเก็บไว้ที่เดียวกับชิ้นส่วนที่เป็นโลหะ (สกรู ตะปู ฯลฯ)
2. อย่าแทงแบตเตอรี่ด้วยวัตถุที่แหลม เช่น ตะปู ดอกด้วยค้อน ยินบนโยน หรือปล่อยให้แบตเตอรี่ถูกกระแทกอย่างรุนแรง
3. อย่าใช้แบตเตอรี่ที่มีลักษณะเสียหาย หรือมีการเปลี่ยนรูปร่าง
4. อย่าใส่แบตเตอรี่สำหรับวัตถุประสงค์ที่นอกเหนือจากที่ระบุ
5. ถ้าการชาร์จแบตเตอรี่ไม่สมบูรณ์ แม้ว่าถึงเวลาการชาร์จที่ระบุแล้ว ให้หยุดการชาร์จแบตเตอรี่ทันที
6. อย่าวาง หรือปล่อยให้แบตเตอรี่สัมผัสอุณหภูมิที่สูง หรือความดันสูง เช่น ในเตาไมโครเวฟ ตู้อบ หรือภาชนะที่มีความดันสูง
7. เมื่อแบตเตอรี่รั่ว หรือได้กลิ่นผิดปกติ ให้เก็บแบตเตอรี่ให้ห่างจากไฟทันที
8. อย่าใช้ในสถานที่ซึ่งมีการสร้างประจุไฟฟ้าสถิตอย่างรุนแรง
9. ถ้าแบตเตอรี่รั่ว มีกลิ่นผิดปกติ เกิดความร้อน เปลี่ยนสี หรือมีรูปร่างเปลี่ยนไป หรือมีลักษณะผิดปกติใดๆ ระหว่างการใช้งาน การชาร์จหรือขณะที่ยก ให้ห่างออกจากอุปกรณ์ หรือเครื่องชาร์จแบตเตอรี่ทันที และหยุดการใช้งาน
10. ห้ามจุ่มแบตเตอรี่หรือให้ของเหลวใดๆ เข้าไปในแบตเตอรี่ ของเหลวแทรกซึมที่นำไปไฟ เช่น น้ำ สามารถทำให้เกิดไฟไหม้ หรือระเบิดได้ จัดเก็บแบตเตอรี่ในที่เย็นและแห้ง อยู่ห่างจากวัตถุที่ติดไฟได้ง่าย หลีกเลี่ยงที่มีแก๊สที่ติดกร่อนในอากาศ

ข้อควรระวัง

1. ถ้าของเหลวที่รั่วจากแบตเตอรี่เข้าตา อย่าขยี้ตา ให้ล้างออกด้วยน้ำสะอาด เช่น น้ำก๊อก และรีบไปพบแพทย์ทันที
ถ้าปล่อยทิ้งไว้โดยไม่ได้รับการรักษา ของเหลวอาจทำให้เกิดปัญหาเกี่ยวกับดวงตาได้

- ถ้าของเหลวที่รั่วจากแบตเตอรี่สัมผัสถูกผิวหนังหรือเสื้อผ้า ให้ล้างออกด้วยน้ำสะอาด เช่น น้ำก๊อกทันที
มีความเป็นไปได้ที่ของเหลวนี้สามารถทำให้เกิดการระคายเคืองต่อผิวหนัง
- ถ้าคุณพบสนิม กลิ่นที่ผิดปกติ การร่อนกินไป การเปลี่ยนสี การเปลี่ยนรูปร่าง และ/หรือสิ่งปกต้อื่นๆ ในขณะที่ใช้แบตเตอรี่เป็นครั้งแรก อย่าใช้ และส่งแบตเตอรี่กลับคืนไปยังผู้จำหน่าย หรือตัวแทนจำหน่ายของคุณ

คำเตือน

หากมีสิ่งแปลกปลอมเข้าสู่กระแสไฟฟ้าที่ขั้วของแบตเตอรี่ลิเทียมไอออน แบตเตอรี่อาจจะช็อต ก่อให้เกิดไฟไหม้ การเก็บแบตเตอรี่ลิเทียมไอออนต้องปฏิบัติตามกฎที่มีรายละเอียดดังต่อไปนี้

- อย่าวางเศษโลหะต่าง ๆ ตะปู และสายไฟที่เป็นสื่อกระแสไฟฟ้า เช่น ลวดเหล็กและลวดทองแดงในกรณีที่เกิดเก็บ
- เพื่อป้องกันไม่ให้เกิดการช็อต ให้ใส่แบตเตอรี่ลงในเครื่องมือหรือใส่ฝารอบแบตเตอรี่อย่างปลอดภัยจนมองไม่เห็นรูระบายอากาศ


เกี่ยวกับการขนส่งแบตเตอรี่ลิเทียม-ไอออน

เมื่อขนส่งแบตเตอรี่ลิเทียม-ไอออน โปรดสังเกตตามข้อควรระวังดังต่อไปนี้

คำเตือน

แจ้งบริษัทที่ทำการขนส่งให้ทราบว่าเป็นกล่องบรรจุแบตเตอรี่ลิเทียม-ไอออน ให้ข้อมูลบริษัทเกี่ยวกับการปล่อยพลังงาน และปฏิบัติตามคำแนะนำของบริษัทขนส่งเมื่อเตรียมการขนส่ง

- แบตเตอรี่ลิเทียม-ไอออนที่มีการปล่อยพลังงานออกมามากกว่า 100 Wh ถือเป็นสินค้าอันตรายตามการจำแนกสินค้า และต้องมีขั้นตอนปฏิบัติเป็นพิเศษ
- สำหรับการขนส่งไปต่างประเทศ คุณต้องปฏิบัติตามกฎหมายสากลและกฎหรือข้อปฏิบัติของประเทศปลายทาง

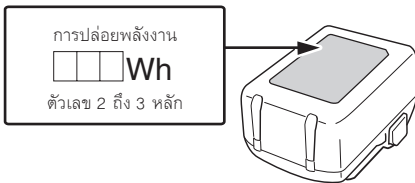

ข้อควรระวังในการต่ออุปกรณ์ USB (UC18YSL3)

เมื่อเกิดปัญหาที่ไม่คาดคิด ข้อมูลในอุปกรณ์ USB ที่เชื่อมต่อกับผลิตภัณฑ์นี้อาจเสียหายหรือสูญหายได้ ตรวจสอบให้แน่ใจว่าได้ทำการสำรองข้อมูลที่อยู่บนอุปกรณ์ USB ไว้แล้ว ก่อนนำมาใช้งานกับผลิตภัณฑ์นี้

พึงระลึกว่าบริษัทของเราไม่มีส่วนรับผิดชอบใดๆ สำหรับข้อมูลที่บันทึกไว้ในอุปกรณ์ USB ที่ได้รับความเสียหายหรือสูญหาย รวมถึงการขำรดเสียหายที่อาจเกิดขึ้นกับอุปกรณ์ที่นำมาเชื่อมต่อ

คำเตือน

- ก่อนใช้งาน ให้ตรวจเช็คสาย USB ที่เชื่อมต่อ เพื่อหาการชำรุดหรือความเสียหาย
การใช้สาย USB ที่ชำรุดหรือเสียหายอาจเป็นสาเหตุให้เกิดควันหรือการระเบิดได้
- เมื่อไม่ได้ใช้งานผลิตภัณฑ์นี้ ให้ปิดพอร์ต USB ไปด้วยฝารอบยางฝุ่นละอองหรือวัสดุอื่นๆ ที่เกาะในพอร์ต USB อาจเป็นสาเหตุให้เกิดควันหรือการระเบิดได้

หมายเหตุ

- อาจมีการหยุดพักเป็นครั้งคราวระหว่างที่ชาร์จ USB ช้า
- เมื่อไม่ได้ใช้ชาร์จอุปกรณ์ USB ให้ ถอดอุปกรณ์ USB ออกจากเครื่องชาร์จ



การไม่ปฏิบัติตามอาจไม่เพียงลดอายุการใช้งานของแบตเตอรี่ของอุปกรณ์ USB แล้ว แต่อาจยังมีผลทำให้เกิดอุบัติเหตุที่ไม่คาดคิดได้

- อาจไม่สามารถชาร์จอุปกรณ์ USB บางตัวได้ เนื่องจากขึ้นอยู่กับชนิดของอุปกรณ์นั้นๆ

ชื่อชิ้นส่วนอะไหล่ (รูปที่ 1—รูปที่ 22)

①	น็อตยึด	⑩	ชาร์จไฟแสดงสถานะ
②	ตัวยึด 300 มล.	⑪	ตะขอ
③	ราง (แบ่งหลัก) (ตัวยึด 300 มล.)	⑫	ร่อง
④	ลูกสูบ (สำหรับวัสดุซิลแบบ หลุดแข็ง)	⑬	สกรู
⑤	สลัก	⑭	สกรู (ส่วนหลังของมือจับวาง)
⑥	หน้าปิด	⑮	ลูกสูบ (สำหรับวัสดุซิลแบบ หลุดนิ่ม) (จำหน่ายแยกต่างหาก)
⑦	สวิตช์สั่งงาน	⑯	ราง (แบ่งหลัก) (ตัวยึด 600 มล.) (จำหน่ายแยกต่างหาก)
⑧	ไฟ LED	⑰	วัสดุซิลแบบหลุดแข็ง
⑨	แบตเตอรี่	⑱	ตัวยึด 600 มล. (จำหน่ายแยกต่างหาก)
⑩	มอเตอร์	⑲	วัสดุซิลแบบหลุดนิ่ม
⑪	มือจับวาง	⑳	วัสดุซิลแบบดั่ง
⑫	ส่วนยื่น (ส่วนบนสุดของตัวเครื่อง)	㉑	ลูกสูบ (สำหรับวัสดุซิลแบบดั่ง) (จำหน่ายแยกต่างหาก)
⑬	ปุ่มปล่อย	㉒	ส่วนยื่นของตัวยึด
⑭	ป้ายชื่อ	㉓	ร่อง
⑮	ตัวล็อค	㉔	หัวตอ

31	ฝาปิดตัวยึด	36	ไฟแสดงสถานะแบตเตอรี่ที่เหลือ
32	หัวตอ (จำหน่ายแยกต่างหาก)	37	ฝาปิดยาง
33	วัสดุซีลที่แข็งตัว	38	พอร์ต USB
34	จอแสดงผล	39	สาย USB
35	สวิตช์แสดงสถานะแบตเตอรี่ที่เหลือ		

	ไฟกระพริบ ; ระงับการปล่อยพลังงานชั่วคราวเนื่องจากอุณหภูมิสูง ถอดแบตเตอรี่ออกจากเครื่องมือและปล่อยให้เย็นลง
	ไฟกระพริบ ; ระงับการปล่อยพลังงานชั่วคราวเนื่องจากเกิดความล้มเหลวหรือทำงานผิดปกติ ปัญหาอาจเกิดขึ้นที่แบตเตอรี่กรุณาติดต่อตัวแทนจำหน่ายของคุณ

อุปกรณ์มาตรฐาน

นอกจากตัวเครื่อง (1 เครื่อง) แล้ว ภายในแพ็คเกจยังประกอบด้วย อุปกรณ์เสริมที่ระบุในหน้า 27 ด้วย

อาจเปลี่ยนแปลงอุปกรณ์มาตรฐานได้โดยไม่ต้องแจ้งล่วงหน้า

การใช้งาน

- ใช้กับท่อ ห้องครัวและห้องน้ำ กำแพงกลางแจ้ง และ อื่นๆ
- อุดรอยต่อของกำแพงกลางแจ้งหรือกระเบื้อง
- เสริมความแข็งแรงในการป้องกันความร้อนของอากาศหรือหน้า
- ต่อเชื่อมกระจกชนิดหนา และซ่อมแซมตู้ปลา

รายละเอียดจำเพาะ

1. เครื่องมือไฟฟ้า

รุ่น	AC18DA
แรงดันไฟฟ้า	18 V
ความเร็วในการจ่ายวัสดุซีล	0–14 มม./วินาที
แรงจ่ายวัสดุซีลสูงสุด	3000 นิวตัน
แบตเตอรี่ที่ใช้งานได้กับเครื่องมือรุ่นนี้*	แบตเตอรี่ที่มีโวลต์หลายระดับ, รุ่น BSL18
น้ำหนัก	2.3 กก (BSL1820M)

* แบตเตอรี่ที่มี รุ่น BSL3660/3620/3626 และอื่นๆ ไม่สามารถใช้งานกับเครื่องมือนี้ได้

หมายเหตุ

เนื่องจาก HiKOKI มีแผนงานวิจัยและพัฒนาอย่างต่อเนื่อง รายละเอียดจำเพาะนี้จึงอาจเปลี่ยนแปลงได้โดยไม่ต้องแจ้งล่วงหน้า

2. แบตเตอรี่ (จำหน่ายแยกต่างหาก)






รุ่น	BSL1820M
แรงดันไฟฟ้า	18 V
ความจุแบตเตอรี่	2.0 Ah
ผลิตภัณฑ์โวลต์ที่ใช้งานได้*	รุ่นที่มีโวลต์หลายระดับ ผลิตภัณฑ์ขนาด 18 V
เครื่องชาร์จที่ใช้งานได้	เครื่องชาร์จแบบเปลี่ยนสำหรับแบตเตอรี่ ลิเทียม-ไอออน

* โปรดอ่านรายละเอียดได้ในแคตตาล็อกทั่วไป






สัญลักษณ์

คำเตือน

สัญลักษณ์ที่ใช้กับอุปกรณ์มีดังต่อไปนี้ ตรวจสอบให้แน่ใจว่าคุณเข้าใจความหมายเป็นอย่างดีก่อนใช้งาน

	AC18DA: ปืนยิงซีลโคโนไรสาย
	เพื่อลดความเสี่ยงจากการบาดเจ็บ ผู้ใช้จะต้องอ่านคู่มือการใช้งาน
	กระแสดรง
V	แรงดันไฟฟ้าที่พิกัด
n ₀	ความเร็วอิสระ
mm/s	มิลลิเมตรต่อวินาที
	ถอดแบตเตอรี่
I	การเปิดเครื่อง
O	การปิดเครื่อง
	คำเตือน

แบตเตอรี่

	ไฟสว่าง ; พลังงานแบตเตอรี่คงเหลือมากกว่า 75%
	ไฟสว่าง ; พลังงานแบตเตอรี่คงเหลือ 50%–75%
	ไฟสว่าง ; พลังงานแบตเตอรี่คงเหลือ 25%–50%
	ไฟสว่าง ; พลังงานแบตเตอรี่คงเหลือน้อยกว่า 25%
	ไฟกระพริบ ; พลังงานแบตเตอรี่คงเหลือใกล้หมด ทำการรีชาร์จแบตเตอรี่ให้เร็วที่สุด

- (2) ขึ้นอยู่กับอุณหภูมิและเวลาการชาร์จแบตเตอรี่แบบรีชาร์จได้
อุณหภูมิและเวลาการชาร์จจะเป็นค่าที่แสดงในตารางที่ 2

ตารางที่ 2

เครื่องชาร์จ		UC18YSL3					
แบตเตอรี่	ประเภทของแบตเตอรี่	Li-ion					
	อุณหภูมิซึ่งแบตเตอรี่สามารถชาร์จใหม่ได้	0°C—50°C					
	แรงดันไฟชาร์จ	V	14.4		18		
	เวลาในการชาร์จโดยประมาณ (ที่ 20°C)	นาที่	รุ่น BSL14xx		รุ่น BSL18xx		รุ่นที่มีโวลต์หลายระดับ
			(4 เซลล์)	(8 เซลล์)	(5 เซลล์)	(10 เซลล์)	(10 เซลล์)
		BSL1415S : 15 BSL1415 : 15 BSL1415X : 15 BSL1420 : 20 BSL1425 : 25 BSL1430C : 30	BSL1430 : 20 BSL1440 : 26 BSL1450 : 32 BSL1460 : 38	BSL1815S : 15 BSL1815 : 15 BSL1815X : 15 BSL1820 : 20 BSL1820M : 20 BSL1825 : 25 BSL1830C : 30 BSL1850C : 32	BSL1830 : 20 BSL1840 : 26 BSL1850 : 32 BSL1860 : 38	BSL36A18 : 32 BSL36B18 : 52	
USB	แรงดันไฟชาร์จ	V	5				
	กระแสชาร์จประจุ	A	2				

หมายเหตุ:

ระยะเวลาในการชาร์จอาจแตกต่างกันไปขึ้นอยู่กับอุณหภูมิและแรงดันไฟฟ้าจากแหล่งจ่ายไฟ

4. ปลดสายไฟแท่นชาร์จออกจากตัวรับไฟฟ้า
5. จับแท่นชาร์จให้แน่น จากนั้นตั้งแบตเตอรี่ออก

หมายเหตุ

อย่าลืมนำแบตเตอรี่ออกจากแท่นชาร์จหลังการใช้งาน แล้วเก็บแยกไว้

เกี่ยวกับการคายประจุไฟฟ้าในกรณีของแบตเตอรี่ใหม่

เนื่องจากสารเคมีภายในของแบตเตอรี่ใหม่ และแบตเตอรี่ที่ไม่ได้ใช้มาเป็นเวลานานนั้นไม่แตกที่ฟ ดั้งนั้นการจ่ายประจุไฟฟ้าอาจต่ำเมื่อใช้ครั้งแรกและครั้งที่สอง นี่เป็นปรากฏการณ์ที่เกิดขึ้นชั่วคราว และจะกลับเป็นปกติ หลังจากทีชาร์จแบตเตอรี่ใหม่ 2—3 ครั้ง

วิธีการยืดอายุการใช้งานของแบตเตอรี่

- ชาร์จแบตเตอรี่ก่อนที่แบตเตอรี่จะคายประจุจนหมด
เมื่อท่านรู้สึกว่าเครื่องมือมีกำลังอ่อนลง ให้หยุดใช้เครื่องมือและทำการชาร์จแบตเตอรี่ หากท่านยังใช้เครื่องมือต่อไปจนเครื่องดับ แบตเตอรี่อาจได้รับความเสียหาย และอายุการใช้งานของแบตเตอรี่อาจสั้นลง
- หลีกเลี่ยงการชาร์จที่อุณหภูมิสูง
แบตเตอรี่แบบรีชาร์จจะร้อนขึ้นทันทีหลังจากใช้งาน หากชาร์จแบตเตอรี่ดังกล่าวทันทีหลังจากใช้งาน จะทำให้สารเคมีภายในแบตเตอรี่เสื่อมสภาพ และอายุการใช้งานของแบตเตอรี่จะสั้นลง ทั้งแบตเตอรี่ไวลัดครู้ให้เย็นลงก่อนที่จะทำการชาร์จ

ข้อควรระวัง

- หากชาร์จแบตเตอรี่ในขณะแบตเตอรี่ร้อน เนื่องจากวางไว้ในสถานที่ที่สัมผัสกับแสงอาทิตย์โดยตรงเป็นเวลานาน หรือเพิ่งใช้งานแบตเตอรี่ ไฟแสดงสถานะการชาร์จของเครื่องชาร์จจะสว่างเป็นเวลา 0.3 วินาที และจะไม่สว่างเป็นเวลา 0.3 วินาที (ดับเป็นเวลา 0.3 วินาที) ในกรณีดังกล่าว ให้แบตเตอรี่เย็นลงก่อน จากนั้นจึงเริ่มชาร์จ
- เมื่อไฟแสดงสถานะการชาร์จจะพริบ (ในระหว่าง 0.2 วินาที) ตรวจสอบและนำสิ่งแปลกปลอมในช่องต่อแบตเตอรี่ของเครื่องชาร์จออก หากไม่มีวัตถุแปลกปลอม เป็นไปได้ว่าแบตเตอรี่หรือแท่นชาร์จทำงานผิดพลาด นำส่งศูนย์ให้บริการที่ได้รับอนุญาต

การติดตั้งและการใช้งาน

การดำเนินการ	รูป	หน้า
การถอดและใส่แบตเตอรี่	3	2
การชาร์จ	4	2
ปรับความเร็วการทำงาน*1	5	2
การทำงานของสวิตช์*2	6	3
วิธีการใช้งานไฟ LED	7	3
วิธีการใช้งานตะขอ*3	8	3
การถอดตัวยึด	9	3
การเปลี่ยนราง (แห่งหลัก)*4	10	4
ประเภทของลูกสูบ*5	11	4
การเปลี่ยนลูกสูบ*6	12	4
การต่อตัวยึด 300 มล.	13-a	4
การต่อตัวยึด 600 มล.	13-b	4
การใช้งานวัสดุซิลแบบหลอดแข็ง*7	14	5
การใช้งานวัสดุซิลแบบหลอดนิ่ม*7	15	5
การใช้งานวัสดุซิลแบบดั่ง*7	16	5
การวางเครื่องลงชั่วคราวขณะทำงาน*8	17	6
การนำวัสดุซิลที่แข็งตัวออก*9	18	6
ตัวบอกระดับแบตเตอรี่คงเหลือ	19	6
การชาร์จอุปกรณ์ USB จากตัวรับไฟฟ้า	20-a	6
การชาร์จอุปกรณ์ USB และแบตเตอรี่จากตัวรับไฟฟ้า	20-b	6
วิธีการรีชาร์จอุปกรณ์ USB	21	6
เมื่อชาร์จอุปกรณ์ USB เสร็จสิ้น	22	6
การเลือกอุปกรณ์เสริม	—	28

- *1 ปรับความเร็วการทำงาน สามารถดำเนินการได้แม้ขณะทำงาน ปรับความเร็วด้วยการดันสวิตช์ไปยังตำแหน่งตัวเลขต่างๆ

ข้อควรระวัง

หากเส้นผ่านศูนย์กลางหน้าตัดขวางของหัวต่อมีขนาด 3 มม. หรือเล็กกว่า หรือหากมีการพยายามจ่ายวัสดุซิลด้วยความเร็วสูงอย่างกะทันหันภายใต้สภาวะอุณหภูมิต่ำ วัสดุซิลจะลั่นออกมาจากด้านข้างของลูกสูบ
เริ่มต้นที่ความเร็วต่ำ แล้วจึงค่อยๆ เร่งความเร็วให้เหมาะสมกับความแข็งของวัสดุซิล

- *2 การทำงานของสวิตช์ทันทีที่ปล่อยสวิตช์ ลูกสูบจะค่อยๆ ดึงตัวกลับ เพื่อป้องกันไม่ให้อุณหภูมิที่หลงเหลืออยู่ที่ปลายหัวต่อหยุด

- *3 วิธีการใช้งานตะขอสามารถใช้ตะขอเพื่อแขวนเครื่องมือไว้ชั่วคราวระหว่างการทำงาน

ข้อควรระวัง

ห้ามใช้ตะขอเพื่อแขวนเครื่องมือไว้กับตัวบุคคล
เมื่อใช้ตะขอ ตรวจสอบให้อย่างแน่ใจว่าตัวเครื่องหลักจะไม่ลั่นและหล่น หรือถูกลมพัดจนเคลื่อนที่ได้ และอื่นๆ
ห้ามแขวนเครื่องมือไว้ที่เข็มขัดหรือกางเกง เนื่องจากอาจทำให้เกิดอุบัติเหตุได้

- *4 การเปลี่ยนราง (แห่งหลัก)

หมายเหตุ

ติดตั้งราง (แห่งหลัก) โดยให้ชิ้นพื้นของรางหันลงด้านล่าง

- *5 ประเภทของลูกสูบ

ลูกสูบมีทั้งหมด 3 ประเภท โดยใช้งานสำหรับวัสดุซิลต่างชนิดกัน

- a: วัสดุซิลแบบหลอดแข็ง
b: วัสดุซิลแบบหลอดนิ่ม
c: วัสดุซิลแบบดั่ง

เลือกตัวยึดและลูกสูบตามประเภทวัสดุซิล

- *6 การเปลี่ยนลูกสูบ

สามารถถอดลูกสูบออกจากราง (แห่งหลัก) ได้โดยการหมุนลูกสูบทวนเข็มนาฬิกา ในการต่อลูกสูบ ให้หมุนลูกสูบไปในทิศทางตรงกันข้าม เพื่อยึดลูกสูบ การเปลี่ยนลูกสูบไม่จำเป็นต้องใช้เครื่องมือใดๆ

- *7 การใช้วัสดุซิลแบบหลอดแข็ง แบบหลอดนิ่ม และแบบดั่ง

ข้อควรระวัง

อย่าทำให้เส้นผ่านศูนย์กลางหน้าตัดขวางของหัวต่อมีขนาด 3 มม. หรือเล็กกว่า มิเช่นนั้น อาจทำให้วัสดุซิลลั่นจากด้านข้างของลูกสูบ หรือทำให้ตัวยึดหรือฝาปิดตัวยึดเสียหายได้

- *8 วางเครื่องลงชั่วคราวขณะทำงาน

หมายเหตุ

สามารถวางเครื่องลงชั่วคราวในลักษณะกลับหัวได้แม้ขณะทำงาน เมื่อวางเครื่องลงชั่วคราว ให้วางบนพื้นผิวที่มั่นคง

- *9 การนำวัสดุซิลที่แข็งตัวออก

ใช้เข็มในตัวยึด 300 มล. ขูดวัสดุซิลส่วนที่แข็งออกจากด้านในหัวต่อ และหลอดวัสดุซิล จากนั้นจึงเก็บเข็มกลับเข้าไปในตัวยึด

หมายเหตุ

ระวังอย่าชี้ขวานภายในบรรจุภัณฑ์ด้วยเข็ม

สัญญาณเตือนไฟ LED

หากฟังก์ชันป้องกันความปลอดภัยใดๆ ทำงานระหว่างที่ใช้งานผลิตภัณฑ์นี้ ไฟ LED จะกระพริบเตือนขณะต้นสวิตช์ ดังที่อธิบายไว้ด้านล่างนี้ มือเอกรวมไปถึงแบตเตอรี่ด้วย หากมีฟังก์ชันการป้องกันใดๆ ทำงานระหว่างนี้ ไฟ LED จะกระพริบตามที่อธิบายใน **ตารางที่ 3** เมื่อฟังก์ชันการป้องกันใดๆ ทำงาน ให้เอานิ้วออกจากสวิตช์ทันทีและปฏิบัติตามคำแนะนำที่ได้อธิบายไว้ ระหว่างที่ดำเนินการแก้ไข

ตารางที่ 3

ฟังก์ชันการป้องกัน	หน้าจอไฟ LED	การดำเนินการแก้ไข
การป้องกันการใช้งานเครื่องหนัก	สว่าง 0.1 วินาที/ดับ 0.5 วินาที ■ ■ ■	แก้ไขสาเหตุของการทำงานหนักเกินไป

การบำรุงรักษาและการตรวจสอบ

คำเตือน

ให้แน่ใจว่าได้ปิดสวิตช์และนำแบตเตอรี่ออกก่อนทำการตรวจสอบและซ่อมบำรุง

1. การตรวจสอบสกรูยึด

ให้ตรวจสอบสกรูยึดเสมอ และให้ขันไว้อย่างถูกต้อง ถ้าสกรูหลวม ให้ขันเสียใหม่โดยทันที มิฉะนั้นอาจเกิดอันตรายมาก

2. การบำรุงรักษามอเตอร์

การขจัดลวดของมอเตอร์เป็นหัวใจสำคัญของเครื่องมือไฟฟ้า ให้ใช้ความระมัดระวังเพื่อไม่ให้ขจัดลวดของมอเตอร์ชำรุดและ/หรือ เปียก น้ำหรือน้ำมัน

3. การตรวจสอบขั้วต่อ (เครื่องมือและแบตเตอรี่)

ตรวจสอบให้แน่ใจว่าไม่มีกระแสผสมของเศษไม้หรือเศษโลหะและฝุ่นในขั้วต่อ

การตรวจสอบก่อน ระหว่าง และหลังการทำงานตามโอกาส

ข้อควรระวัง

นำเอาเศษไม้หรือเศษโลหะและฝุ่นที่อาจสะสมในขั้วต่อได้ออก มิฉะนั้นอาจทำให้เกิดการทำงานผิดพลาดได้

4. การทำความสะอาดภายนอก

เมื่อเครื่องมือสกรูปรก ให้เช็ดด้วยผ้านุ่มที่แห้ง หรือผ้าชุบน้ำสบู่บิดหมาดๆ น้ำสบู่หมาดๆ หมาดๆ ห้ามใช้ตัวทำละลายคลอรีน น้ำมัน หรือทินเนอร์ เนื่องจากสารเหล่านี้จะทำให้พลาสติกละลาย

หากแผงตะแกรงหน้ามีเศษวัสดุติดอยู่ เครื่องมือจะมีประสิทธิภาพลดลง

ทำความสะอาดอย่างเบามือด้วยแปรงขนนุ่มเมื่อจำเป็น

5. การจัดเก็บ

เก็บเครื่องมือและแบตเตอรี่ในสถานที่ซึ่งมีอุณหภูมิต่ำกว่า 40°C และห่างจากมือเด็ก

หมายเหตุ

การจัดเก็บแบตเตอรี่ลิเธียม-ไอออน

แบตเตอรี่ลิเธียม-ไอออนจะต้องชาร์จไฟเต็มก่อนจัดเก็บ

การเก็บรักษาแบตเตอรี่ต่อเนื่อง (3 เดือนหรือมากกว่า) ด้วยพลังงานต่ำอาจทำให้ประสิทธิภาพการทำงานลดลง โดยเฉพาะการลดอายุการใช้งานแบตเตอรี่ หรือทำให้แบตเตอรี่ไม่สามารถเก็บพลังงานไว้ได้

ทั้งนี้สามารถแก้ไขปัญหามือเมื่อเวลาใช้งานแบตเตอรี่ลดลงอย่างเห็นได้ชัดได้โดยการชาร์จไฟและใช้งานแบตเตอรี่ซ้ำ ๆ กันสองถึงห้ารอบ

หากเวลาใช้งานแบตเตอรี่สั้นลงมากแม้ว่าจะมีการชาร์จและใช้งานซ้ำหลายรอบแล้ว แสดงว่าแบตเตอรี่หมดสภาพแล้วและต้องจัดซื้อแบตเตอรี่ใหม่

ข้อควรระวัง

ต้องปฏิบัติตามระเบียบและมาตรฐานความปลอดภัยของแต่ละประเทศในการใช้งานและบำรุงรักษาเครื่องมือไฟฟ้า

การเลือกอุปกรณ์

รายการอุปกรณ์ต่างๆ ของเครื่องจักรนี้อยู่ในหน้า 28

สำหรับรายละเอียดเกี่ยวกับดอกสว่านแต่ละชนิด กรุณาติดต่อศูนย์บริการ HIKOKI

ข้อสังเกตที่สำคัญเกี่ยวกับแบตเตอรี่สำหรับเครื่องมือไฟฟ้าไร้สายของ HIKOKI

โปรดใช้แบตเตอรี่ของแท้ที่เรากำหนดไว้เสมอ เราไม่สามารถรับประกันความปลอดภัยและสมรรถนะของเครื่องมือไฟฟ้าไร้สายของเราได้ เมื่อใช้กับแบตเตอรี่ที่นอกเหนือจากที่เรากำหนดไว้ หรือเมื่อแบตเตอรี่ถูกถอดชิ้นส่วนหรือมีการดัดแปลง (เช่น การถอดชิ้นส่วนและทดแทนเซลล์แบตเตอรี่ หรือชิ้นส่วนภายใน)

หมายเหตุ

เนื่องจาก HIKOKI มีแผนงานวิจัยและพัฒนาอย่างต่อเนื่อง รายละเอียดเฉพาะนี้จึงอาจเปลี่ยนแปลงได้โดยไม่ต้องแจ้งล่วงหน้า

การแก้ไขปัญหา

ใช้การตรวจสอบในตารางด้านล่าง ถ้าเครื่องมือไม่ทำงานเป็นปกติ ถ้าการดำเนินการไม่ได้เป็นการแก้ปัญหา ให้ปรึกษาตัวแทนจำหน่ายของคุณ หรือศูนย์บริการที่ได้รับอนุญาตของ HIKOKI





1. เครื่องมือไฟฟ้า


อาการ	สาเหตุที่เป็นไปได้	การแก้ไข
เครื่องมือไม่ทำงาน	ไม่มีพลังงานแบตเตอรี่คงเหลือ	ชาร์จแบตเตอรี่
เครื่องมือหยุดทำงานทันที	แบตเตอรี่ความร้อนสูง	ปล่อยให้แบตเตอรี่เย็นลง
ไม่สามารถใส่แบตเตอรี่ได้	พยายามใส่แบตเตอรี่ในที่ที่นอกเหนือจากที่ระบุไว้สำหรับเครื่องมือ	กรุณาใส่แบตเตอรี่ชนิดที่มีโวลต์หลายระดับหรือรุ่น BSL18xx

2. เครื่องชาร์จ


อาการ	สาเหตุที่เป็นไปได้	การแก้ไข
ไฟแสดงการชาร์จกระพริบสีม่วงอย่างรวดเร็ว และแบตเตอรี่จะไม่เริ่มชาร์จ	แบตเตอรี่ไม่ได้ใส่อย่างถูกต้อง มีวัตถุแปลกปลอมในช่องแบตเตอรี่ หรือที่ใส่แบตเตอรี่	ใส่แบตเตอรี่ให้แน่นหนา นำวัตถุแปลกปลอมออก
ไฟแสดงการชาร์จกระพริบสีแดง และแบตเตอรี่จะไม่เริ่มชาร์จ	แบตเตอรี่ไม่ได้ใส่อย่างถูกต้อง แบตเตอรี่ความร้อนสูง	ใส่แบตเตอรี่ให้แน่นหนา หากปล่อยทิ้งไว้ แบตเตอรี่จะเริ่มชาร์จอัตโนมัติหากอุณหภูมิลดลง แต่ลักษณะเช่นนี้อาจลดอายุการใช้งานของแบตเตอรี่ด้วย แนะนำว่าทำให้แบตเตอรี่เย็นในพื้นที่ที่ระบายอากาศได้ดี พ้นจากแสงแดดโดยตรงก่อนทำการชาร์จ
เวลาการใช้งานแบตเตอรี่จะสั้นลงแม้ว่าจะชาร์จแบตเตอรี่จนเต็ม	อายุการใช้งานของแบตเตอรี่ลดลง	เปลี่ยนแบตเตอรี่อันใหม่
แบตเตอรี่ใช้เวลานานในการชาร์จ	อุณหภูมิของแบตเตอรี่ เครื่องชาร์จ หรือสภาพแวดล้อมโดยรอบต่ำมาก	ชาร์จแบตเตอรี่ในอาคารหรือในสภาพแวดล้อมอื่นที่อบอุ่นขึ้น
	ช่องระบายอากาศของเครื่องชาร์จอุดตัน ทำให้อุณหภูมิภายในร้อนเกิน	หลีกเลี่ยงการอุดตันของช่องระบายอากาศ
	พัดลมทำความเย็นไม่ทำงาน	ติดต่อศูนย์บริการที่ได้รับอนุญาตของ HIKOKI เพื่อทำการซ่อมแซม
ไฟ USB ปิดและอุปกรณ์ USB จะหยุดชาร์จ	ความจุไฟฟ้าของแบตเตอรี่อยู่ในระดับต่ำ	เปลี่ยนแบตเตอรี่เป็นตัวที่มีความจุไฟฟ้าเหลืออยู่ เสียบปลั๊กเครื่องชาร์จเข้ากับเต้ารับไฟฟ้า
ไฟ USB ไม่ได้ปิดแม้ว่าอุปกรณ์ USB จะทำการชาร์จเสร็จแล้วก็ตาม	ไฟ USB สว่างเป็นสีเขียวเพื่อระบุว่าสามารถทำการชาร์จ USB ได้	ข้อนี้ไม่ใช่การทำงานผิดปกติ
ไม่แน่ใจว่าสถานะการชาร์จของอุปกรณ์ USB คืออะไร หรือการชาร์จนั้นเสร็จสิ้นแล้วหรือไม่	ไฟ USB ไม่ได้ปิดแม้เมื่อการชาร์จนั้นเสร็จสิ้นแล้วก็ตาม	ตรวจสอบอุปกรณ์ USB ที่กำลังชาร์จเพื่อยืนยันสถานะการชาร์จ
การชาร์จอุปกรณ์ USB ระวังกลางคืน	เสียบเครื่องชาร์จเข้ากับเต้ารับไฟฟ้าขณะกำลังชาร์จอุปกรณ์ USB โดยใช้แบตเตอรี่เป็นแหล่งจ่ายไฟ	ข้อนี้ไม่ใช่การทำงานผิดปกติ เครื่องชาร์จจะระวังการชาร์จของ USB เป็นเวลาประมาณ 5 วินาที เมื่อแหล่งจ่ายไฟมีความแตกต่างกัน
	เสียบแบตเตอรี่เข้าไปในเครื่องชาร์จขณะกำลังชาร์จอุปกรณ์ USB โดยใช้เต้ารับไฟฟ้าเป็นแหล่งจ่ายไฟ	

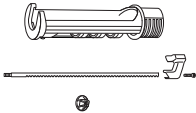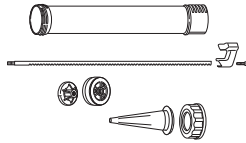อาการ	สาเหตุที่เป็นไปได้	การแก้ไข
การชาร์จอุปกรณ์ USB ระบายกลางคืนเมื่อกำลังชาร์จแบตเตอรี่และอุปกรณ์ USB พร้อมกัน	แบตเตอรี่ชาร์จไฟเต็มแล้ว	ข้อนี้ไม่ใช่การทำงานผิดปกติ เครื่องชาร์จจะรับการชาร์จของ USB เป็นเวลาประมาณ 5 วินาที เพื่อตรวจสอบว่าแบตเตอรี่ทำการชาร์จเสร็จสิ้นแล้วหรือไม่
จะไม่เริ่มการชาร์จอุปกรณ์ USB ขณะกำลังชาร์จแบตเตอรี่และอุปกรณ์ USB พร้อมกัน	ประจุไฟฟ้าของแบตเตอรี่คงเหลือต่ำมาก	ข้อนี้ไม่ใช่การทำงานผิดปกติ เมื่อความจุไฟฟ้าของแบตเตอรี่ถึงค่าระดับหนึ่ง จะเริ่มทำการชาร์จ USB อัตโนมัติ

	AC18DA	
	(NNSC)	(NN)
	1	1
	1	-
	1	1
	1	1

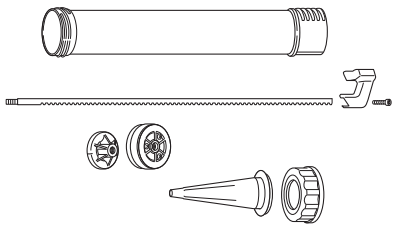


378712

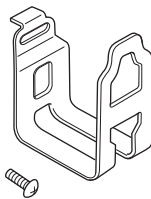


373035
373378




875769

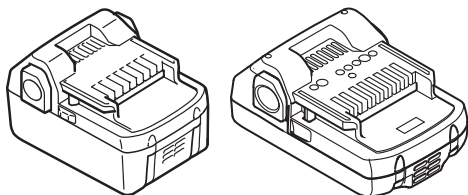


BSL18..

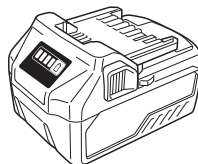


BSL36..18

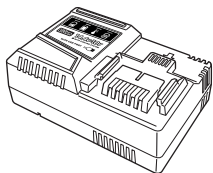



UC18YSL3 (14.4 V-18 V)



329897

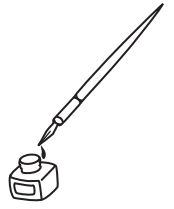

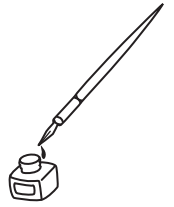

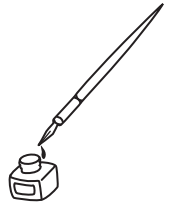

Koki Holdings Co., Ltd.

Shinagawa Intercity Tower A, 15-1, Konan 2-chome,
Minato-ku, Tokyo, Japan