

HIKOKI

充电式起子电钻
Cordless Driver Drill

DB 10DL



保留备用
Keep for future reference



使用说明书
Handling instructions

目次

电动工具通用安全警告	2	选购附件（分开销售）.....	8
充电式起子电钻机使用上的注意		用途.....	8
事项.....	4	电池的拆卸 / 安装法.....	8
锂离子电池使用注意事项.....	5	充电.....	8
锂离子电池运输.....	6	作业之前.....	10
符号.....	6	使用方法.....	10
规格.....	7	维护和检查.....	13
标准附件.....	7		

电动工具通用安全警告

⚠ 警告！

阅读所有警告和所有说明。

不遵照以下警告和说明会导致电击、着火和 / 或严重伤害。

保存所有警告和说明书以备查阅。

在所有下列的警告中术语“电动工具”指市电驱动(有线)电动工具或电池驱动(无线)电动工具。

1) 工作场地的安全

- a) 保持工作场地清洁和明亮。
混乱和黑暗的场地会引发事故。
- b) 不要在易爆环境，如有易燃液体、气体或粉尘的环境下操作电动工具。
电动工具产生的火花会点燃粉尘或气体。
- c) 让儿童和旁观者离开后操作电动工具。
注意力不集中会使操作者失去对工具的控制。

2) 电气安全

- a) 电动工具插头必须与插座相配。绝不能以任何方式改装插头。需接地的电动工具不能使用任何转换插头。
未经改装的插头和相配的插座将减少电击危险。
- b) 避免人体接触接地表面，如管道、散热片和冰箱。
如果你身体接地会增加电击危险。
- c) 不得将电动工具暴露在雨中或潮湿环境中。
水进入电动工具将增加电击危险。
- d) 不得滥用电线。绝不能用电线搬运、拉动电动工具或拔出其插头。使电线远离热源、油、锐边或运动部件。
受损或缠绕的软线会增加电击危险。

- e) 当在户外使用电动工具时，使用适合户外使用的外接软线。
适合户外使用的软线将减少电击危险。
- f) 如果在潮湿环境下操作电动工具是不可避免的，应使用剩余电流动作保护器（RCD）。
使用RCD可减小电击危险。

3) 人身安全

- a) 保持警觉，当操作电动工具时关注所从事的操作并保持清醒。当你感到疲倦，或在有药物、酒精或治疗反应时，不要操作电动工具。
在操作电动工具时瞬间的疏忽会导致严重人身伤害。
- b) 使用个人防护装置。始终佩戴护目镜。
安全装置，诸如适当条件下使用防尘面具、防滑安全鞋、安全帽、听力防护等装置能减少人身伤害。
- c) 防止意外起动。确保开关在连接电源和 / 或电池盒、拿起或搬运工具时处于关断位置。
手指放在已接通电源的开关上或开关处于接通时插入插头可能会导致危险。
- d) 在电动工具接通之前，拿掉所有调节钥匙或扳手。
遗留在电动工具旋转零件上的扳手或钥匙会导致人身伤害。
- e) 手不要伸展得太长。时刻注意立足点和身体平衡。
这样在意外情况下能很好地控制电动工具。
- f) 着装适当。不要穿宽松衣服或佩戴饰品。让衣服、手套和头发远离运动部件。
宽松衣服、佩饰或长发可能会卷入运动部件中。
- g) 如果提供了与排屑、集尘设备连接用的装置，要确保它们连接完好且使用得当。
使用这些装置可减少尘屑引起的危险。

4) 电动工具使用和注意事项

- a) 不要滥用电动工具，根据用途使用适当的电动工具。
选用适当设计的电动工具会使你工作更有效、更安全。
- b) 如果开关不能接通或关断工具电源，则不能使用该电动工具。
不能用开关来控制的电动工具是危险的且必须进行修理。
- c) 在进行任何调节、更换附件或贮存电动工具之前，必须从电源上拔掉插头和 / 或使电池盒与工具脱开。
这种防护性措施将减少工具意外起动的危险。
- d) 将闲置不用的电动工具贮存在儿童所及范围之外，并且不要让不熟悉电动工具或对这些说明不了解的人操作电动工具。
电动工具在未经培训的用户手中是危险的。
- e) 保养电动工具。检查运动件是否调整到位或卡住，检查零件破损情况和影响电动工具运行的其他状况。如有损坏，电动工具应在使用前修理好。
许多事故由维护不良的电动工具引发。

中文

- f) 保持切削刀具锋利和清洁。
保养良好的有锋利切削刃的刀具不易卡住而且容易控制。
- g) 按照使用说明书，考虑作业条件和进行的作业来使用电动工具、附件和工具的刀头等。
将电动工具用于那些与其用途不符的操作可能会导致危险。

5) 电池式工具使用和注意事项

- a) 只用制造商规定的充电器充电。
将适用于某种电池盒的充电器用到其他电池盒时会发生着火危险。
- b) 只使用配有特制电池盒的电动工具。
使用其他电池盒会发生损坏和着火危险。
- c) 当电池盒不用时，将它远离其他金属物体，例如回形针、硬币、钥匙、钉子、螺钉或其他小金属物体，以防一端与另一端连接。
电池端部短路会引起然烧或火灾。
- d) 在滥用条件下，液体会从电池中溅出；避免接触。如果无意间碰到了，用水冲洗。如果液体碰到了眼睛，还要寻求医疗帮助。
从电池中溅出的液体会发生腐蚀或燃烧。

6) 维修

- a) 将你的电动工具送交专业维修人员，使用同样的备件进行修理。
这样将确保所维修的电动工具的安全性。

注意！

不可让儿童和体弱人士靠近工作场所。

应将不使用的工具存放在儿童和体弱人士接触不到的地方。

充电式起子电钻机使用上的注意事项

1. 务请在 $0^{\circ}\text{C} \sim 40^{\circ}\text{C}$ 的温度下进行充电。在 $0^{\circ}\text{C} \sim 40^{\circ}\text{C}$ 以外的温度进行充电，可能会导致不正确的充电并缩短电池的寿命。
最适合于充电的温度是 $20 \sim 25^{\circ}\text{C}$ 。
2. 充电结束时，在下节电池充电之前，请先将充电器放置大约 15 分钟。
切勿将电池充电超过 2 小时。
3. 勿让杂质进入充电式电池连结口内。
4. 切勿拆卸充电式电池与充电器。
5. 切勿使充电式电池短路。使电池短路将会造成很大的电流和过热，从而烧坏电池。
6. 请勿将电池丢入火中。
电池受热将会爆炸。
7. 在墙壁、地板或天花板上钻孔时，应检查是否有埋设的电源线等。
8. 充电后电池寿命太短不够使用时，请尽快将电池送往经销店。请勿将用过的电池乱丢。

9. 请勿使用耗竭了的电池，否则会损坏充电器。
10. 请勿将异物插入充电器的通风口。
若将金属异物或易燃物插入通风口的话，将会引起触电事故或使充电器受损。

锂离子电池使用注意事项

本电池专供起子电钻机使用。切勿使用其它的强力电动工具（例如电圆锯、手提电锯、圆盘研磨机及鼓风机等）。

为延长使用期限，锂离子电池备配停止输出的保护功能。

若是在使用本产品时发生下列 1 至 3 的情况，即使按下开关，马达也可能停止。这并非故障，而是启动保护功能的结果。

1. 在残留的电池电力即将耗尽时，马达会停止。
在这种情况下，请立即予以充电。
 2. 若工具超过负荷，马达亦可能停止。在这种情况下，请松开工具的开关，试着消除超过负荷的原因。之后您就可以再度使用。
 3. 若电池在过载工作情况下过热，电池电力可能会中止。
在这种情况下，请停止使用电池，让电池冷却。之后您就可以再度使用。
- 此外，请留心下列的警告及注意事项。

警告！

为防止发生电池漏电、发热、冒烟、爆炸及提前点燃，请确保留意下列事项。

1. 确保电池上没有堆积削屑及灰尘。
 - 在工作时确定削屑及灰尘没有掉落在电池上。
 - 确定所有工作时掉落在电动工具上的削屑和灰尘没有堆积在电池上。
 - 请勿将未使用的电池存放在曝露于削屑和灰尘的位置。
 - 在存放电池之前，请清除任何可能附着在上面的削屑和灰尘，并请切勿将它与金属零件（螺丝、钉子等）存放在一起。
2. 请勿以钉子等利器刺穿电池、以铁锤敲打、踩踏、丢掷电池，或将其剧烈撞击。
3. 切勿使用明显损坏或变形的电池。
4. 使用电池时请勿颠倒电极。
5. 请勿直接连接电源插座或汽车点烟器孔座。
6. 请依规定方式使用电池，切勿移作他用。
7. 如果已过了再充电时间，电池仍无法完成充电，请立即停止继续再充电。
8. 请勿将电池放置于高温或高压处，例如微波炉、烘干机或高压容器内。
9. 在发觉有渗漏或异味时，请勿接近远离火源。
10. 请勿在会产生强烈静电的地方使用。
11. 如有电池渗漏、异味、发热、褪色或变形，或在使用、充电或存放时出现任何异常，请立即将它从装备或电池充电器拆下，并停止使用。
12. 请勿浸泡电池或让任何液体流入电池内部。导电液体进入（如水），可能造成电池损坏，甚至可导致火灾或爆炸。将电池存放在阴凉、干燥的地方，远离易燃物品。必须避免将电池置于腐蚀性气体环境中。

注意！

1. 若电池渗漏出的液体进入您的眼睛，请勿搓揉眼睛，并以自来水等干净清水充分冲洗，立刻送医。
若不加以处理，液体可能会导致眼睛不适。
2. 若液体渗漏至您的皮肤或衣物，请立即以自来水等清水冲洗。
上述情况可能会使皮肤受到刺激。
3. 若初次使用电池时发现生锈、异味、过热、褪色、变形及 / 或其它异常情况时，请勿使用并将该电池退还给供货商或厂商。


锂离子电池运输

当运输一个锂离子电池，请注意以下预防措施。

警告！

告知运输公司，包装内包含一个锂离子电池，告知该公司其功率输出并且要按照运输公司的指引安排运输。

- 功率输出超过 100 Wh 的锂离子电池被视作危险物品运输分类并且需要特别申请程序。
- 对于境外运输，您必须遵守国际法以及输入国的规章和条例。

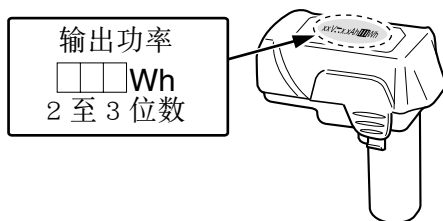

符号

警告！

如下所示的符号用于本机。使用前请务必理解其含意。

	为降低伤害风险，用户必须阅读使用说明书
--	---------------------

规格

电动工具




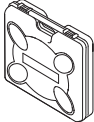
无负荷速度		0-400 /min	
能力	钻孔	木料 (厚 18 mm)	18 mm
	螺丝 紧固	机用螺丝	6 mm
		木螺丝	6 mm (直径) × 38 mm (长) (应有导孔)
充电式电池		BCL1015 : 锂离子 DC 10.8 V (1.5 Ah 3 节) BCL1030C : 锂离子 DC 10.8 V (3.0 Ah 3 节)	
重量		0.8 kg	

充电器

型式	UC10SL2	UC10SFL
充电电压	10.8 V	10.8 V
重量	0.35 kg	0.35 kg


标准附件

DB10DL 的附件请参见以下列表。

十字槽头螺丝刀头 (2 号 × 50 L)		1
电池 (BCL1015 或 BCL1030C)	 BCL1030C BCL1015	1
充电器 (UC10SFL 或 UC10SL2)	 UC10SFL UC10SL2	1
塑料盒		1

选购附件（分开销售）

1. 电池

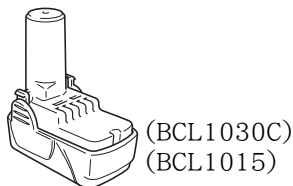

用途

- 旋紧和拆除机用螺丝、木螺丝、自攻螺丝等。
- 钻各种金属。

电池的拆卸 / 安装法

1. 电池的拆卸法

请先紧抓住把手、然后再推压电池插销以拆下电池（参照图 1 和 图 2）。

注意！

切勿使电池短路。

2. 电池的安装法

插入电池时请注意极性（参照图 2）。

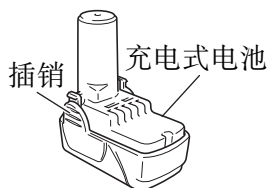


图 1

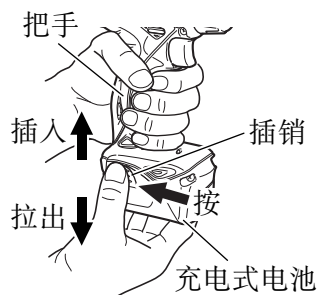


图 2

充电

使用电动工具之前，按下述方法将电池进行充电。

1. 将充电器的电源线连接到插座。

2. 将电池插入充电器。

请将电池有铭牌的那面朝向充电器的铭牌放置，并按下电池，直到与底板接触为止（参照图 3）。

插入电池后充电器会亮起（指示灯亮起）。

充电式电池



图 3

注意！

如果指示灯不亮，则请从插座上拔出电源线插头并检查电池的安装情况。

指示灯熄灭表示电池已经充好。

注意！

作业停止后，如电池（因晒太阳等原因）而变热，充电指示灯会不亮。这时，应先让电池冷却，然后再充电。

○ 关于充电时间

表 1 给出了根据电池类型所需的充电时间。

表 1 20°C 下的充电时间（分钟近似值）

电池 \ 充电器	UC10SFL	UC10SL2
BCL1015	约 40 分钟	约 30 分钟
BCL1030C	约 80 分钟	约 60 分钟

注：

根据环境温度的不同，充电时间可能会有所变化。

3. 从电源插座拔下充电器的电源线。

4. 握紧充电器并取出电池。

注：

充电后，先将电池从充电器中取出，然后妥善保存。

关于新电池等的放电

因新的和长期未使用的充电式电池内部的化学物质无活性，故第一次和第二次使用时其放电能力可能较低。这是暂时现象，这种电池充电 2 - 3 次后即可恢复其充电所需的正常时间。

较长时间保持电池性能的方法

(1) 在电池电力完全耗尽之前进行充电。

感到电动工具的能力变弱时，请停止使用并给电池充电。若您继续使用电动工具并耗尽电力，电池可能会损坏或其使用寿命缩短。

(2) 避免在高温环境中充电。

使用后充电式电池的温度将迅速升高。若使用后立即对这种电池进行充电，其内部化学物质会劣化，电池使用寿命将缩短。请稍等片刻，待电池冷却后再进行充电。

注意！

○ 连续使用电池充电器时，电池充电器将会升温，进而生成导致故障的因素。一旦充电完成，请闲置 15 分钟后再进行下次充电。

○ 如果电池安装正确而电池充电器无法工作，则电池或充电器可能会出现故障。请将其带往授权的维修中心进行检测。

作业之前

1. 工作环境的准备和检查
请按下列注意事项检查工作环境是否适当。

使用方法

较长时间保持电池性能的方法

- 在电池电力完全耗尽之前进行充电。
感到电动工具的能力变弱时，请停止使用并给电池充电。若您继续使用电动工具并耗尽电力，电池可能会损坏或其使用寿命缩短。

1. 安装钻头。
请务必按照下列步骤安装击入式钻头（图 4）。

- (1) 向前拉导套。
- (2) 将钻头插入套筒的六角孔。
- (3) 松开导套，导套随后返回到原始位置。

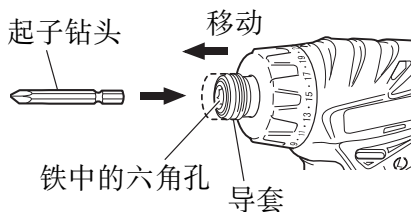


图 4

注意！

如果导套没有返回到原始位置，则说明没有正确安装钻头。

2. 拆卸钻头。
请按照钻头安装方法相反的要点对进行拆卸。
3. 自动主轴锁机械结构
主开关关闭时，钻头锁定到位，电动工具作为手动起子机使用。
4. 确认电池安装正确。
5. 确认离合器转盘的位置（请参照图 5）
本机的旋紧转矩可根据离合器转盘的位置设定来调节。

- (1) 当把本机作为起子使用时，请将离合器转盘上的“1、5、9……21”中的某个数字或黑点与机身外侧上的三角标记对齐。
- (2) 当把本机作为钻机来使用时，请将离合器转盘的钻机标记“▲”与机身外侧上的三角标记对齐。

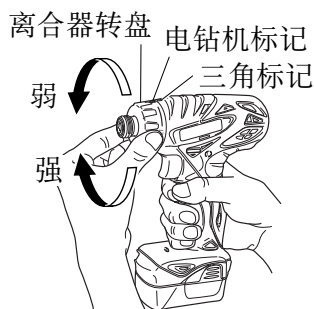


图 5

注意！

- 离合器转盘不能设在数字“1、5、9……21”之间或黑点之间。
- 当离合器转盘位于“21”和钻机标记中部的黑线之间时,请勿使用本机,否则会造成损坏。(请参照图 6)

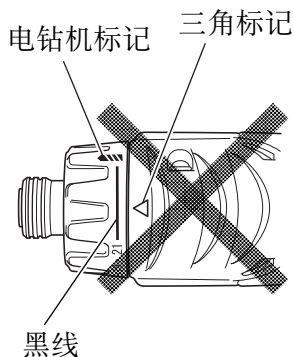


图 6

6. 旋紧转矩的调节

(1) 旋紧转矩

旋紧转矩的强度应与螺丝直径相对应。如果转矩过大,螺丝头则会损坏或受损。务请按螺丝直径来调节离合器转盘的位置。

(2) 旋紧转矩的指示 (请参照图 5)

螺丝类型及受紧固的材料不同,则旋紧转矩也不同。

本机采用离合器转盘上的“1、5、9……21”以及黑点来指示旋紧转矩。旋紧转矩在位置“1”时最小,在最大数字处时最大。

(3) 调节旋紧转矩 (请参照图 5)

转动离合器转盘并使离合器转盘上的数字“1、5、9……21”或点与机身外侧上的三角标记对齐。按所需转矩将离合器转盘向小转矩或大转矩方向调节。

注意！

- 当把本机用作钻机时,马达可能会被锁住而停止转动。请在使用起子电钻机过程中不要锁住马达。
- 如果马达被锁定,则请立即关闭电源。如果马达被锁定一段时间,则马达或电池可能烧毁。
- 如果冲击时间过长,螺丝可能会因旋紧力过大而折断。

7. 检查旋转方向

按选择按钮的 R (右) 侧,钻头便会顺时针(从后方看时)旋转;按选择按钮的 L (左侧)则使钻头逆时针旋转。(请参照图 7)。(机身上标有 (L) 和 (R) 标记。)

8. 开关操作

- 压下扳机开关,则本机旋转;松开扳机,则本机停止。
- 钻机的转速可通过改变扳机开关的扣动幅度来控制:幅度小则速度低,幅度大则速度高。

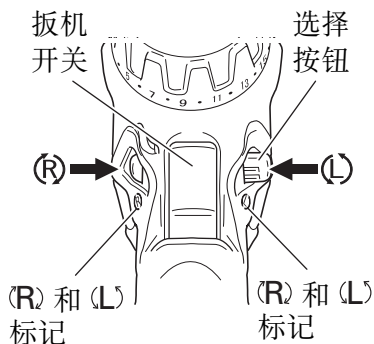


图 7

中文

注：

当马达即将起转时，可能会产生一种嗡嗡声。这只不过是一种噪音，而非机器故障。

9. 使用照明灯

按下扳机开关即可点亮灯光。按下扳机开关的同时，灯光会一直亮着。松开扳机开关时灯光则会熄灭。（图 8）



图 8

注意！

请勿直视照明灯，否则可能导致损伤眼睛。

10. 使用范围和建议

表 2 给出了基于本机机械结构的各种可用工作范围。

表 2

工作		建议
钻孔	木料	用于钻孔。
螺丝紧固	机用螺丝	使用与螺丝直径相配的钻头或套筒。
	木螺丝	钻好导孔后使用。

11. 选择旋紧力的方法

表 3

用途		离合器转盘的位置
螺丝紧固	机用螺丝	1 - 21
	木螺丝	1 -
钻孔	木料	

注意！

表 3 中给出的选择例子应作为一般标准来考虑。在实际工作中使用的都是不同类型的紧固螺丝和受紧固的材料，因此理应进行适当的调节。

注：

在寒冷环境（0℃以下）中使用 BCL1015 电池有时会造成旋紧扭矩变弱以及作业量的减少。但是，这只是暂时现象，在电池变热后将会恢复正常。

12. 电池电平警示灯

可在电动工具于无负荷状态时，按下扳机开关检查电池的电压。电池电力太低时，电池电平警示灯会亮起。若出现这样的情况，请将电池充电。（图 9）

注：

- 电池电平警示灯所显示的电压可能会因环境温度、电池特性等因素而变化，因此仅做为参考之用。
 - 在电动工具超过负荷时，电池电平警示灯也可能会亮起。这并非代表电池电力太低。
- 请在工具无负荷的状态下检查电池的电压。

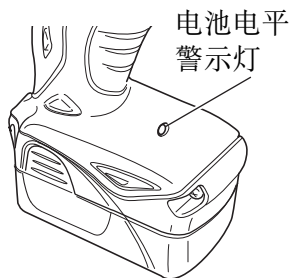


图 9

维护和检查

1. 检查工具

由于使用已经钝化的工具会降低效率并可能引起马达故障，因此一旦注意到磨损情况，就应及早磨快或更换工具。

2. 检查安装螺钉

要经常检查安装螺钉是否紧固妥善。若发现螺钉松了，应立即重新扭紧，否则会导致严重的事故。

3. 电动机的维护

电动机绕线是电动工具的“心脏部”应仔细检查有无损伤，是否被油液或水沾湿。

4. 清理外部

冲击电钻机沾污时，用干软布或沾肥皂水的布擦拭。切勿使用氯溶液、汽油或稀释剂，以免塑胶部分溶化。

5. 收藏

冲击电钻机应收藏于温度低于 40℃ 和小孩拿不到的地方。

注意！

在操作和维修电动工具时，必须遵守贵国制定的安全的有关规则和标准。

关于HiKOKI牌无线电动工具的重要通知：

请确保始终使用我们指定的正版电池。如果使用我们指定以外的电池，或对电池进行拆卸和改动（例如拆卸和更换电池组件或其他内部部件），那么我们无法保证我们无线电动工具的安全性和使用性能。

CONTENTS

GENERAL POWER TOOL SAFETY WARNINGS	14
PRECAUTIONS FOR CORDLESS DRIVER DRILL.....	17
CAUTION ON LITHIUM-ION BATTERY	17
REGARDING LITHIUM-ION BATTERY TRANSPORTATION	19
SYMBOL.....	19
SPECIFICATIONS.....	19
STANDARD ACCESSORIES	20
OPTIONAL ACCESSORIES (sold separately).....	20
APPLICATIONS.....	20
BATTERY REMOVAL/INSTALLATION	21
CHARGING	21
PRIOR TO OPERATION.....	22
HOW TO USE.....	23
MAINTENANCE AND INSPECTION	26

GENERAL POWER TOOL SAFETY WARNINGS

WARNING

Read all safety warnings and all instructions.

Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term “power tool” in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

- 1) **Work area safety**
 - a) **Keep work area clean and well lit.**
Cluttered or dark areas invite accidents.
 - b) **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.**
Power tools create sparks which may ignite the dust or fumes.
 - c) **Keep children and bystanders away while operating a power tool.**
Distractions can cause you to lose control.

- 2) **Electrical safety**
 - a) **Power tool plugs must match the outlet.**
Never modify the plug in any way.
Do not use any adapter plugs with earthed (grounded) power tools.
Unmodified plugs and matching outlets will reduce risk of electric shock.
 - b) **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.**
There is an increased risk of electric shock if your body is earthed or grounded.

- c) **Do not expose power tools to rain or wet conditions.**
Water entering a power tool will increase the risk of electric shock.
- d) **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool.**
Keep cord away from heat, oil, sharp edges or moving parts.
Damaged or entangled cords increase the risk of electric shock.
- e) **When operating a power tool outdoors, use an extension cord suitable for outdoor use.**
Use of a cord suitable for outdoor use reduces the risk of electric shock.
- f) **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.**
Use of an RCD reduces the risk of electric shock.

3) Personal safety

- a) **Stay alert, watch what you are doing and use common sense when operating a power tool.**
Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.
A moment of inattention while operating power tools may result in serious personal injury.
- b) **Use personal protective equipment. Always wear eye protection.**
Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- c) **Prevent unintentional starting. Ensure the switch is in the off position before connecting to power source and/or battery pack, picking up or carrying the tool.**
Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
- d) **Remove any adjusting key or wrench before turning the power tool on.**
A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- e) **Do not overreach. Keep proper footing and balance at all times.**
This enables better control of the power tool in unexpected situations.
- f) **Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts.**
Loose clothes, jewellery or long hair can be caught in moving parts.
- g) **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.**
Use of dust collection can reduce dust-related hazards.

4) Power tool use and care

- a) **Do not force the power tool. Use the correct power tool for your application.**
The correct power tool will do the job better and safer at the rate for which it was designed.
- b) **Do not use the power tool if the switch does not turn it on and off.**
Any power tool that cannot be controlled with the switch is dangerous and must be repaired.

English

- c) **Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools.**

Such preventive safety measures reduce the risk of starting the power tool accidentally.

- d) **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.**
Power tools are dangerous in the hands of untrained users.

- e) **Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation.**

If damaged, have the power tool repaired before use.

Many accidents are caused by poorly maintained power tools.

- f) **Keep cutting tools sharp and clean.**

Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.

- g) **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.**

Use of the power tool for operations different from those intended could result in a hazardous situation.

5) **Battery tool use and care**

- a) **Recharge only with the charger specified by the manufacturer.**

A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.

- b) **Use power tools only with specifically designated battery packs.**

Use of any other battery packs may create a risk of injury and fire.

- c) **When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.**

Shorting the battery terminals together may cause burns or a fire.

- d) **Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.**

Liquid ejected from the battery may cause irritation or burns.

6) **Service**

- a) **Have your power tool serviced by a qualified repair person using only identical replacement parts.**

This will ensure that the safety of the power tool is maintained.

CAUTION

Keep children and infirm persons away.

When not in use, tools should be stored out of reach of children and infirm persons.

PRECAUTIONS FOR CORDLESS DRIVER DRILL

1. Always charge the battery at a temperature of 0 – 40°C. Charging the battery at temperatures outside the range of 0 – 40°C may prevent proper charging and reduce battery life.
The most suitable temperature for charging is that of 20 – 25°C.
2. When one charging is completed, leave the charger for about 15 minutes before the next charging of battery.
Do not charge the battery more than 2 hours.
3. Do not allow foreign matter to enter the hole for connecting the rechargeable battery.
4. Never disassemble the rechargeable battery and charger.
5. Never short-circuit the rechargeable battery. Short-circuiting the battery will cause a great electric current and overheat. It results in burn or damage to the battery.
6. Do not dispose of the battery in fire.
If the battery is burnt, it may explode.
7. When drilling in wall, floor or ceiling, check for buried electric power cord, etc.
8. Bring the battery to the shop from which it was purchased as soon as the post-charging battery life becomes too short for practical use. Do not dispose of the exhausted battery.
9. Using an exhausted battery will damage the charger.
10. Do not insert object into the air ventilation slots of the charger.
Inserting metal objects or inflammables into the charger air ventilation slots will result in electrical shock hazard or damaged charger.

CAUTION ON LITHIUM-ION BATTERY

This battery is exclusively for the driver drill. Never use with any other heavy-duty power tools (i.e. Circular saw, Reciprocating saw, Disc grinder and Blower etc.).

To extend the lifetime, the lithium-ion battery equips with the protection function to stop the output.

In the cases of 1 to 3 described below, when using this product, even if you are pulling the switch, the motor may stop. This is not the trouble but the result of protection function.

1. When the battery power remaining runs out, the motor stops.
In such case, charge it up immediately.
2. If the tool is overloaded, the motor may stop. In this case, release the switch of tool and eliminate causes of overloading. After that, you can use it again.
3. If the battery is overheated under overload work, the battery power may stop.
In this case, stop using the battery and let the battery cool. After that, you can use it again.

Furthermore, please heed the following warning and caution.

WARNING

In order to prevent any battery leakage, heat generation, smoke emission, explosion and ignition beforehand, please be sure to heed the following precautions.

English

1. **Make sure that swarf and dust do not collect on the battery.**
 - **During work make sure that swarf and dust do not fall on the battery.**
 - **Make sure that any swarf and dust falling on the power tool during work do not collect on the battery.**
 - **Do not store an unused battery in a location exposed to swarf and dust.**
 - **Before storing a battery, remove any swarf and dust that may adhere to it and do not store it together with metal parts (screws, nails, etc.).**
2. **Do not pierce battery with a sharp object such as a nail, strike with a hammer, step on, throw or subject the battery to severe physical shock.**
3. **Do not use an apparently damaged or deformed battery.**
4. **Do not use the battery in reverse polarity.**
5. **Do not connect directly to an electrical outlets or car cigarette lighter sockets.**
6. **Do not use the battery for a purpose other than those specified.**
7. **If the battery charging fails to complete even when a specified recharging time has elapsed, immediately stop further recharging.**
8. **Do not put or subject the battery to high temperatures or high pressure such as into a microwave oven, dryer, or high pressure container.**
9. **Keep away from fire immediately when leakage or foul odor are detected.**
10. **Do not use in a location where strong static electricity generates.**
11. **If there is battery leakage, foul odor, heat generated, discolored or deformed, or in any way appears abnormal during use, recharging or storage, immediately remove it from the equipment or battery charger, and stop use.**
12. **Do not immerse the battery or allow any fluids to flow inside. Conductive liquid ingress, such as water, can cause damage resulting in fire or explosion. Store your battery in a cool, dry place, away from combustible and flammable items. Corrosive gas atmospheres must be avoided.**

CAUTION

1. **If liquid leaking from the battery gets into your eyes, do not rub your eyes and wash them well with fresh clean water such as tap water and contact a doctor immediately.**
If left untreated, the liquid may cause eye-problems.
2. **If liquid leaks onto your skin or clothes, wash well with clean water such as tap water immediately.**
There is a possibility that this can cause skin irritation.
3. **If you find rust, foul odor, overheating, discolor, deformation, and/or other irregularities when using the battery for the first time, do not use and return it to your supplier or vendor.**

REGARDING LITHIUM-ION BATTERY TRANSPORTATION


When transporting a lithium-ion battery, please observe the following precautions.

WARNING

Notify the transporting company that a package contains a lithium-ion battery, inform the company of its power output and follow the instructions of the transportation company when arranging transport.

- Lithium-ion batteries that exceed a power output of 100 Wh are considered to be in the freight classification of Dangerous Goods and will require special application procedures.
- For transportation abroad, you must comply with international law and the rules and regulations of the destination country.

Power Output
 □□□ Wh
 2 to 3 digit number

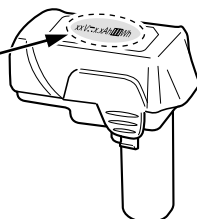

SYMBOL

WARNING

The following show symbols used for the machine. Be sure that you understand their meaning before use.



To reduce the risk of injury, user must read instruction manual.

SPECIFICATIONS

POWER TOOL

No-load speed		0-400 /min	
Capacity	Drilling	Wood (Thickness 18 mm)	18 mm
		Machine screw	6 mm
	Driving	Wood screw	6 mm (diameter) × 38 mm (length) (Requires a pilot hole)
Rechargeable battery		BCL1015: Li-ion DC 10.8 V (1.5 Ah 3 cells) BCL1030C: Li-ion DC 10.8 V (3.0 Ah 3 cells)	
Weight		0.8 kg	





English

CHARGER

Model	UC10SL2	UC10SFL
Charging voltage	10.8 V	10.8 V
Weight	0.35 kg	0.35 kg


STANDARD ACCESSORIES

See the list below to check the accessories for DB10DL.

Plus driver bit (No. 2 × 50L)		1
Battery (BCL1015 or BCL1030C)	 BCL1030C BCL1015	1
Charger (UC10SFL or UC10SL2)	 UC10SFL UC10SL2	1
Plastic case		1

OPTIONAL ACCESSORIES (sold separately)

1. Battery

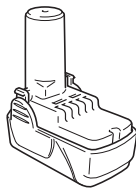

(BCL1030C)
(BCL1015)

APPLICATIONS

- Driving and removing of machine screws, wood screws, tapping screws, etc.
- Drilling of various woods.

BATTERY REMOVAL/INSTALLATION

1. Battery removal
Hold the handle tightly and push the battery latch to remove the battery (see **Figs. 1 and 2**).

CAUTION

Never short-circuit the battery.

2. Battery installation
Insert the battery while observing its polarities (see **Fig. 2**).

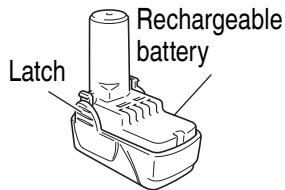


Fig. 1

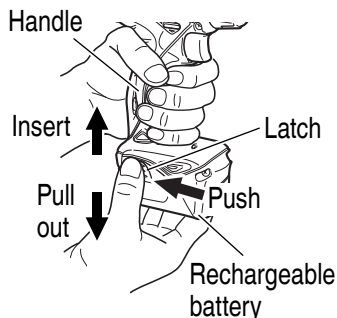


Fig. 2

CHARGING

Before using the power tool, charge the battery as follows.

1. Connect the charger power cord to the receptacle
2. Insert the battery in the charger
Position the battery so that the nameplate faces toward the nameplate of the charger and press in the battery until it comes into contact with the bottom plate (See **Fig. 3**).
Inserting the battery will turn on the charger (the pilot lamp lights up).

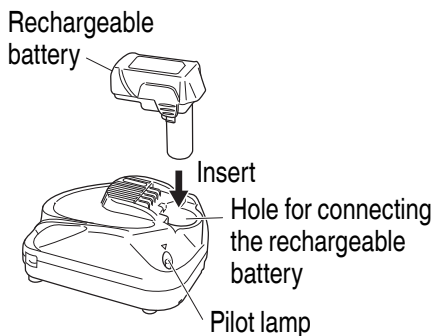


Fig. 3

CAUTION

If the pilot lamp does not light up, pull out the power cord from the receptacle and check the battery mounting condition.

The pilot lamp goes off to indicate that the battery is fully charged.

CAUTION

If the battery is heated due to direct sunlight, etc., just after operation, the charger pilot lamp may not light. At that time cool the battery first, then start charging.

English

- Regarding recharging time

Table 1 shows the recharging time required according to the type of battery.

Table 1 Recharging time (approx. min.) at 20°C

Battery \ Charger	UC10SFL	UC10SL2
BCL1015	Approx. 40 min	Approx. 30 min
BCL1030C	Approx. 80 min	Approx. 60 min

NOTE

The recharging time may vary according to the ambient temperature.

3. Disconnect the charger's power cord from the receptacle.
4. Hold the charger firmly and pull out the battery.

NOTE

Be sure to pull out the battery from the charger after use, and then keep it.

Regarding electric discharge in case of new batteries, etc.

As the internal chemical substance of new batteries and batteries that have not been used for an extended period is not activated, the electric discharge might be low when using them the first and second time. This is a temporary phenomenon, and normal time required for recharging will be restored by recharging the batteries 2 – 3 times.

How to make the batteries perform longer

- (1) Recharge the batteries before they become completely exhausted.
When you feel that the power of the tool becomes weaker, stop using the tool and recharge its battery. If you continue to use the tool and exhaust the electric current, the battery may be damaged and its life will become shorter.
- (2) Avoid recharging at high temperatures.
A rechargeable battery will be hot immediately after use. If such a battery is recharged immediately after use, its internal chemical substance will deteriorate, and the battery life will be shortened. Leave the battery and recharge it after it has cooled for a while.

CAUTION

- **When the battery charger has been continuously used, the battery charger will be heated, thus constituting the cause of the failures. Once the charging has been completed, give 15 minutes rest until the next charging.**
- **If the battery charger does not work while the battery is mounted correctly, it is probable that the battery or charger is malfunctioning. Take it to your authorized Service Center.**

PRIOR TO OPERATION

1. Setting up and checking the work environment
Check if the work environment is suitable by following the precautions.

HOW TO USE

How to make the batteries perform longer

- Recharge the batteries before they become completely exhausted. When you feel that the power of the tool becomes weaker, stop using the tool and recharge its battery. If you continue to use the tool and exhaust the electric current, the battery may be damaged and its life will become shorter.

1. Installing the bit
Always follow the following procedure to install driver bit. (Fig. 4)

- (1) Pull the guide sleeve forward.
- (2) Insert the bit into the hexagonal hole in the socket.
- (3) Release the guide sleeve and it returns to its original position.

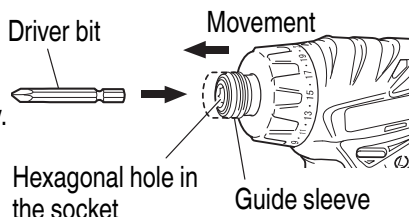


Fig. 4

CAUTION

If the guide sleeve does not return to its original position, then the bit is not installed properly.

2. Removing the bit
Please do the opposite point on the method of installing bit.
3. Automatic spindle-lock mechanism
When the main switch is off, the bit is locked in place, and the tool can be used as a manual screwdriver.
4. Confirm that the battery is mounted correctly
5. Confirm the clutch dial position (See Fig. 5)

- (1) The tightening torque of this unit can be adjusted according to the clutch dial position, at which the clutch dial is set.
- (1) When using this unit as a screwdriver, line up the one of the numbers “1, 5, 9 ... 21” on the clutch dial, or the black dots, with the triangle mark on the outer body.
- (2) When using this unit as a drill, align the clutch dial drill mark “▲” with the triangle mark on the outer body.

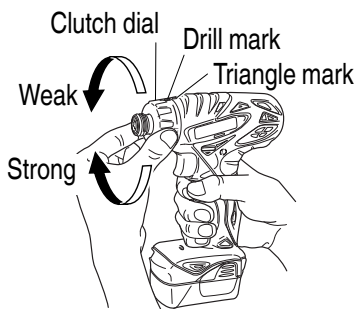


Fig. 5

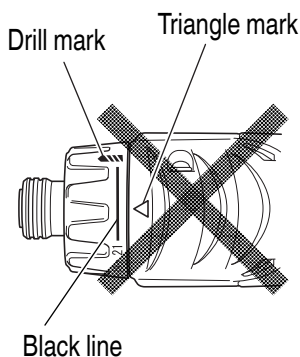


Fig. 6

CAUTION

- The clutch dial cannot be set between the numerals “1, 5, 9 ... 21” or the black dots.
- Do not use with the clutch dial numeral between “21” and the black line at the middle of the drill mark. Doing so may cause damage (See Fig. 6).

English

6. Tightening torque adjustment

(1) Tightening torque

Tightening torque should correspond in its intensity to the screw diameter. When too strong torque is used, the screw head may be broken or be injured. Be sure to adjust the clutch dial position according to the screw diameter.

(2) Tightening torque indication (See **Fig. 5 on page 23**)

The tightening torque differs depending on the type of screw and the material being tightened.

The unit indicates the tightening torque with the numbers “1, 5, 9 ... 21” on the clutch dial, and a black dots. The tightening torque at position “1” is the weakest and the torque is strongest at the highest number.

(3) Adjusting the tightening torque (See **Fig. 5 on page 23**)

Rotate the clutch dial and line up the numbers “1, 5, 9 ... 21” on the clutch dial, or the dots, with the triangle mark on the outer body. Adjust the clutch dial in the weak or the strong torque direction according to the torque you need.

CAUTION

- **The motor rotation may be locked to cease while the unit is used as drill. While operating the driver drill, take care not to lock the motor.**
- **If the motor is locked, immediately turn the power off. If the motor is locked for a while, the motor or battery may be burnt.**
- **Too long hammering may cause the screw broken due to excessive tightening.**

7. Check the rotational direction

The bit rotates clockwise (viewed from the rear side) by pushing the R-side of the selector button.

The L-side of the selector button is pushed to turn the bit counterclockwise (See **Fig. 7**) (The (L) and (R) marks are provided on the body).

8. Switch operation

- When the trigger switch is depressed, the tool rotates. When the trigger is released, the tool stops.
- The rotational speed of the drill can be controlled by varying the amount that the trigger switch is pulled. Speed is low when the trigger switch is pulled slightly and increases as the trigger switch is pulled more.

NOTE

A buzzing noise is produced when the motor is about to rotate; This is only a noise, not a machine failure.

9. Using the light

Pull the trigger switch to light up the light. The light keeps on lighting while the trigger switch is being pulled. The light goes out after releasing the trigger switch. (**Fig. 8**)

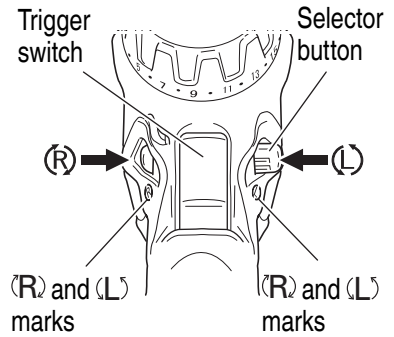


Fig. 7

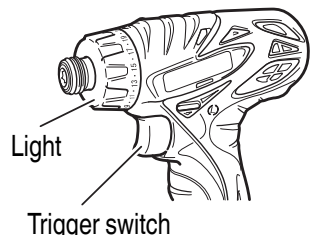


Fig. 8

CAUTION

Do not look directly into the light. Such actions could result in eye injury.



10. The scope and suggestions for uses
The usable scope for various types of work based on the mechanical structure of this unit is shown in **Table 2**.

Table 2

	Work	Suggestions
Drilling	Wood	Use for drilling purpose.
Driving	Machine screw	Use the bit or socket matching the screw diameter.
	Wood screw	Use after drilling a pilot hole.

11. How to select tightening torque

Table 3

	Use	Clutch dial position
Driving	Machine screw	1 - 21
	Wood screw	1 - 
Drilling	Wood	

CAUTION


The selection examples shown in Table 3 should be considered as general standard. As different types of tightening screws and different materials to be tightened are used in actual works proper adjustments are naturally necessary.

NOTE

The use of the battery BCL1015 in a cold condition (below 0 degree Centigrade) can sometimes result in the weakened tightening torque and reduced amount of work. This, however, is a temporary phenomenon, and returns to normal when the battery warms up.

12. Battery Level Warning Lamp

The battery level can be checked by pulling the trigger switch while the power tool is in a no-load state. The battery level warning lamp lights when the battery power is very low. If this happens, charge the battery. (**Fig. 9**)

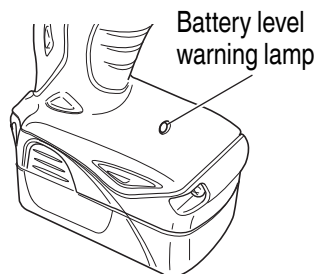**Fig. 9****NOTE**

- The level at which the battery level warning lamp lights may vary due to the ambient temperature, characteristics of the battery, etc. and is intended only as a guide.
- The battery level warning lamp may light when the power tool is overloaded. This does not mean that the battery power is very low.

Be sure to check the battery level while the tool is in a no-load state.

MAINTENANCE AND INSPECTION


1. Inspecting the tool
Since use of a dull tool will degrade efficiency and cause possible motor malfunction, sharpen or replace the tool as soon as abrasion is noted.
2. Inspecting the mounting screws
Regularly inspect all mounting screws and ensure that they are properly tightened. Should any of the screws be loose, retighten them immediately. Failure to do so could result in serious hazard.
3. Maintenance of the motor
The motor unit winding is the very “heart” of the power tool.
Exercise due care to ensure the winding does not become damaged and/or wet with oil or water.
4. Cleaning on the outside
When the driver drill is stained, wipe with a soft dry cloth or a cloth moistened with soapy water. Do not use chloric solvents, gasoline or paint thinner, for they melt plastics.
5. Storage
Store the driver drill in a place in which the temperature is less than 40°C and out of reach of children.

CAUTION

In the operation and maintenance of power tools, the safety regulations and standards prescribed in each country must be observed.

Important notice on the batteries for the HiKOKI cordless power tools

Please always use one of our designated genuine batteries. We cannot guarantee the safety and performance of our cordless power tool when used with batteries other than these designated by us, or when the battery is disassembled and modified (such as disassembly and replacement of cells or other internal parts).

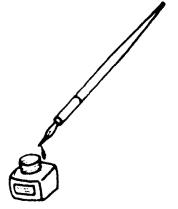

服务中心
高壹工机商业(上海)有限公司
上海市闵行区浦江工业园区三鲁路3585号7幢3楼

制造商
广东高壹工机有限公司
广东省广州市番禺区化龙镇工业路富裕围工业村

Koki Holdings Co., Ltd.

101
编号：C99167826 G
发行日期：2021年1月
中国印刷