


充电式冲击扳手 Cordless Impact Wrench

WR 36DH



保留备用
Keep for future reference

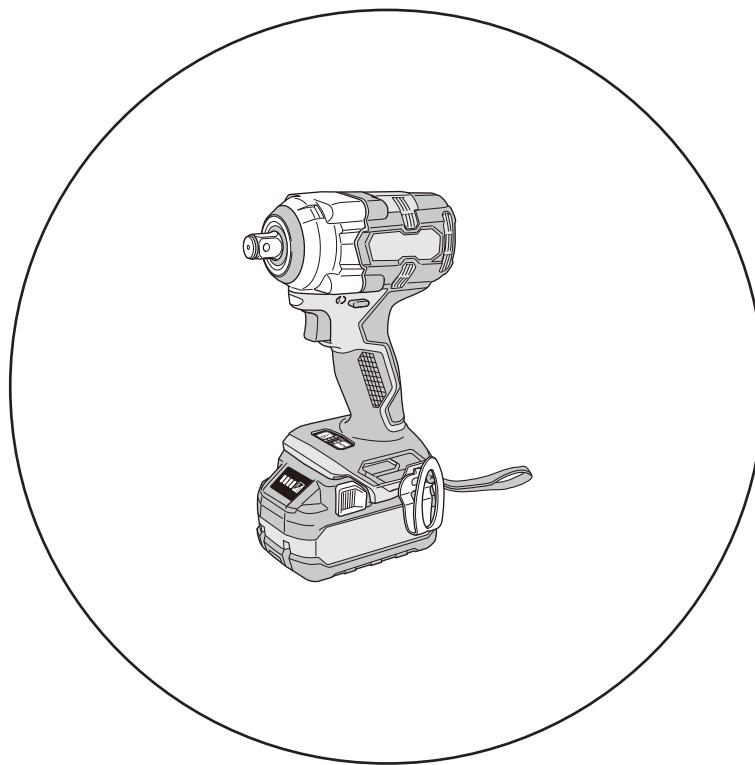

使用说明书 Handling instructions

目次

电动工具通用安全警告.....	2
充电式冲击扳手安全警告.....	5
锂离子电池使用注意事项.....	7
锂离子电池运输.....	9
USB设备连接器使用注意事项(UC18YSL3).....	9
防尘和防水功能注意事项.....	9
符号.....	10
零件名称.....	11
规格.....	12
标准附件.....	13
用途.....	13
电池的拆卸 / 安装法.....	14
充电.....	14
作业之前.....	17
使用方法.....	19
操作上的注意事项.....	26
自定义功能.....	28
USB设备的充电方法(UC18YSL3).....	29
维护和检查.....	31
故障排除.....	32
选择附件.....	33

电动工具通用安全警告

警告！

阅读电动工具附带的所有安全警告、说明、插图和规格说明。

不遵照以下说明会导致电击、着火和 / 或严重伤害。

保存所有警告和说明书以备查阅。

在所有下列的警告中术语“电动工具”指市电驱动（有线）电动工具或电池驱动（无线）电动工具。

1) 工作场地的安全

a) 保持工作场地清洁和明亮。

混乱和黑暗的场地会引发事故。

b) 不要在易爆环境，如有易燃液体、气体或粉尘的环境下操作电动工具。

电动工具产生的火花会点燃粉尘或气体。

c) 让儿童和旁观者离开后操作电动工具。
注意力不集中会使操作者失去对工具的控制。

2) 电气安全

a) 电动工具插头必须与插座相配。绝不能以任何方式改装插头。需接地的电动工具不能使用任何转换插头。
未经改装的插头和相配的插座将减少电击危险。

b) 避免人体接触接地表面, 如管道、散热片和冰箱。
如果你身体接地会增加电击危险。

c) 不得将电动工具暴露在雨中或潮湿环境中。
水进入电动工具将增加电击危险。

d) 不得滥用电线。绝不能用电线搬运、拉动电动工具或拔出其插头。使电线远离热源、油、锐边或运动部件。
受损或缠绕的软线会增加电击危险。

e) 当在户外使用电动工具时, 使用适合户外使用的外接软线。
适合户外使用的软线将减少电击危险。

f) 如果在潮湿环境下操作电动工具是不可避免的, 应使用剩余电流动作保护器 (RCD)。
使用 RCD 可减小电击危险。

3) 人身安全

a) 保持警觉, 当操作电动工具时关注所从事的操作并保持清醒。当你感到疲倦, 或在有药物、酒精或治疗反应时, 不要操作电动工具。
在操作电动工具时瞬间的疏忽会导致严重人身伤害。

b) 使用个人防护装置。始终佩戴护目镜。
安全装置, 诸如适当条件下使用防尘面具、防滑安全鞋、安全帽、听力防护等装置能减少人身伤害。

c) 防止意外起动。确保开关在连接电源和 / 或电池盒、拿起或搬运工具时处于关断位置。
手指放在已接通电源的开关上或开关处于接通时插入插头可能会导致危险。

d) 在电动工具接通之前, 拿掉所有调节钥匙或扳手。
遗留在电动工具旋转零件上的扳手或钥匙会导致人身伤害。

e) 手不要伸展得太长。时刻注意立足点和身体平衡。
这样在意外情况下能很好地控制电动工具。

f) 着装适当。不要穿宽松衣服或佩戴饰品。让你的头发和衣服远离运动部件。
宽松衣服、佩饰或长发可能会卷入运动部件中。

g) 如果提供了与排屑、集尘设备连接用的装置, 要确保它们连接完好且使用得当。

使用这些装置可减少尘屑引起的危险。

- h) 请勿因频繁使用工具的熟悉感而掉以轻心，忽视工具的安全性原则。粗心的行为可能会导致瞬间发生严重伤害。

4) 电动工具使用和注意事项

- a) 不要滥用电动工具，根据用途使用适当的电动工具。
选用适当设计的电动工具会使你工作更有效、更安全。
- b) 如果开关不能接通或关断工具电源，则不能使用该电动工具。
不能用开关来控制的电动工具是危险的且必须进行修理。
- c) 在进行任何调整、更换附件或存放电动工具之前，必须从电源上拔掉插头和 / 或取下电池盒（如果可拆卸）。
这种防护性措施将减少工具意外起动的危险。
- d) 将闲置不用的电动工具贮存在儿童所及范围之外，并且不要让不熟悉电动工具或对这些说明不了解的人操作电动工具。
电动工具在未经培训的用户手中是危险的。
- e) 维护电动工具和附件。检查运动件是否调整到位或卡住，检查零件破损情况和影响电动工具运行的其他状况。如有损坏，电动工具应在使用前修理好。
许多事故由维护不良的电动工具引发。
- f) 保持切削刀具锋利和清洁。
保养良好的有锋利切削刃的刀具不易卡住而且容易控制。
- g) 按照使用说明书，考虑作业条件和进行的作业来使用电动工具、附件和工具的刀头等。
将电动工具用于那些与其用途不符的操作可能会导致危险。
- h) 保持手柄和抓握表面干燥、清洁，远离油和油脂。
如果手柄和抓握表面湿滑，可能导致在发生意外情况时，无法安全操作和控制工具。

5) 电池式工具使用和注意事项

- a) 只用制造商规定的充电器充电。
将适用于某种电池盒的充电器用到其他电池盒时会发生着火危险。
- b) 只使用配有特制电池盒的电动工具。
使用其他电池盒会发生损坏和着火危险。
- c) 当电池盒不用时，将它远离其他金属物体，例如回形针、硬币、钥匙、钉子、螺钉或其他小金属物体，以防一端与另一端连接。
电池端部短路会引起燃烧或火灾。
- d) 在滥用条件下，液体会从电池中溅出；避免接触。如果无意间碰到了，用水冲洗。如果液体碰到了眼睛，还要寻求医疗帮助。
从电池中溅出的液体会发生腐蚀或燃烧。
- e) 请勿使用损坏或改装的电池盒或工具。
损坏或改装的电池可能会引发突发状况，导致火灾、爆炸或受伤。

- f) 请勿将电池盒或工具暴露在有火源或高温环境中。
如果暴露在有火源或130度以上高温的环境中，可能引起爆炸。
- g) 请完全按照充电说明进行操作，不要在说明中规定的温度范围外的环境中对电池盒或工具充电。
充电不当或在规定温度范围外的环境中充电可能会导致电池损坏，增加发生火灾的风险。

6) 维修

- a) 将你的电动工具送交专业维修人员，使用同样的备件进行修理。
这样将确保所维修的电动工具的安全性。
- b) 请勿维修已损坏的电池盒。
需由制造商或经授权的服务供应商进行维修。

注意！

不可让儿童和体弱人士靠近工作场所。
应将不使用的工具存放在儿童和体弱人士接触不到的地方。

充电式冲击扳手安全警告

1. 在执行紧固件可能会接触到暗线的操作时，通过绝缘的抓紧表面拿住电动工具。接触“带电”电线的紧固件会使电动工具的裸露金属部件“带电”，并可能使操作员遭到电击。
2. 这是用于拧紧和旋松螺栓和螺母的手提式工具。请不要用於其它作业。
3. 如长时间进行作业，请使用耳塞。
4. 操作时请确保牢牢握住工具。
否则可能导致事故或受伤。(图1)

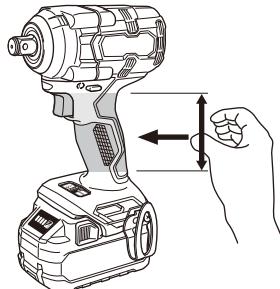


图1

5. 检查套筒是否破裂或损坏，破裂或损坏的套筒很危险。 使用前请检查套筒。

6. 用套筒销和套筒环固定套筒。

如果固定套筒的套筒销或套筒环损坏，套筒就可能会从冲击扳手上脱落，这是很危险的。请勿使用变形、磨损、破裂等损坏的套筒销或套筒环。务必将套筒销和套筒环装在正确的位置。

7. 检查拧紧扭矩。

拧紧螺丝所需的适当转矩取决于螺栓的材料、尺寸和等级等。

由此冲击扳手产生的拧紧扭矩还取决于螺栓的材料、尺寸、装上套筒的本冲击扳手的使用时间等。电池刚充电和将耗尽时的转矩也有些许不同。请用转矩扳手检查是否用适当的转矩拧紧了螺栓。

8. 切换旋转方向前请停下本冲击扳手。切换旋转方向前请放开开关，并等待冲击扳手停下。

9. 切勿触摸转动部分。

请勿让转动着的套筒部分接近手或身体的其它部分，否则会被割伤或被夹入套筒。长时间持续使用套筒后请注意不要触摸套筒，因为套筒会变得很热，从而可能会被烫伤。

10. 使用万向接头时切勿在没有负载的情况下转动冲击扳手。如果在没有连接负载的情况下转动套筒，万向接头会使套筒转动失控。从而可能会使您受伤，或者套筒的转动可能会强烈震动冲击扳手使其掉下。

11. 如果发现本机正在产生异常高温、工作不正常或出现异常噪音，请立即停止使用，并关闭电源。请让本机的经销商或HiKOKI授权服务中心检查和修理。操作出现异常而依然继续使用时，可能会造成人身伤害。

12. 如果本机意外跌落或撞击其他物体，请彻底检查其是否发生破裂、破损或变形等。如果本机破裂、破损或变形，可能会造成人身伤害。

13. 在较高的位置作业时，请确保下方没有人，并注意下方的情况。

14. 务请在0°C – 40°C的温度下进行充电。

温度低于0°C将会导致充电过度，极其危险。电池不能在高于40°C的温度下充电。

最适合于充电的温度是20°C – 25°C。

15. 不要连续使用充电器。

一次充电完毕后，在15分钟内不要再次使用该充电器对电池充电。

16. 勿让杂质进入电池连结口内。

17. 切勿拆卸电池与充电器。

18. 切勿使电池短路。

使电池短路将会造成很大的电流和过热，从而烧坏电池。

19. 请勿将电池丢入火中。

电池受热将会爆炸。

20. 请勿将异物插入充电器的通风口。

若将金属异物或易燃物插入通风口的话，将会引起触电事故或使充电器受损。

21. 充电后电池寿命太短不够使用时, 请尽快将电池送往经销店。请勿将用过的电池乱丢。
22. 请勿使用耗竭了的电池, 否则会损坏充电器。
23. 确认已紧紧装上电池。如果松驰则电池可能会脱开, 并造成事故。
24. 请勿使用工具或电池端子(电池安装部位)明显变形的产品。
否则, 安装电池后可能会短路, 造成冒烟或起火。
25. 请清除工具端子(电池安装部位)上的削屑和灰尘。
 使用前请确保电池上没有堆积削屑和灰尘。
 在使用过程中, 请尽量避免工具上的削屑或灰尘掉落在电池上。
 暂时不使用工具时或使用后, 应将工具存放在不会掉落削屑或灰尘的地方。
否则可能短路, 造成冒烟或起火。
26. 请在-5°C – 40°C 环境下使用本工具及电池。

锂离子电池使用注意事项

为延长使用期限, 锂离子电池配备停止输出的保护功能。
若是在使用本产品时发生下列 1 至 3 的情况, 即使按下开关, 马达也可能停止。这并非故障, 而是启动保护功能的结果。

1. 在残留的电池电力即将耗尽时, 马达会停止。
在这种情况下, 请立即予以充电。
2. 若工具超过负荷, 马达亦可能停止。在这种情况下, 请松开工具的开关, 试着消除超过负荷的原因。之后您就可以再度使用。
3. 若电池在过载工作情况下过热, 电池电力可能会中止。
在这种情况下, 请停止使用电池, 让电池冷却。之后您就可以再度使用。

此外, 请留心下列的警告及注意事项。

警告!

为防止发生电池漏电、发热、冒烟、爆炸及提前点燃, 请确保留意下列事项。

1. 确保电池上没有堆积削屑及灰尘。
 在工作时确定削屑及灰尘没有掉落在电池上。
 确定所有工作时掉落在电动工具上的削屑和灰尘没有堆积在电池上。
 请勿将未使用的电池存放在曝露于削屑和灰尘的位置。
 在存放电池之前, 请清除任何可能附着在上面的削屑和灰尘, 并请切勿将它与金属零件(螺丝、钉子等)存放在一起。
2. 请勿以钉子等利器刺穿电池、以铁锤敲打、踩踏、丢掷电池, 或将其剧烈撞击。
3. 切勿使用明显损坏或变形的电池。
4. 请依规定方式使用电池, 切勿移作他用。
5. 如果已过了再充电时间, 电池仍无法完成充电, 请立即停止继续再充电。

6. 请勿将电池放置于高温或高压处，例如微波炉、烘干机或高压容器内。
7. 在发觉有渗漏或异味时，请勿接近远离火源。
8. 请勿在会产生强烈静电的地方使用。
9. 如有电池渗漏、异味、发热、褪色或变形，或在使用、充电或存放时出现任何异常，请立即将它从装备或电池充电器拆下，并停止使用。
10. 请勿浸泡电池或让任何液体流入电池内部。导电液体进入（如水），可能造成电池损坏，甚至可导致火灾或爆炸。将电池存放在阴凉、干燥的地方，远离易燃物品。必须避免将电池置于腐蚀性气体环境中。

注意！

1. 若电池渗漏出的液体进入您的眼睛，请勿搓揉眼睛，并以自来水等干净清水充分冲洗，立刻送医。
若不加以处理，液体可能会导致眼睛不适。
2. 若液体渗漏至您的皮肤或衣物，请立即以自来水等清水冲洗。
上述情况可能会使皮肤受到刺激。
3. 若初次使用电池时发现生锈、异味、过热、褪色、变形及 / 或其它异常情况时，请勿使用并将该电池退还给供货商或厂商。

警告！

如果导电异物接触到锂离子电池的端子，电池可能短路，并导致火灾。存放锂离子电池时，请务必遵循下列注意事项。

- 切勿在存放盒中放置导电的残片，钉子，以及导线，如铁线和铜线。
- 为防止发生短路，应将电池装入工具中或者在存放时牢固地插入电池盖，直至看不到通风口。（参照图2）

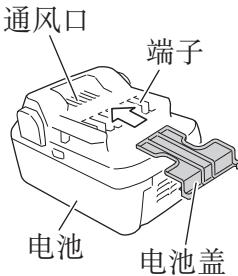


图2

○ 使用蓝牙功能的注意事项

蓝牙的频段为2.4GHz。干扰范围约为10m。

在使用此无线通信功能之前，请确保干扰范围内没有任何其他无线发射器

或系统，也没有任何正在使用的工业、科学、医疗或其他此类设备。如果在使用此无线通信功能时出现电磁干扰，请移至其他位置或关闭无线通信。

锂离子电池运输

当运输一个锂离子电池，请注意以下预防措施。

警告！

告知运输公司，包装内包含一个锂离子电池，告知该公司其功率输出并且要按照运输公司的指引安排运输。

- 功率输出超过100Wh的锂离子电池被视作危险物品运输分类并且需要特别申请程序。
- 对于境外运输，您必须遵守国际法以及输入国的规章和条例。

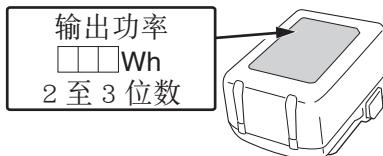


图3

USB设备连接器使用注意事项(UC18YSL3)

发生意外情况时，本产品连接的USB中保存的数据可能发生损坏或丢失。使用本产品前，请务必备份USB设备中的数据。

请注意，如USB设备中存储的数据发生损坏、丢失或连接的设备发生损坏，本公司概不负责。

防尘和防水功能注意事项

本产品符合国际IEC标准中规定的电气设备IP56防护等级（防尘和防水）。(装配有电池时，仅重要的组件符合IP56防护等级。)

[IP代码描述]

IP56

5	<p>防水等级 强水流从各方向喷射时务必不会对设备产生不良影响（防水）。 (使用直径12.5mm的喷嘴时,请在距离3米左右处进行喷射,每分钟喷射100L水,每个方向喷射约3分钟。)</p>
6	<p>固体异物侵入防护等级 完全杜绝灰尘落入对设备造成不良干扰（防尘）。 (将设备在实验室中静置8小时,使用搅拌泵以2千克/立方米的速度将滑石粉颗粒的直径搅拌至$75 \mu\text{m}$以下,使其漂浮在空中。)</p>

虽然设备已配备了防尘、防水设计，但并不能排除发生故障的可能性。请勿将设备放置在可能会存在大量灰尘、溅到大量水或雨水的环境中。

符号

敬告！

如下所示的符号用于本机。使用前请务必理解其含意。

	为降低伤害风险，用户必须阅读使用说明书
— — —	直流电
V	额定电压
n_0	空载转速
/min	每分钟的振动次数
	警告

零件名称

1. 电动工具


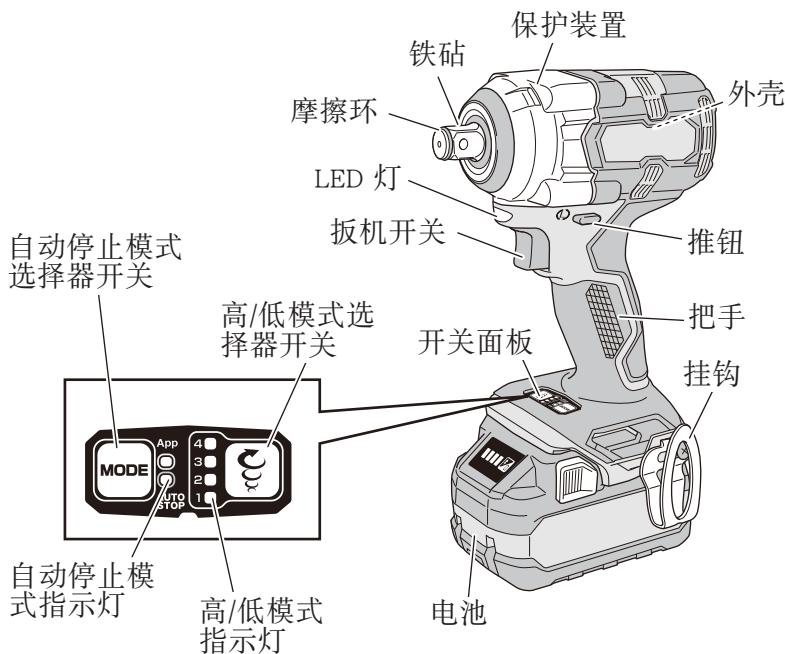


图4


2. 电池

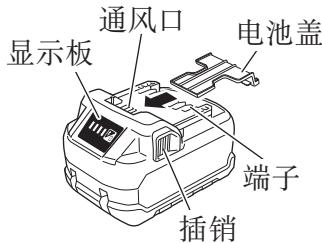

<BSL36A18BX>
(选购件)

图5

3. 电池充电器

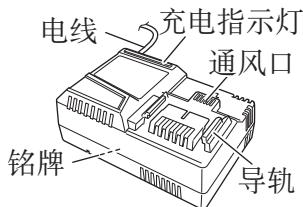

<UC18YSL3>

(选购件)

图6

规格

电动工具

型式	WR36DH	
电压	36V	
空载转速	模式4	0—3000/min
	模式3	0—2400/min
	模式2	0—1800/min
	模式1	0—1200/min
能力	普通螺栓	M10—M20
	高强度抗拉螺栓	M10—M16
拧紧扭矩	最大380N·m	
方榫尺寸	12.7mm	
电池*1	BSL36A18BX: 锂离子 36V / 18V (2.5Ah / 5.0Ah 10节)	
重量	2.0kg (安装 BSL36A18BX)	

*1 本工具不适用以下电池 (BSL3660/3626/3620、BSL18xx和BSL14xx系列)。

充电器

型式	UC18YSL3
充电电压	14.4 – 18V
重量	0.6kg

标准附件

除了主机 (1台) 外, 产品包中还包括表中所列的附件。

表1

		WR36DH (NNP)
充电器 (UC18YSL3)		—
电池 (BSL36A18BX)		—
电池盖		—
外壳 (可堆叠)		1

用途

- 拧紧和旋松用于固定结构部件的任何类型的螺栓和螺母。

电池的拆卸 / 安装法

1. 电池的拆卸法

请先紧抓住把手、然后再推压电池插销以拆下电池 (参照 图7)。

注意！

切勿使电池短路。

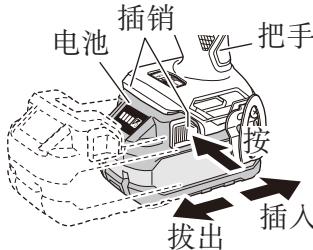


图7

2. 电池的安装法

插入电池时请注意极性 (参照图7)。

充电

使用电动工具之前，按下述方法将电池进行充电。

<UC18YSL3 (另售)>

1. 将充电器的电源线连接到插座。

将充电器插头连接到插座时，充电指示灯闪烁红色。(参照表2)

2. 将电池插入充电器。

如图8所示，将电池紧紧地插入充电器。

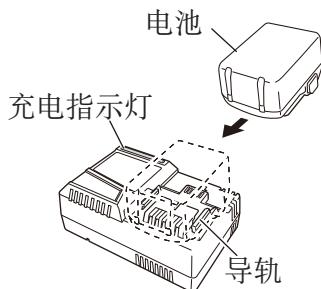


图8

3. 充电

将电池插入充电器后，充电开始，并且充电器指示灯将呈蓝色闪烁。
电池完全充电后，充电器上的充电指示灯将点亮呈绿色。(参照表2)

(1) 充电指示灯的指示状态

根据充电器或可充电电池的情况，充电指示灯的显示如表2所示。

表2: 充电指示灯的指示状态

每隔0.5秒开/关一次 (红色) 	充电前*1
每隔1秒点亮0.5秒 (蓝色) 	充电量低于50%
每隔0.5秒点亮1秒 (蓝色) 	充电量低于80%
持续亮起 (蓝色) 	充电量高于80%
持续亮起 (发出持续蜂鸣声: 约6秒) (绿色) 	充电完成
每隔0.3秒开/关一次 (红色) 	过热而等待*2
每隔0.1秒开/关一次 (发出断续蜂鸣声: 约2秒) (紫色) 	无法充电*3

注:

*1 如果连好充电器后指示灯依旧闪烁红色，请检查并确认电池已完全插入。

*2 电池过热。无法充。

虽然继续放置在原处，电池将在冷却后开始充电，但最好是将电池取出并放置在阴凉、通风良好的位置处冷却。

*3 电池或充电器有问题。

- 请紧紧插入电池。

- 并确认电池安装部位或端部无异物堵塞。若无异物，则可能电池或充电器发生故障。请带去经授权的维修中心检查。

中文

- 连续使用时，电池充电器温度将提升，因此会导致出现故障。充电完成后，在下次充电之前，请使其冷却5分钟。

(2) 关于电池的温度和充电时间（参照表3）

表3

型式	UC18YSL3	
电池类型	锂离子电池	
充电电压	14.4 – 18V	
电池可充电温度	0 °C – 50 °C	
电池容量的大致充电时间（20°C下）	1.5Ah	15分钟
	2.0Ah	20分钟
	2.5Ah	25分钟
	3.0Ah	20分钟 (BSL1430C、BSL1830C: 30分钟)
	4.0Ah	26分钟 (BSL1840M: 40分钟)
	5.0Ah	32分钟
	6.0Ah	38分钟
	1.5Ah (×2节)	20分钟
多伏电池容量的大致充电时间（20°C下）	2.5Ah (×2节)	32分钟
	4.0Ah (×2节)	52分钟
电池数量	4 – 10	
USB充电电压	5V	
USB充电电流	2A	
重量	0.6kg	

注:

- 充电时间可能会因环境温度和电源电压而异。
- 充电时间较长

- 环境温度过低时，充电时间会延长。请在温暖的场所中（如室内）给电池充电。
- 请勿堵塞排气孔。否则会导致内部过热，从而降低充电器的性能。
- 冷却扇未运转，请联系HiKOKI授权服务中心进行维修。

4. 从电源插座拔下充电器的电源线。
5. 握紧充电器并取出电池。

注:

充电后，先将电池从充电器中取出，然后妥善保存。

关于新电池的放电

新电池内部的化学物质未被激活或电池长时间不使用时，初次或第二次使用时需要将其放电至较低电量。这只是暂时现象，将电池充电2-3次即可恢复为充电所需的正常时间。

较长时间保持电池性能的方法

- (1) 在电池电力完全耗尽之前进行充电。
感到电动工具的能力变弱时，请停止使用并给电池充电。若您继续使用电动工具并耗尽电力，电池可能会损坏或其使用寿命缩短。
- (2) 避免在高温环境中充电。
使用后可充电电池的温度将迅速升高。若使用后立即对这种电池进行充电，其内部化学物质会劣化，电池使用寿命将缩短。请稍等片刻，待电池冷却后再进行充电。

作业之前

1. 准备和检查工作环境
确认工作场所满足使用注意事项中所述的所有条件。
2. 选择适合螺栓的套筒
使用的套筒务必适合要拧紧的螺栓。使用不适合的套筒不仅不能充分拧紧，还会损伤套筒或螺母。
磨损或变形的六角或方孔套筒不能为螺母或铁砧提供适当的固定拧紧力，从而导致拧紧扭矩的损失。
请注意套筒孔的磨损，并在进一步磨损前更换。

中文

3. 安装套筒

(1) 将O型环滑出凹槽，将套筒孔与铁砧孔对齐，将铁砧插入套筒。（图9）

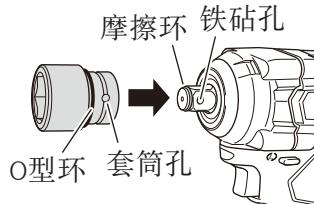


图9

(2) 将销插入套筒。（图10）

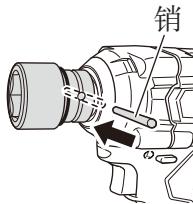


图10

(3) 确保销不会脱落后，将O型环装在套筒的凹槽上。（图11，图12）

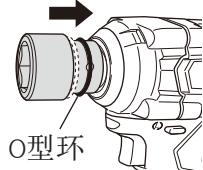


图11

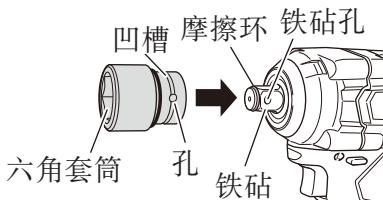


图12

注意！

- 请使用操作手册和HiKOKI商品说明书中指定的附件。否则可能会导致事故或受伤。
- 务必将套筒紧紧装入铁砧。否则套筒可能会脱落，并造成受伤。

- 将O型环滑出套筒的凹槽时，小心不要将销掉落或丢失。

4. 确认电池安装正确。

使用方法

1. 检查旋转方向

推动选择按钮的R(右)侧，钻头便会顺时针(从后方看时)旋转按推钮的L(左)侧使钻头逆时针旋转。(请参照图13)。(机身上标有(L)和(R)标记。)

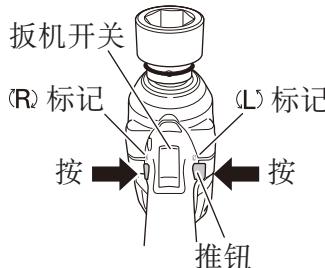


图13

注意！

冲击扳手运转时，无法切换推钮。如需切换推钮，将冲击扳手停止运转后再切换推钮。

2. 开关操作

- 压下扳机开关，则本机旋转。松开扳机开关，则本机停止。
- 可通过改变扳机开关的扣动幅度来控制转速。幅度小则转速低，幅度大则转速高。
- 松开扳机开关时，制动器将立即停止。

注：

当马达即将起转时，可能会产生一种嗡嗡声。这只不过是一种噪音，而非机器故障。

3. 拧紧和拧松螺栓

首先必须选择与螺栓或螺母相对应的六角扳手。接下来，将套筒安装到铁钻上，用六角扳手咬住要拧紧的螺母。与螺栓成直线地握住工具，按电源开关冲击螺母几秒钟。

如果螺母松动地安装到螺栓上，螺栓可能随着螺母转动，则说明未正确拧紧。在此情况下，停止冲击螺母，用扳手按住螺母头后重新启动冲击，或者手动拧紧螺栓和螺母，以防它们滑动。

4. 使用挂钩

挂钩用于在工作时将电动工具挂到腰带上。

警告！

使用挂钩时，牢固挂好挂钩，以防意外掉落。如果电动工具掉落，可能造成意外伤害。

注意！

- 将电动工具挂在腰带上行动时，切勿在电动工具头上安装任何钻头。如果在将电动工具挂在腰带上行动时安装了尖利的钻头，可能造成伤害。
- 将挂钩安装牢固。如果安装不牢固，在使用时可能造成伤害。

(1) 卸下挂钩

用十字螺丝刀卸下用于固定挂钩的螺丝。(图14)



(2) 重新装上挂钩并拧紧螺丝。

将挂钩牢固安装到电动工具的凹槽中，拧紧螺丝固定挂钩。(图15)



5. 剩余电池电量指示灯

可以按下剩余电池电量指示灯开关点亮指示灯，查看电池的剩余电量。
(图16，参照表4)

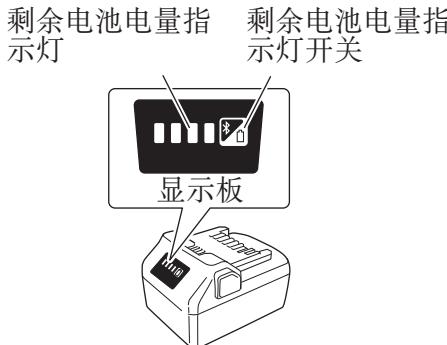


图16

环境温度和电池状态可能会对剩余电池电量产生轻微的影响，因此，建议您仅将指示灯作为参考。

此外，电动工具或充电器上的剩余电池电量指示灯可能有所不同。

表4

	点亮； 电池剩余电量超过75%。
	点亮； 电池剩余电量为50%—75%。
	点亮； 电池剩余电量为25%—50%。
	点亮； 电池剩余电量超过25%。
	闪烁； 电池剩余电量即将耗尽。请尽快对电池进行充电。
	闪烁； 因高温暂停输出。从电动工具中取下电池，让电池完全冷却。
	闪烁； 因失败或故障暂停输出。电池可能出现故障，请与经销商联系。

注:

请勿强烈撞击或破坏开关面板。否则可能会导致故障。

6. LED灯使用方法

拔出扳机开关后, LED 灯将自动点亮工具尖头部分。 (图17)

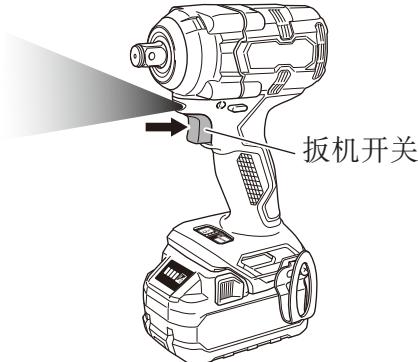


图17

扳机开关松开后, LED灯将会自动关闭10秒钟。

注意 !

- 请不要看着灯, 让眼睛直接受灯光照射。
如果眼睛持续受灯光照射, 会伤害眼睛。
- 用一块软布擦去附着在 LED 灯镜头上的任何灰尘或污垢, 注意不要刮擦镜头。
LED 灯镜头上的刮擦会导致亮度降低。

7. 旋紧模式选择功能

注意 !

- 请勿撞击或损坏开关面板。
- 请在松开扳机开关时选择旋紧模式。否则可能导致故障。

可根据作业类型，通过组合使用高/低速模式选择开关和自停模式选择开关来调整旋紧扭矩。（图18）

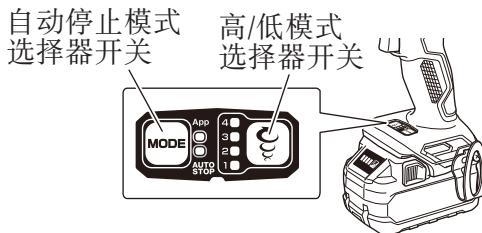


图18

(1) 高 / 低模式选择器开关 (图19, 表5)

每次按高 / 低模式选择器开关时，收紧模式在四个不同的旋转速度中进行切换。

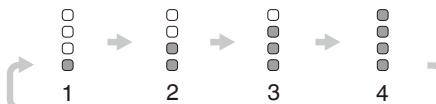


图19

表5: 高/低模式选择器功能设置

	1	2	3	4
指示灯	4 3 2 1	4 3 2 1	4 3 2 1	4 3 2 1
最大卸载速度 (/min)	1200	1800	2400	3000
用途	用于需要精细调整的作业。	用于需要压制力量的作业。	用于需要力量和速度的作业。	

(2) 自动停止模式选择器开关(图20)

按自动停止模式选择器开关切换模式。

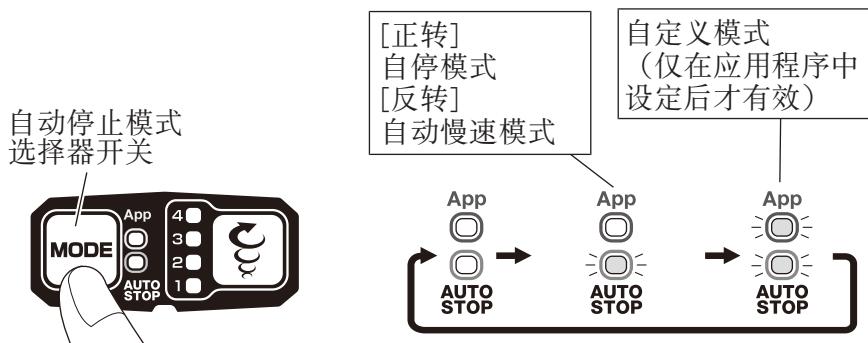


图20

(3) 自动停止模式 (仅限正转时) (图21, 表6)

在超过预设时间后自动停止。

推钮至前进 (“R”) 位置, 然后按自动停止模式选择器开关以选择设置。



图21

表6: 自停模式和自定义模式的设置和功能

	自停模式				自定义模式 (应用程序 设置)
	1	2	3	4	
指示灯					
最大卸载速度 (/min)	1200	1800	2400	3000	选择 1200、 1800、 2400 或 3000
自动停止时间	0.5 秒		1.0 秒		在0.1至10 秒之间设置
用途	小径螺栓	车辆轮胎 螺母或管 道	重型机械或钢架		根据作业类 型调整转速 和自动停止 时间时。

(4) 自动慢速模式 (仅限反转时) (图22, 表7)





在预设时间停止及/或将速度自动更改为预设速度。

推钮至后退 (“L”) 位置, 然后按自动停止模式选择器开关以选择设置。



图22

表7: 自动慢速模式设置和功能

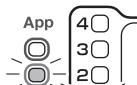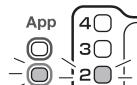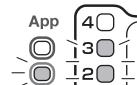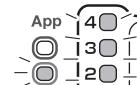		1	2	3	4
指示灯					
自动慢速操作	开关移位： 最大	在检测到螺栓松动后暂停。 停止0.5秒后重新启动，然后以350/min的速度旋转。 *重新开始后旋转不会停止。			
	开关移位： 半程	根据开始后拉动开关的距离，旋转速度以如下方式降低。 *旋转不停止。			
		0-220 (/min)	0-380 (/min)	0-660 (/min)	0-830 (/min)
目标		减少松动作业中螺母的掉落			

注:

- 此功能帮助防止螺母在松动时掉落。
- 取决于如螺栓或螺母尺寸、所使用插座及收紧范围等因素，如果在电动工具运行期间螺母从螺纹中脱落，则存在螺母意外掉落的风险。
- 请根据螺栓和需钻钉的材料选择适当的模式。
请拧紧一些测试用螺栓，相应地调整模式设定。
- 仅在扳手已安装电池且已拉动过一次扳机开关后，才可以对旋紧模式选择开关进行设定。

(5) 自定义模式* (参见表6)。

通过专用应用程序，可以设置正转侧的转速（功率）和自动停止时间。

(参照第28页“自定义功能”)

* 使用带蓝牙功能的电池 (BSL36A18BX等)

操作上的注意事项

1. 连续作业后须让电动工具休息片刻

电动工具内装有温度保护电路以保护电机。

长时间连续作业可能会导致机器温度升高、触发温度保护电路并自动停止作业。在此情况下，请在电动工具冷却后再继续使用。

如果工具超过负荷，电机可能停止。在这种情况下，请松开工具的开关，

试着消除超过负荷的原因。

请在长时间连续作业后或更换电池后，使机器静止15分钟。如果在更换电池后立刻开始作业，马达和开关等的温度将会升高，结果导致烧毁。

注：

锤壳在连续作业后可能温度升高，请勿触碰。

2. 关于转速控制开关的注意事项

此开关带有可无级改变转速的内置电路。因此，当轻拉启动扳机开关（低速转动）并在连续旋紧螺丝中停止马达转动时，电路部分的元件可能会因过热而损坏。

3. 以适于受冲击螺栓的旋紧扭矩进行操作

螺栓和螺母最适宜的旋紧扭矩因螺栓或螺母的材料和尺寸而有所不同。对小螺栓使用过大的旋紧扭矩会扭曲或损坏螺栓。旋紧扭矩的增加与操作时间成正比。请使用正确的螺栓操作时间。

4. 握住工具

用双手牢牢握住工具。在此情况下，请与螺栓成直线地握住工具。
无需用力推工具，用足以抵消冲击力的力握住工具。

5. 确定旋紧扭矩

下列因素会造成旋紧扭矩的下降。因此请在工作前用手工扭矩扳手来确定上紧螺栓所需的实际旋紧扭矩。影响旋紧扭矩的因素如下。

(1) 电压

达到放电极限时，电压降低，旋紧扭矩也减少。

(2) 操作时间

操作时间增加时旋紧扭矩也增加。但是，即使工具驱动很长的一段时间，旋紧扭矩也不会增大到超过某个特定值。

(3) 螺栓的直径

旋紧扭矩根据螺栓的直径变化。一般来说较大直径的螺栓需要较大的旋紧扭矩。

(4) 旋紧的状态

即使使用相同尺寸螺纹的螺栓，旋紧扭矩根据螺栓的扭矩比率 等级和长度也各不相同。旋紧扭矩还因螺栓所要上紧的加工件的表面状况而有所不同。螺栓和螺母一起转动时，扭矩会大大减少。

(5) 使用选购部件

使用接杆、万向接头或长套筒时，拧紧扭矩略小一些。

(6) 套筒间隙

磨损或变形的六角或方孔套筒不能在螺母或铁砧之间提供适当的固定拧紧力，从而导致拧紧扭矩的损失。使用不适合于螺栓的套筒会导致拧紧扭矩不足。

(7) 拧紧扭矩因电池充电程度而异。

自定义功能

安装带蓝牙功能的电池（BSL36A18BX等）后，可通过专用应用程序设置以下项目。（参照如第25页“表6：自停模式和自定义模式的设置和功能”）

- 自停模式的转速（功率）
- 自动停止时间
- LED灯的点亮时间

下载应用程序

使用智能手机或平板设备的条码阅读器功能读取条码，并下载我们的专用应用程序“HiKOKI TOOLS”。



iOS版



Android版


与应用程序连接

首先，打开应用程序并注册工具。

在电池上，长按无线连接/剩余电池电量开关开始搜索（指示灯呈蓝色闪烁）。

在应用程序屏幕的右下方按“+”按钮将应用程序与电池连接好后，指示灯即变为已连接状态（呈蓝色亮起）。

然后，按照应用程序屏幕上的说明，根据自己的喜好更改设置。

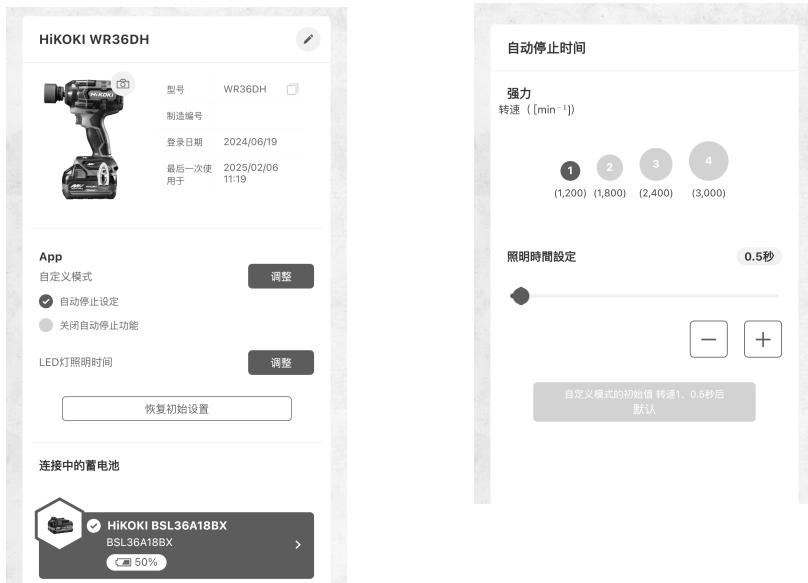

注:

应用程序屏幕界面可能会更改，恕不另行通知。

USB设备的充电方法(UC18YSL3)

警告！

- 使用之前请检查USB连接线缆是否有破损或损坏。
使用有破损或损坏的USB线缆可能会导致冒烟或着火。
- 不使用产品时，请用橡胶盖封好USB端口。
USB端口中落入灰尘等可能会导致冒烟或着火。

注:

- USB充电期间可能会偶尔暂停。
- USB设备未充电时，从充电器上拆下USB设备。否则不仅会减少USB设备的电池寿命，还会导致意外事故。
- 设备的类型，可能无法对某些USB设备充电。

中文

1. 选择充电方式

根据所选的充电方式, 将电池插入充电器或连接电源线插入插座。

- 将USB设备插入插座进行充电。(图23-a)
- 将USB设备和电池插入插座进行充电。(图23-b)

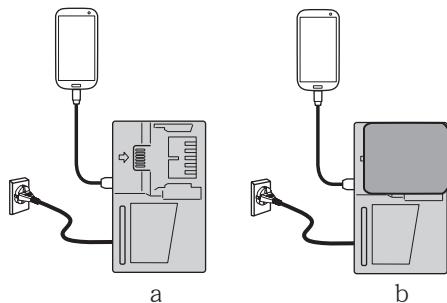


图23

2. 连接USB线缆。(图24)

拔下橡胶盖并将市售的USB线缆(匹配充电的设备)紧紧插入USB端口。

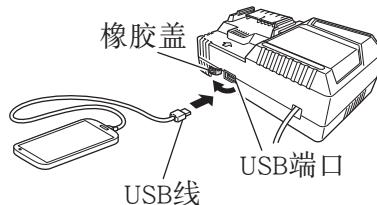


图24

3. 充电完成时

- 检查USB设备以检验充电状态。
- 从插座中拔下电源线。(图25)
- 用橡胶盖盖住USB端口。

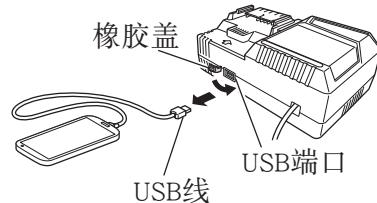


图25

维护和检查

警告！

在进行任何检查或维护前, 请务必将开关设为关位置, 并拉出电池。

1. 检查套筒

磨损或变形的六角或方孔套筒不能在螺母或铁砧之间提供适当的固定拧紧力, 从而导致拧紧扭矩的损失。请定期检查套筒孔的磨损程度, 如有需要换成新的。

2. 检查安装螺钉

要经常检查安装螺钉是否紧固妥善。若发现螺钉松了, 应立即重新扭紧, 否则会导致严重的事故。

3. 电动机的维护

电动机绕线是电动工具的“心脏部”应仔细检查有无损伤, 是否被油液或水沾湿。

4. 检查端子 (工具和电池)

确保端子上没有堆积削屑和灰尘。

在操作前、操作时和操作后需要时常检查。

注意！

请清除端子上的削屑或灰尘。否则可能导致故障。

5. 清理外部

电动工具脏污时, 请用柔软的干布或沾有肥皂水的布片擦拭。切勿使用氯溶液、汽油或稀释剂, 以免塑胶部分溶化。

6. 收藏

请将电动工具和电池存放在温度低于40°C且儿童无法触及的环境下。

注:

存放锂离子电池

在存放前请确保电池已完全充电。

电池在低电量的状态下长时间存放 (3个月或更长), 可能会导致电池性能劣化, 使用时间明显减少或无法进行充电。

但是, 即使是使用时间明显减少的电池, 通过反复充电和使用2~5次, 有时也可恢复使用时间。

若反复充电和使用后电池的使用时间仍非常短, 请认作为电池已达到了使用寿命并更换新的电池。

注意！

在操作和维修电动工具时，必须遵守贵国制定的安全的有关规则和标准。

关于HiKOKI牌无线电动工具的重要通知：

请确保始终使用我们指定的正版电池。如果使用我们指定以外的电池，或对电池进行拆卸和改动（例如拆卸和更换电池组件或其他内部部件），那么我们无法保证我们无线电动工具的安全性和使用性能。


故障排除

如果工具操作不正常，请使用下表中的检查步骤。如果未能解决问题，请向经销商或HiKOKI公司授权服务中心咨询。

现象	可能的原因	解决办法
工具无法运行	没有剩余电池电量	为电池充电
工具突然停止	工具过度负重	避免因负载过重而引发的问题。
	电池过热。	让电池冷却。
	按下扳机开关5分钟或更久。	这种情况不属于故障。电机已自动停止以防止工具发生故障。
工具套筒 -无法安装 -掉落 -无法拆除	安装部分的形状不匹配	确保使用12.7 mm四角起子套筒。
无法拉动开关	推钮归位在半程。	将按钮牢牢按压在适当位置以旋转至理想的方向。
拉动扳机开关时，将发出异常尖锐的噪声。	请轻微拉动扳机开关。	这种情况不属于故障。如果充分拉动扳机开关，则不会发生此种情况。
无法安装电池	请尝试安装该工具指定的其他正版电池。	请安装多电压式电池。


选择附件

根据特定作业选择适合的附件。
有关详细信息请联系HiKOKI授权服务中心。

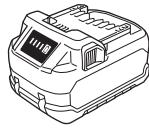


BSL36..18..

电池

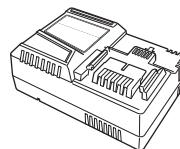


UC18YSL3
(14.4 V - 18 V)


充电器

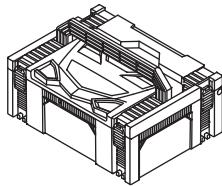

产品编号: 336471
外壳 (可堆叠)

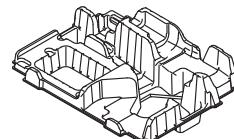

产品编号: 380300
内托盘

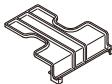

产品编号: 329897
电池盖

CONTENTS

GENERAL POWER TOOL SAFETY WARNINGS.....	34
CORDLESS IMPACT WRENCH SAFETY WARNINGS.....	37
CAUTION ON LITHIUM-ION BATTERY.....	40
REGARDING LITHIUM-ION BATTERY TRANSPORTATION.....	42
USB DEVICE CONNECTION PRECAUTIONS (UC18YSL3).....	42
PRECAUTIONS REGARDING THE DUST-RESISTANCE AND WATER-PROOFING FUNCTIONS.....	42
SYMBOLS.....	43
NAME OF PARTS.....	44
SPECIFICATIONS.....	45
STANDARD ACCESSORIES.....	46
APPLICATIONS.....	46
BATTERY REMOVAL / INSTALLATION.....	47
CHARGING.....	47
PRIOR TO OPERATION.....	50
HOW TO USE.....	52
OPERATIONAL CAUTIONS.....	59
CUSTOMIZATION FUNCTION.....	61
HOW TO RECHARGE USB DEVICE (UC18YSL3).....	62
MAINTENANCE AND INSPECTION.....	64
TROUBLESHOOTING.....	65
SELECTING ACCESSORIES.....	66

GENERAL POWER TOOL SAFETY WARNINGS

WARNING

Read all safety warnings, instructions, illustrations and specifications provided with this power tool.

Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

- 1) **Work area safety**
 - a) **Keep work area clean and well lit.**
Cluttered or dark areas invite accidents.
 - b) **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.**
Power tools create sparks which may ignite the dust or fumes.
 - c) **Keep children and bystanders away while operating a power tool.**

Distractions can cause you to lose control.

2) Electrical safety

- a) Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.**
Unmodified plugs and matching outlets will reduce risk of electric shock.
- b) Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.**
There is an increased risk of electric shock if your body is earthed or grounded.
- c) Do not expose power tools to rain or wet conditions.**
Water entering a power tool will increase the risk of electric shock.
- d) Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.**
Damaged or entangled cords increase the risk of electric shock.
- e) When operating a power tool outdoors, use an extension cord suitable for outdoor use.**
Use of a cord suitable for outdoor use reduces the risk of electric shock.
- f) If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.**
Use of an RCD reduces the risk of electric shock.

3) Personal safety

- a) Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.**
A moment of inattention while operating power tools may result in serious personal injury.
- b) Use personal protective equipment. Always wear eye protection.**
Protective equipment such as a dust mask, non-skid safety shoes, hard hat or hearing protection used for appropriate conditions will reduce personal injuries.
- c) Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.**
Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
- d) Remove any adjusting key or wrench before turning the power tool on.**
A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- e) Do not overreach. Keep proper footing and balance at all times.**
This enables better control of the power tool in unexpected situations.
- f) Dress properly. Do not wear loose clothing or jewellery. Keep your hair and clothing away from moving parts.**
Loose clothes, jewellery or long hair can be caught in moving parts.
- g) If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.**
Use of dust collection can reduce dust-related hazards.

4) **Power tool use and care**

- a) **Do not force the power tool. Use the correct power tool for your application.**
The correct power tool will do the job better and safer at the rate for which it was designed.
- b) **Do not use the power tool if the switch does not turn it on and off.**
Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- c) **Disconnect the plug from the power source and/ or remove the battery pack, if detachable, from the power tool before making any adjustments, changing accessories, or storing power tools.**
Such preventive safety measures reduce the risk of starting the power tool accidentally.
- d) **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.**
Power tools are dangerous in the hands of untrained users.
- e) **Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.**
Many accidents are caused by poorly maintained power tools.
- f) **Keep cutting tools sharp and clean.**
Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- g) **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.**
Use of the power tool for operations different from those intended could result in a hazardous situation.
- h) **Keep handles and grasping surfaces dry, clean and free from oil and grease.**
Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.

5) **Battery tool use and care**

- a) **Recharge only with the charger specified by the manufacturer.**
A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- b) **Use power tools only with specifically designated battery packs.**
Use of any other battery packs may create a risk of injury and fire.
- c) **When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.**
Shorting the battery terminals together may cause burns or a fire.

- d) Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.
Liquid ejected from the battery may cause irritation or burns.
- e) Do not use a battery pack or tool that is damaged or modified.
Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury.
- f) Do not expose a battery pack or tool to fire or excessive temperature.
Exposure to fire or temperature above 130°C may cause explosion.
- g) Follow all charging instructions and do not charge the battery pack or tool outside the temperature range specified in the instructions.
Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.

6) Service

- a) Have your power tool serviced by a qualified repair person using only identical replacement parts.
This will ensure that the safety of the power tool is maintained.
- b) Never service damaged battery packs.
Service of battery packs should only be performed by the manufacturer or authorized service providers.

CAUTION

Keep children and infirm persons away.

When not in use, tools should be stored out of reach of children and infirm persons.

CORDLESS IMPACT WRENCH SAFETY WARNINGS

1. Hold the power tool by insulated gripping surfaces, when performing an operation where the fastener may contact hidden wiring. Fasteners contacting a “live” wire may make exposed metal parts of the power tool “live” and could give the operator an electric shock.
2. This is a portable tool for tightening and loosening bolts and nuts. Use it only for these operation.
3. Use the earplugs if using for a long time.

4. Make sure to securely hold the tool during operation. Failure to do so can result in accidents or injuries. (Fig. 1)

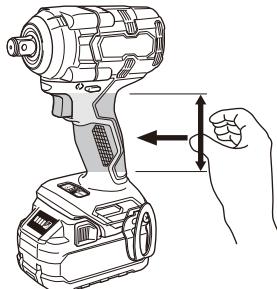


Fig. 1

5. Check that the socket is not cracked or broken. Broken or cracked sockets are dangerous. Check the socket before using it.
6. Secure the socket with the socket pin and the ring. If the socket pin or ring securing the socket is damaged, the socket may come off from the impact wrench, which is quite dangerous. Do not use socket pins or rings that are deformed, worn out, cracked, or in any other way damaged. Always make sure to install the socket pin and ring in the correct position.
7. Check the tightening torque. The appropriate torque for tightening a bolt depends on the material the bolt is made of, its dimensions, grade, etc. Also, the tightening torque generated by this impact wrench depends on the materials and dimensions of the bolt, how long the impact wrench is applied for the way in which the socket is installed, etc. Also the torque when the battery has just been charged and when it is about to run out are slightly different. Use a torque wrench to check that the bolt has been tightened with the appropriate torque.
8. Stop the impact wrench before switching the direction of rotation. Always release the switch and wait for impact wrench to stop before switching the direction of rotation.
9. Never touch the turning part. Do not allow the turning socket section to get near your hands or any other part of your body. You could be cut or caught in the socket. Also, be careful not to touch the socket after using continuously it for a long time. It gets quite hot and could burn you.
10. Never let the impact wrench turn without a load when using the universal joint. If the socket turns without being connected to a load, the universal joint causes the socket to turn wildly. You could get hurt or the movement of the socket could shake the impact wrench so much as to make you drop it.

11. If you notice that the unit is generating unusually high temperatures, operating poorly, or making abnormal noises, immediately stop using and shut off the power switch. Request an inspection and repair from the dealer where you purchased the unit or a HiKOKI Authorized Service Center. Continuing to use while operating abnormally might cause injuries.
12. If the unit is mistakenly dropped or strikes another object, make a thorough check of the unit for cracks, breakage or deformation, etc. Injuries might occur if the unit has cracks, breakage or deformation.
13. When working at elevated locations, clear the area of other people and aware of conditions below you.
14. Always charge the battery at a temperature of 0–40°C.
A temperature of less than 0°C will result in over charging which is dangerous. The battery cannot be charged at a temperature greater than 40°C.
The most suitable temperature for charging is that of 20–25°C.
15. Do not use the charger continuously.
When one charging is completed, leave the charger for about 15 minutes before the next charging of battery.
16. Do not allow foreign matter to enter the hole for connecting the battery.
17. Never disassemble the battery and charger.
18. Never short-circuit the battery.
Short-circuiting the battery will cause a great electric current and overheat. It results in burn or damage to the battery.
19. Do not dispose of the battery in fire.
If the battery burnt, it may explode.
20. Do not insert object into the air ventilation slots of the charger.
Inserting metal objects or inflammables into the charger air ventilation slots will result in electrical shock hazard or damaged charger.
21. Bring the battery to the shop from which it was purchased as soon as the post-charging battery life becomes too short for practical use. Do not dispose of the exhausted battery.
22. Using an exhausted battery will damage the charger.
23. Make sure that the battery is installed firmly. If it is at all loose it could come off and cause an accident.
24. Do not use the product if the tool or the battery terminals (battery mount) are deformed.
Installing the battery could cause a short circuit that could result in smoke emission or ignition.
25. Keep the tool's terminals (battery mount) free of swarf and dust.
 - Prior to use, make sure that swarf and dust have not collected in the area of the terminals.
 - During use, try to avoid swarf or dust on the tool from falling on the battery.
 - When suspending operation or after use, do not leave the tool in an area where it may be exposed to falling swarf or dust.
Doing so could cause a short circuit that could result in smoke emission or ignition.

26. Always use the tool and battery at temperatures between -5°C and 40°C.

CAUTION ON LITHIUM-ION BATTERY

To extend the lifetime, the lithium-ion battery equips with the protection function to stop the output.

In the cases of 1 to 3 described below, when using this product, even if you are pulling the switch, the motor may stop. This is not the trouble but the result of protection function.

1. When the battery power remaining runs out, the motor stops.
In such a case, charge it up immediately.
2. If the tool is overloaded, the motor may stop. In this case, release the switch of tool and eliminate causes of overloading. After that, you can use it again.
3. If the battery is overheated under overload work, the battery power may stop.
In this case, stop using the battery and let the battery cool. After that, you can use it again.

Furthermore, please heed the following warning and caution.

WARNING

In order to prevent any battery leakage, heat generation, smoke emission, explosion and ignition beforehand, please be sure to heed the following precautions.

1. Make sure that swarf and dust do not collect on the battery.
2. During work make sure that swarf and dust do not fall on the battery.
3. Make sure that any swarf and dust falling on the power tool during work do not collect on the battery.
4. Do not store an unused battery in a location exposed to swarf and dust.
5. Before storing a battery, remove any swarf and dust that may adhere to it and do not store it together with metal parts (screws, nails, etc.).
6. Do not pierce battery with a sharp object such as a nail, strike with a hammer, step on, throw or subject the battery to severe physical shock.
7. Do not use an apparently damaged or deformed battery.
8. Do not use the battery for a purpose other than those specified.
9. If the battery charging fails to complete even when a specified recharging time has elapsed, immediately stop further recharging.
10. Do not put or subject the battery to high temperatures or high pressure such as into a microwave oven, dryer, or high pressure container.
11. Keep away from fire immediately when leakage or foul odor are detected.
12. Do not use in a location where strong static electricity generates.
13. If there is battery leakage, foul odor, heat generated, discolored or deformed, or in any way appears abnormal during use, recharging or storage, immediately remove it from the equipment or battery charger, and stop use.

10. Do not immerse the battery or allow any fluids to flow inside. Conductive liquid ingress, such as water, can cause damage resulting in fire or explosion. Store your battery in a cool, dry place, away from combustible and flammable items. Corrosive gas atmospheres must be avoided.

CAUTION

1. If liquid leaking from the battery gets into your eyes, do not rub your eyes and wash them well with fresh clean water such as tap water and contact a doctor immediately.
If left untreated, the liquid may cause eye-problems.
2. If liquid leaks onto your skin or clothes, wash well with clean water such as tap water immediately.
There is a possibility that this can cause skin irritation.
3. If you find rust, foul odor, overheating, discolor, deformation, and/or other irregularities when using the battery for the first time, do not use and return it to your supplier or vendor.

WARNING

If a conductive foreign matter enters in the terminal of lithium ion battery, the battery may be shorted, causing fire. When storing the lithium ion battery, obey surely the rules of following contents.

- Do not place conductive debris, nail and wires such as iron wire and copper wire in the storage case.
- Either install the battery in the power tool or store by securely pressing into the battery cover until the ventilation holes are concealed to prevent short-circuits (See Fig. 2).

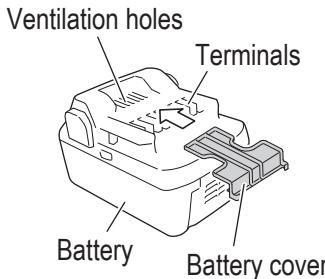


Fig. 2

- Precautions for using Bluetooth function
The frequency band of Bluetooth is 2.4 GHz. The range of interference is about 10 m.
Before using this wireless communication function, ensure that there are not any other wireless transmitters or systems, or any industrial, scientific, medical, or

other such devices being used within the interference range.

If electromagnetic interference occurs when using this wireless communication function, move to a different location, or turn off the wireless communication.

REGARDING LITHIUM-ION BATTERY TRANSPORTATION

When transporting a lithium-ion battery, please observe the following precautions.

WARNING

Notify the transporting company that a package contains a lithium-ion battery, inform the company of its power output and follow the instructions of the transportation company when arranging transport.

- Lithium-ion batteries that exceed a power output of 100 Wh are considered to be in the freight classification of Dangerous Goods and will require special application procedures.
- For transportation abroad, you must comply with international law and the rules and regulations of the destination country.

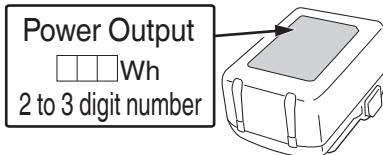


Fig. 3

USB DEVICE CONNECTION PRECAUTIONS (UC18YSL3)

When an unexpected problem occurs, the data in a USB device connected to this product may be corrupted or lost. Always make sure to back up any data contained in the USB device prior to use with this product.

Please be aware that our company accepts absolutely no responsibility for any data stored in a USB device that is corrupted or lost, nor for any damage that may occur to a connected device.

PRECAUTIONS REGARDING THE DUST-RESISTANCE AND WATER-PROOFING FUNCTIONS

This product conforms to IP56 protection class ratings (dust-resistance and water-proofing) for electrical equipment as stipulated by the international IEC regulations. (Only the main unit conforms to the IP56 protection class ratings when equipped with a battery.)

[Descriptions of IP Codes]**IP56**

5	Protection rating for water penetration Must be no adverse effects on the equipment when sprayed with powerful jets of water from all directions (water-proofed). (100 L of water per minute sprayed for approximately three minutes from a distance of approximately three meters with the use of a spray nozzle with a diameter of 12.5 mm.)
6	Protection rating for external assault by solid objects Dust that may cause adverse effects on the equipment must not be able to enter (dust-resistance). (The equipment to be left non-operable in a test chamber in which particles of talcum powder with a diameter of less than 75 µm are floating in the air with the use of an agitation pump at a rate of 2 kg per cubic meter for eight hours.)

The equipment has been designed to withstand the effects of dust and water, but there is no guarantee that it will not malfunction. Do not use or leave the equipment in locations where it is subject to excessive amounts of dust, or in locations where it is submerged in water or subject to rainwater.

SYMBOLS**WARNING**

The following show symbols used for the machine. Be sure that you understand their meaning before use.

	To reduce the risk of injury, user must read instruction manual.
	Direct current
	Rated voltage
	No-load speed
	Oscillation per minute
	Warning

NAME OF PARTS

1. POWER TOOL

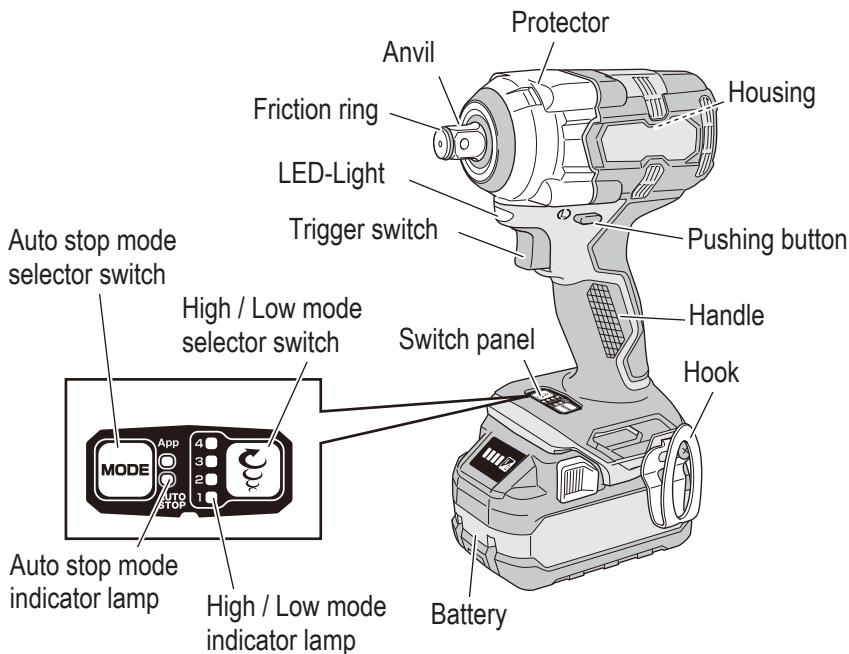


Fig. 4

2. Battery


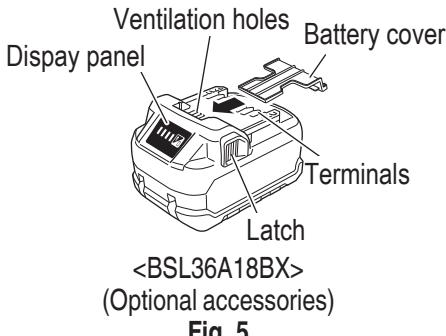


Fig. 5

3. Battery Charger

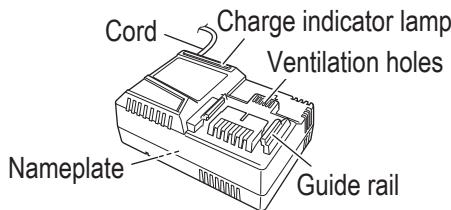

<UC18YSL3>
(Optional accessories)

Fig. 6

SPECIFICATIONS

POWER TOOL

Model		WR36DH
Voltage		36 V
No-load speed	Mode 4	0-3000 /min
	Mode 3	0-2400 /min
	Mode 2	0-1800 /min
	Mode 1	0-1200 /min
Capacity	Ordinary bolt	M10-M20
	High tension bolt	M10-M16
Tightening torque		Maximum 380 N·m
Square Drive size		12.7 mm
Battery ^{*1}		BSL36A18BX: Li-ion 36 V / 18 V (2.5 Ah / 5.0 Ah 10 cells)
Weight		2.0 kg (BSL36A18BX attached)

*1 Existing batteries (BSL3660/3626/3620, BSL18 and BSL14 series) cannot be used with this tool.





CHARGER

Model	UC18YSL3
Charging voltage	14.4–18 V
Weight	0.6 kg

STANDARD ACCESSORIES

In addition to the main unit (1 unit), the package contains the accessories listed in the below.

Table 1

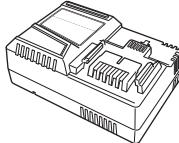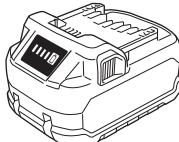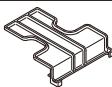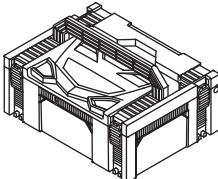		WR36DH (NNP)
Charger (UC18YSL3)		–
Battery (BSL36A18BX)		–
Battery cover		–
Case (Stackable)		1

APPLICATIONS

- Tightening and loosening of all types of bolts and nuts, used for securing structural items.

BATTERY REMOVAL / INSTALLATION

1. Battery removal

Hold the handle tightly and push the battery latches to remove the battery (see **Fig. 7**).

CAUTION

Never short-circuit the battery.

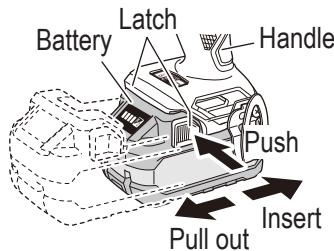


Fig. 7

2. Battery installation

Insert the battery while observing its polarities (see **Fig. 7**).

CHARGING

Before using the power tool, charge the battery as follows.

<UC18YSL3 (sold separately)>

1. Connect the charger's power cord to the receptacle.

When connecting the plug of the charger to a receptacle, the charge indicator lamp will blink in red (See **Table 2**).

2. Insert the battery into the charger.

Firmly insert the battery into the charger as shown in **Fig. 8**.

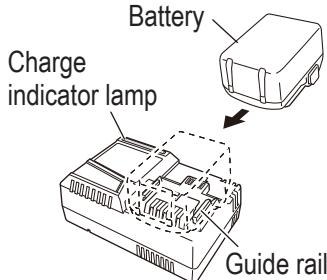


Fig. 8

English

3. Charging




When inserting a battery in the charger, charging will commence and the charge indicator lamp will blink in blue.

When the battery becomes fully recharged, the charge indicator lamp will light up in green.
(See **Table 2**)

(1) Charge indicator lamp indication

The indications of the charge indicator lamp will be as shown in **Table 2**, according to the condition of the charger or the rechargeable battery.

Table 2: Indications of the charge indicator lamp

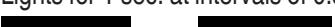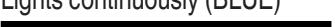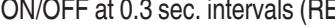ON/OFF at 0.5 sec. intervals (RED) 	Before charging*1
Lights for 0.5 sec. at intervals of 1 sec. (BLUE) 	Charged at less than 50%
Lights for 1 sec. at intervals of 0.5 sec. (BLUE) 	Charged at less than 80%
Lights continuously (BLUE) 	Charged at more than 80%
Lights continuously (Continuous buzzer sound: about 6 sec.) (GREEN) 	Charging complete
ON/OFF at 0.3 sec. intervals (RED) 	Overheat standby*2
ON/OFF at 0.1 sec. intervals (Intermittent buzzer sound: about 2 sec.) (PURPLE) 	Charging impossible*3

NOTE

*1 If the red lamp continues to blink even after the charger has been attached, check to confirm that the battery has been fully inserted.

*2 Battery overheated. Unable to charge.

Although charging will start once the battery has cooled down even when left in situ, the best practice is to remove the battery and allow it to cool down in a shaded, well-ventilated location before charging.

*3 Malfunction in the battery or the charger

- Fully insert the battery.
- Check to confirm that no foreign matter is stuck to the battery mount or terminals. If there are no foreign objects, it is probable that the battery or charger is malfunctioning. Take it to your authorized Service Center.

- When the battery charger has been continuously used, the battery charger will be heated, thus constituting the cause of the failures. Once the charging has been completed, give 5 minutes rest until the next charging.

(2) Regarding the temperatures and charging time of the battery (See **Table 3**)

Table 3

Model	UC18YSL3	
Type of battery	Li-ion	
Charging voltage	14.4–18 V	
Temperatures at which the battery can be recharged	0°C–50°C	
Charging time for battery capacity, approx. (At 20°C)	1.5 Ah	15 min
	2.0 Ah	20 min
	2.5 Ah	25 min
	3.0 Ah	20 min (BSL1430C, BSL1830C: 30 min)
	4.0 Ah	26 min (BSL1840M: 40 min)
	5.0 Ah	32 min
	6.0 Ah	38 min
Charging time for multi volt battery capacity, approx. (At 20°C)	1.5 Ah (x 2 unit)	20 min
	2.5 Ah (x 2 unit)	32 min
	4.0 Ah (x 2 unit)	52 min
Number of battery cells	4–10	
Charging voltage for USB	5 V	
Charging current for USB	2 A	
Weight	0.6 kg	

NOTE

- The recharging time may vary according to the ambient temperature and power source voltage.
- If charging takes a long time
 - Charging will take longer at extremely low ambient temperatures. Charge the battery in a warm location (such as indoors).

English

- Do not block the air vent. Otherwise the interior will overheat, reducing the charger's performance.
- If the cooling fan is not operating, contact a HiKOKI Authorized Service Center for repairs.

4. Disconnect the charger's power cord from the receptacle.
5. Hold the charger firmly and pull out the battery.

NOTE

Be sure to pull out the battery from the charger after use, and then keep it.

Regarding electric discharge in case of new batteries, etc.

As the internal chemical substance of new batteries and batteries that have not been used for an extended period is not activated, the electric discharge might be low when using them the first and second time. This is a temporary phenomenon, and normal time required for recharging will be restored by recharging the batteries 2-3 times.

How to make the batteries perform longer.

- (1) Recharge the batteries before they become completely exhausted.
When you feel that the power of the tool becomes weaker, stop using the tool and recharge its battery. If you continue to use the tool and exhaust the electric current, the battery may be damaged and its life will become shorter.
- (2) Avoid recharging at high temperatures.
A rechargeable battery will be hot immediately after use. If such a battery is recharged immediately after use, its internal chemical substance will deteriorate, and the battery life will be shortened. Leave the battery and recharge it after it has cooled for a while.

PRIOR TO OPERATION

1. Preparing and checking the work environment
Make sure that the work site meets all the conditions laid forth in the precautions.
2. Selecting the socket matched to the bolt
Be sure to use a socket which is matched to the bolt to be tightened. Using an improper socket will not only result in insufficient tightening but also in damage to the socket or nut. A worn or deformed hex. or square-holed socket will not give an adequate tightness for fitting to the nut or anvil, consequently resulting in loss of tightening torque.
Pay attention to wear of socket hole, and replace before further wear has developed.

3. Installing a socket

(1) Slide the O-ring out of the groove, then align the hole of the socket with the hole of the anvil and insert the anvil into the socket. (Fig. 9)

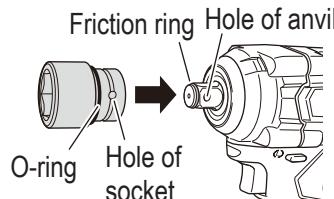


Fig. 9

(2) Insert the pin into the socket. (Fig. 10)

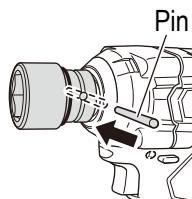


Fig. 10

(3) While making sure that the pin doesn't fall, attach the O-ring to the groove on the socket. (Fig. 11, Fig. 12)

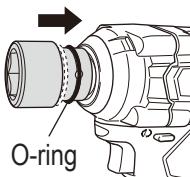


Fig. 11

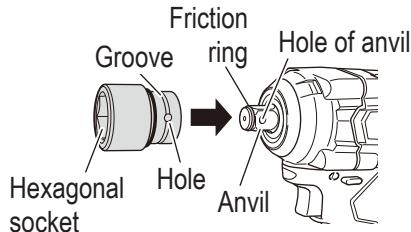


Fig. 12

CAUTION

- Please use the designated attachments which are listed in the operations manual and HiKOKI's catalog. Accidents or injuries could result from not doing so.

English

- Make sure to firmly install the socket in the anvil. If the socket is not firmly installed it might come out and cause injuries.
- When sliding the O-ring out of the groove of the socket, be careful not to drop and lose the pin.

4. Confirm that the battery is mounted correctly.

HOW TO USE

1. Check the rotational direction

The bit rotates clockwise (viewed from the rear side) by pushing the R-side of the pushing button.

The L-side of the pushing button is pushed to turn the bit counterclockwise (See **Fig. 13**) (The (L) and (R) marks are provided on the body).

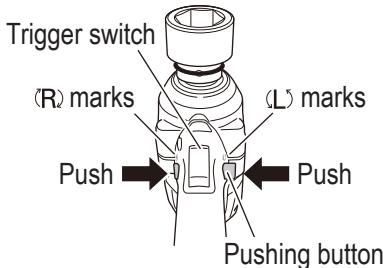


Fig. 13

CAUTION

The pushing button cannot be switched while the impact wrench is turning. To switch the pushing button, stop the impact wrench, then set the pushing button.

2. Switch operation

- When the trigger switch is depressed, the tool rotates. When the trigger switch is released, the tool stops.
- The rotational speed can be controlled by varying the amount that the trigger switch is pulled. Speed is low when the trigger switch is pulled slightly and increases as the trigger switch is pulled more.
- When releasing the trigger switch, the brake will be applied for immediate stopping.

NOTE

A buzzing noise is produced when the motor is about to rotate. This is only a noise, not a machine failure.

3. Tightening and loosening bolts

A hex. socket matching the bolt or nut must first be selected. Then mount the socket on the anvil, and grip the nut to be tightened with the hex. socket. Holding the tool in line with the bolt, press the power switch to impact the nut for several seconds.

If the nut is only loosely fitted to the bolt, the bolt may turn with the nut, therefore mistaking proper tightening. In this case, stop impact on the nut and hold the bolt head with a wrench before restarting impact, or manually tighten the bolt and nut to prevent them slipping.

4. Using the hook

The hook is used to hang up the power tool to your waist belt while working.

WARNING

When using the hook, hang up the power tool firmly not to drop accidentally. If the power tool is dropped, it may lead to an accident.

CAUTION

- When carrying the power tool with hooked to your waist belt, do not fit any bit to the tip of power tool. If the sharp bit such as drill is fitted to the power tool when carrying it with hooked to your waist belt, you will be injured.
- Install securely the hook. Unless the hook is securely installed, it may cause an injury while using.

(1) Removing the hook.

Remove the screws fixing the hook with Philips screw driver. (Fig. 14)

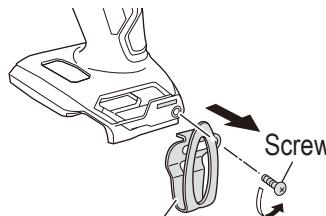


Fig. 14

English

(2) Replacing the hook and tightening the screws.

Install securely the hook in the groove of power tool and tighten the screws to fix the hook firmly. (Fig. 15)

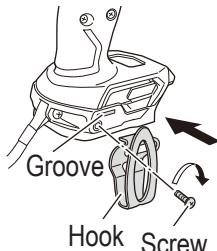


Fig. 15

5. Remaining battery indicator

You can check the battery's remaining capacity by pressing the remaining battery indicator switch to light the indicator lamp. (Fig. 16, Table 4)

Remaining battery indicator lamp Remaining battery indicator switch

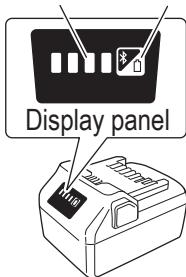


Fig. 16

It is best to use the remaining battery indicator as a guide since there are slight differences such as ambient temperature and the condition of the battery.

Also, the remaining battery indicator may vary from those equipped to a tool or charger.

Table 4

	Lights ; The battery remaining power is over 75%
	Lights ; The battery remaining power is 50%–75%.
	Lights ; The battery remaining power is 25%–50%.

	Lights ; The battery remaining power is less than 25%
	Blinks ; The battery remaining power is nearly empty. Recharge the battery soonest possible.
	Blinks ; Output suspended due to high temperature. Remove the battery from the tool and allow it to fully cool down.
	Blinks ; Output suspended due to failure or malfunction. The problem may be the battery so please contact your dealer.

NOTE

Do not give a strong shock to the switch panel or break it. It may lead to a trouble.

6. How to use the LED light

While the trigger switch is pulled, the LED light will automatically light up the tip portion of the tool. (Fig. 17)

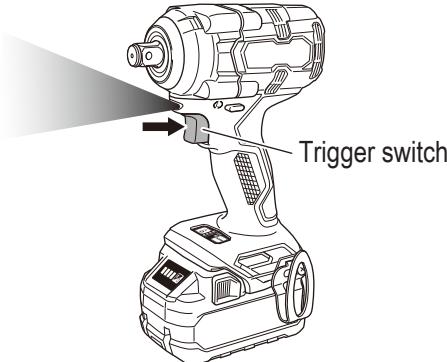


Fig. 17

The LED light will automatically turn off 10 seconds after the trigger switch is released.

CAUTION

- Do not expose directly your eye to the light by looking into the light.
If your eye is continuously exposed to the light, your eye will be hurt.
- Wipe off any dirt or grime attached to the lens of the LED light with a soft cloth, being careful not to scratch the lens.
Scratches on the lens of the LED light can result in decreased brightness.

English

7. Tightening mode selector function

CAUTION

- Do not subject the switch panel to shock or damage.
- Select tightening mode while the trigger switch is released. Failure to do so could result in malfunction.

Tightening torque can be adjusted according to the type of work by combined use of the High / Low mode selector switch and the Auto stop mode selector switch. (Fig. 18)

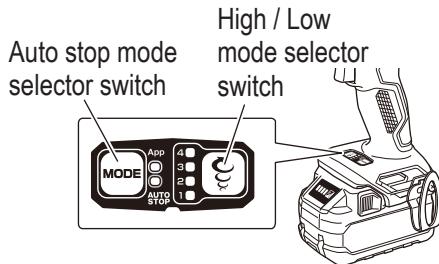


Fig. 18

(1) High / Low mode selector switch (Fig. 19, Table 5)

The tightening mode switches between 4 different rotation speeds each time the High / Low mode selector switch is pressed.

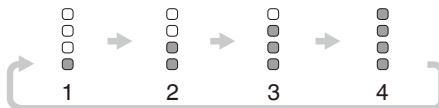


Fig. 19


Table 5: High/Low mode selector function settings

	1	2	3	4
Indicator lamps	4□ 3□ 2□ 1□	4□ 3□ 2□ 1□	4□ 3□ 2□ 1□	4□ 3□ 2□ 1□
Maximum unloaded speed (/min)	1200	1800	2400	3000
Uses	For work that requires fine adjustments.	For work that requires the power to be suppressed.	For work that requires power and speed.	

(2) Auto stop mode selector switch (Fig. 20)

Pressing the Auto stop mode selector switch toggles the mode.

Auto stop mode selector switch

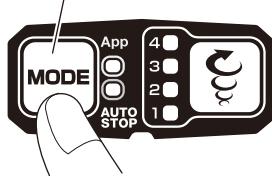

[Forward Rotation]
Auto Stop Mode
[Reverse Rotation]
Auto Slow Mode

Customization Mode
(Only after setting in app)

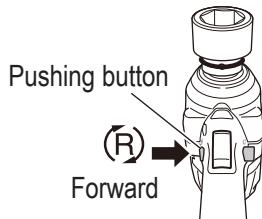


Fig. 20

(3) Auto stop mode (Only when in forward rotation) (Fig. 21, Table 6)

Stops automatically after a preset time has elapsed.

Push the pushing button to the forward ("R") position, then press the Auto stop mode selector switch to select the setting.



Auto stop mode selector switch

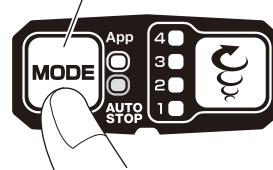
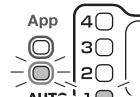
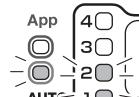
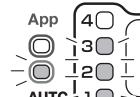
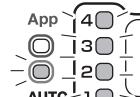


Fig. 21

Table 6: Settings and Functions of Auto-Stop Mode and Customization Mode

	Auto Stop Mode				Customization Mode (App settings)
	1	2	3	4	
Indicator lamps					
Maximum unloaded speed (/min)	1200	1800	2400	3000	Select 1200, 1800, 2400, or 3000
Auto stop time	0.5 sec.			1.0 sec.	Set between 0.1 and 10 sec.
Uses	Small diameter bolts	Vehicles wheel nut or piping	Heavy machinery or steel frame		When you want to adjust the rotation speed and Auto Stop time according to the type of work.

(4) Auto slow mode (Only when in reverse rotation) (Fig. 22, Table 7)

Stops for a preset time and/or changes the speed automatically to a preset speed

Push the pushing button to the reverse ("L") position, then press the Auto stop mode selector switch to select the setting.

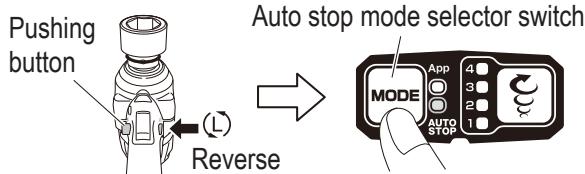


Fig. 22

Table 7: Auto slow mode setting and functions

		1	2	3	4
Indicator lamps					
Auto slow operation	Trigger displacement: Maximum	Pauses after bolt loosening is detected. Restarts after stopping for 0.5 seconds, then rotates at 350 /min. * Rotation does not stop after restarting.			
	Trigger displacement: Halfway	Rotation speed is reduced as follows depending on how far the trigger is pulled after starting. * Rotation does not stop.			
Objective		Reduce dropping of nuts during loosening work			

NOTE

- This function helps prevent nuts from dropping when loosening them.
- Depending on factors such as the bolt or nut size, socket used, and extent of tightening, there is a risk of nuts accidentally dropping if the nut becomes detached from the screw thread while the power tool is operating.
- The appropriate mode differs depending on the bolt and the material being screwed. Tighten in a few test bolts and adjust the mode setting accordingly.
- The tightening mode selector switch can only be set after the battery has been installed in the wrench and the trigger switch has been pulled once.

(5) Customization Mode* (See **Table 6**)

With the dedicated app, you can set the rotation speed (power) of the forward-rotation side, and the Auto-Stop time.

(See page 61 “**CUSTOMIZATION FUNCTION**”)

* Using a battery with Bluetooth function (BSL36A18BX, etc.)

OPERATIONAL CAUTIONS

1. Resting the unit after continuous work

The power tool is equipped with a temperature protection circuit to protect the motor.

Continuous work may cause the temperature of the unit to rise, activating the temperature protection circuit and automatically stopping operation. If this happens, allow the power tool to cool before resuming use.

The motor may stop in the event the tool is overloaded. In this should occur, release the tool's switch and eliminate the cause of the overload.

English

After use for continuous work, rest the unit for 15 minutes or so when replacing the battery. The temperature of the motor, switch, etc., will rise if the work is started again immediately after battery replacement, eventually resulting in burnout.

NOTE

Do not touch the hammer case as it gets very hot during continuous work.

2. Cautions on use of the speed control switch

This switch has a built-in, electronic circuit which steplessly varies the rotation speed. Consequently, when the trigger switch is pulled only slightly (low speed rotation) and the motor is stopped while continuously driving in screws, the components of the electronic circuit parts may overheat and be damaged.

3. Work at a tightening torque suitable for the bolt under impact

The optimum tightening torque for nuts or bolts differs with material and size of the nuts or bolts. An excessively large tightening torque for a small bolt may stretch or break the bolt. The tightening torque increases in proportion to the operation time. Use the correct operating time for the bolt.

4. Holding the tool

Hold the tool firmly with both hands. In this case hold the tool in line with bolt. It is not necessary to push the tool very hard. Hold the tool with a force just sufficient to counteract the impact force.

5. Confirm the tightening torque

The following factors contribute to a reduction of the tightening torque. So confirm the actual tightening torque needed by screwing up some bolts before the job with a hand torque wrench. Factors affecting the tightening torque are as follows.

(1) Voltage

When the discharge margin is reached, voltage decreases and tightening torque is lowered.

(2) Operating time

The tightening torque increases when the operating time increases. But the tightening torque does not increase above a certain value even if the tool is driven for a long time.

(3) Diameter of bolt

The tightening torque differs with the diameter of the bolt. Generally a larger diameter bolt requires larger tightening torque.

(4) Tightening conditions

The tightening torque differs according to the torque ratio; class, and length of bolts even when bolts with the same size threads are used. The tightening torque also differs according to the condition of the surface of workpiece through which the bolts are to be tightened. When the bolt and nut turn together, torque is greatly reduced.

(5) Using optional parts

The tightening torque is reduced a little when an extension bar, universal joint or a long socket is used.

(6) Clearance of the socket

A worn or deformed hex. or a square-holed socket will not give an adequate tightness to the fitting between the nut or anvil, consequently resulting in loss of tightening torque. Using an improper socket which does not match to the bolt will result in an insufficient tightening torque.

(7) Tightening torque varies, depending on the battery's charge level.

CUSTOMIZATION FUNCTION

Installing a battery with Bluetooth function (BSL36A18BX, etc.) allows the following items to be set through the dedicated app. (See page 58 “**Table 6: Settings and Functions of Auto-Stop Mode and Customization Mode**”)

- Rotation speed (power) of Auto Stop Mode
- Auto Stop time
- Light-up time of LED light

Download the app

Use the barcode reader function of a smartphone or tablet device to read the barcode and download our dedicated app, “HiKOKI TOOLS”.



For iOS



For Android

Linking with the app


First, open the app and register the tool.

On the battery, press and hold the Wireless Link/Remaining Battery switch to begin Searching (lamp blinking blue).

In the lower-right of the app screen, press the “+” button to link the app and the battery, and the lamp changes to Linked (lit up blue).

English

Then, follow the instructions on the app screen to change the settings according to your preferences.

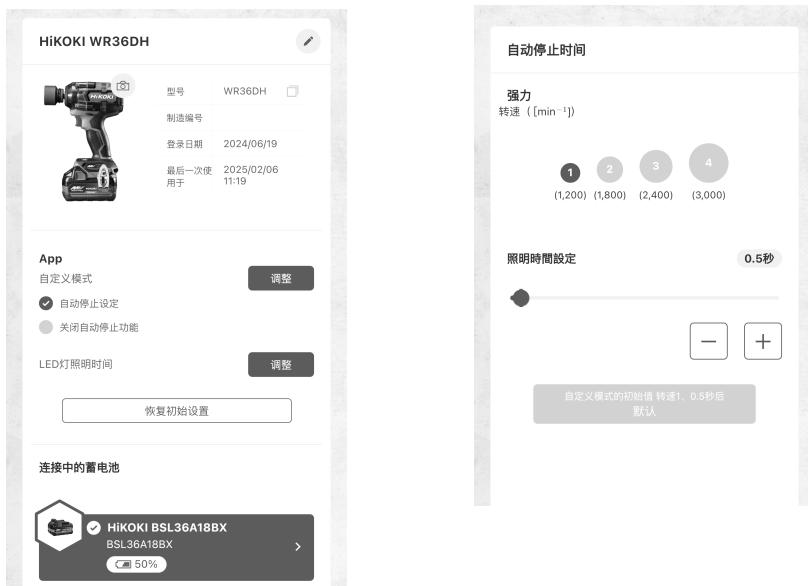

NOTE

The app screen interface may be changed without notice.

HOW TO RECHARGE USB DEVICE (UC18YSL3)

WARNING

- Prior to use, check the connecting USB cable for any defect or damage. Using a defective or damaged USB cable can cause smoke emission or ignition.
- When the product is not being used, cover the USB port with the rubber cover. Buildup of dust etc. in the USB port can cause smoke emission or ignition.

NOTE

- There may be an occasional pause during USB recharging.
- When a USB device is not being charged, remove the USB device from the charger. Failure to do so may not only reduce the battery life of a USB device, but may also result in unexpected accidents.
- It may not be possible to charge some USB devices, depending on the type of device.

1. Select a charging method

Depending on the charge method selected, either the battery is inserted into the charger or the power cord is plugged into an outlet.

- Charging a USB device from a electrical outlet. (**Fig. 23-a**)
- Charging a USB device and battery from an electrical outlet. (**Fig. 23-b**)

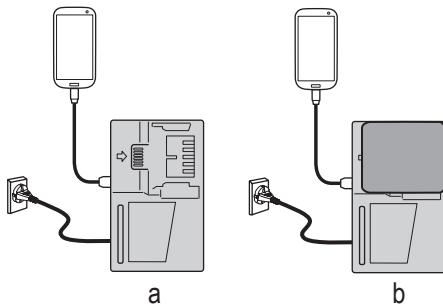


Fig. 23

2. Connect the USB cable. (**Fig. 24**)

Pull back the rubber cover and firmly plug in a commercially available USB cable (appropriate to the device being charged) into the USB port.

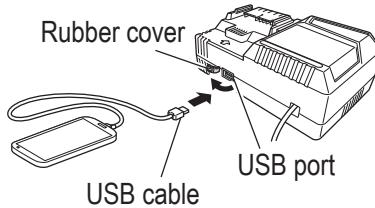


Fig. 24

3. When charging is completed

- To verify charge status, check the USB device.
- Unplug the power cord from the electrical outlet. (**Fig. 25**)
- Place the rubber cover over the USB port.

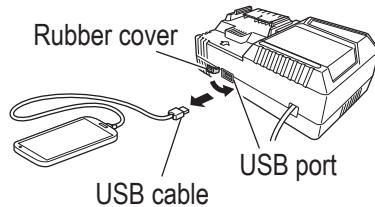


Fig. 25

MAINTENANCE AND INSPECTION

WARNING

Be sure the switch is in the OFF position, and pull out the battery before doing any inspection or maintenance.

1. Inspecting the socket
A worn or deformed hex. or a square-holed socket will not give an adequate tightness to the fitting between the nut or anvil, consequently resulting in loss of tightening torque. Pay attention to wear of a socket holes periodically, and replace with a new one if needed.
2. Inspecting the mounting screws
Regularly inspect all mounting screws and ensure that they are properly tightened. Should any of the screws be loose, retighten them immediately. Failure to do so may result in serious hazard.
3. Maintenance of the motor
The motor unit winding is the very "heart" of the power tool.
Exercise due care to ensure the winding does not become damaged and/or wet with oil or water.
4. Inspection of terminals (tool and battery)
Check to make sure that swarf and dust have not collected on the terminals.
On occasion check prior, during and after operation.

CAUTION

Remove any swarf or dust which may have collected on the terminals. Failure to do so may result in malfunction.

5. Cleaning of the outside
When the power tool is stained, wipe with a soft dry cloth or a cloth moistened with soapy water. Do not use chloric solvents, gasoline or paint thinner, as they melt plastics.
6. Storage
Store the power tool and battery in a place in which the temperature is less than 40°C, and out of reach of children.

NOTE

Storing Lithium-ion Batteries

Make sure the batteries have been fully charged before storing them.

Prolonged storage (3 months or more) of batteries with a low charge may result in performance deterioration, significantly reducing battery usage time or rendering the batteries incapable of holding a charge.

However, significantly reduced battery usage time may be recovered by repeatedly charging and using the batteries two to five times.

If the battery usage time is extremely short despite repeated charging and use, consider the batteries dead and purchase new batteries.

CAUTION

In the operation and maintenance of power tools, the safety regulations and standards prescribed in each country must be observed.

Important notice on the batteries for the HiKOKI cordless power tools

Please always use one of our designated genuine batteries. We cannot guarantee the safety and performance of our cordless power tool when used with batteries other than these designated by us, or when the battery is disassembled and modified (such as disassembly and replacement of cells or other internal parts).


TROUBLESHOOTING

Use the inspections in the table below if the tool does not operate normally. If this does not remedy the problem, consult your dealer or the HiKOKI Authorized Service Center.


Symptom	Possible cause	Remedy
Tool doesn't run	No remaining battery power	Charge the battery.
Tool suddenly stopped	Tool was overburdened	Get rid of the problem causing the overburden.
	The battery is overheated.	Let the battery cool down.
	The trigger switch was held down for 5 minutes or more.	This is not a malfunction. The motor was automatically stopped to prevent failure of the tool.
Tool sockets - can't be attached - fall off - can't be removed	The shape of the attachment portion doesn't match	Be sure to use 12.7 mm square drive sockets.
Switch can't be pulled	Pushing button is positioned halfway	Press the button firmly into position for the desired direction of rotation.
An abnormal high-pitched noise occurs when the trigger switch is pulled.	The trigger switch is being pulled only slightly.	This is not a malfunction. It does not occur if the trigger switch is pulled more fully.
Battery cannot be installed	Attempting to install a battery other than that specified for the tool.	Please install a multi volt type battery.

SELECTING ACCESSORIES


Select accessories that are suited to a specific task.
For details contact HiKOKI Authorized Service Center.

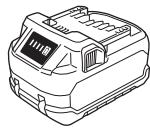


BSL36..18..
Battery

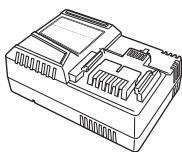


UC18YSL3
(14.4 V-18 V)
Charger

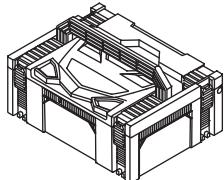


Part Number: 336471
Case (Stackable)

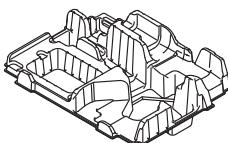

Part Number: 380300
Inner tray

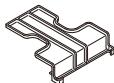

Part Number: 329897
Battery cover

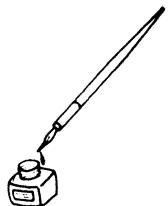

服务中心
高壹工机商业(上海)有限公司
上海市闵行区召楼路3576号5幢

制造商
广东高壹工机有限公司
广东省广州市番禺区化龙镇工业路富裕围工业村

Koki Holdings Co., Ltd.

504
编号: C99753421 G
发行日期: 2025年4月
中国印刷